



# AUDIO DVD-AVX 2-DIN

## OWNERS MANUAL



Please read this manual for proper operation and keep it for future reference.

## CONTENTS

IMPORTANT SAFETY INFORMATION	2
BEFORE USE	3
BASIC OPERATIONS	5
Buttons overview	
Remote control	
Operations using the steering switch	
BASIC SETTINGS	14
Clock settings	
System settings	
Audio settings	
Display settings	
RADIO	19
CD	20
USB	22
iPod	24
AUX	26
BLUETOOTH®	26
REFERENCES	31
TROUBLESHOOTING	32
SPECIFICATIONS	34
SOFTWARE LICENSE AGREEMENT	35
IMPORTANT NOTICE	37

### In case of trouble

Should this product fail to operate properly, contact your dealer or nearest authorised Toyota Service Station.

### How to read this manual

- Operations are explained mainly using buttons on the touch panel of models with Bluetooth features (left-hand drive model).
- The displays shown in the examples may differ from actual displays, which may be changed without notice for performance and function improvements.
- English indications are used for the purpose of explanation. You can select the display language from the [FUNCTION] menu. (→ 15)
- [XX] indicates the selected items.
- (→ XX) indicates references are available on the stated page.

## IMPORTANT SAFETY INFORMATION

For safety reasons, this owner's manual indicates items requiring particular attention with the following marks.

### ⚠ WARNING

- This is a warning against anything which may cause death or serious injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of death or serious injury to yourself and others.

### ⚠ CAUTION

- This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

### Precautions

#### IMPORTANT

To ensure proper use, please read through this manual before using this product. It is especially important that you read and observe WARNINGS and CAUTIONS in this manual. Please keep the manual in a safe and accessible place for future reference.

### ⚠ WARNING

#### ■ To prevent injury or fire, take the following precautions:

- To prevent a short circuit, never put or leave any metallic objects (such as coins or metallic tools) inside the unit.
- Do not watch or fix your eyes on the unit's display when you are driving for any extended period.
- Do not operate the unit while driving. If you need to operate the unit while driving, be sure to look around carefully.
- Do not attempt to install or service this product by yourself. Installation or servicing of this product by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock, injury or other hazards.
- Do not allow this product to come into contact with liquids. Electrical shock could result. Also, damage to the product, smoke, and overheating could result from contact with liquids.
- If liquid or foreign matter should get inside this product, stop your vehicle in a safe place, turn the ignition switch off (ACC OFF) immediately and consult your dealer or the nearest authorized Toyota Service Station. Do not use this product in this condition because doing so may result in a fire, electric shock, or other failure.

## IMPORTANT SAFETY INFORMATION

- If you notice smoke, a strange noise or odor from this product, or any other abnormal signs on the LCD screen, turn off the power immediately and consult your dealer or the nearest authorized Toyota Service Station. Using this product in this condition may result in permanent damage to the system.
- Do not disassemble or modify this product, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorized Toyota Service Station for internal inspection, adjustments or repairs.



This symbol on the product means there are important operating and maintenance instructions in this manual.  
Be sure to carefully read instructions in this manual.

## BEFORE USE

### ■ Before removing the vehicle battery

The information is erased by disconnecting the power cable from the battery (or removing the battery itself). Some of the settings and recorded contents will not be reset.

### ■ Cleaning the unit

If the faceplate of this unit is stained, wipe it with a dry soft cloth such as a silicon cloth. If the faceplate is stained badly, wipe it with a cloth moistened with neutral cleaner, then wipe it again with a clean soft dry cloth.

#### NOTE

Applying spray cleaner directly to the unit may damage its mechanical parts. Wiping the faceplate with a hard cloth or using a volatile liquid such as thinner or alcohol may scratch the surface or erase the screened print.

### ■ Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with a sharp tip.
- If you stick a film screen protector on the screen, it may interfere with touch panel operation.

### ■ Touch panel

- The sensitivity of the touch panel decreases if a screen protector is installed.
- The buttons illumination and display illumination automatically dim when the car's headlights are turned on or when the vehicle sensor detected the surrounding light levels are low.  
If you turn on the car's headlights or when the vehicle sensor detected the surrounding light levels are low when the unit is turned off, the buttons illumination automatically dim.
- Direct sunlight may affect the visibility of the display window and its contents.
- Reflection may be occurred which caused by the polished display.

 
### ■ Lens fogging

When you turn on the car heater in cold weather, dew may form on the lens in the disc player of the unit due to condensation. This condensation on the lens (also called lens fogging) may not allow discs to play. In such a situation, remove the disc and wait for the dew to evaporate.

## BEFORE USE

### ■ Precautions on handling discs

- Do not touch the recording surface of the disc.
- Do not stick tape etc. on the disc, or use a disc with tape stuck on it.
- Do not use disc type accessories.
- Clean the disc from the center toward the outside rim.
- When removing a disc from this unit, pull it out horizontally.
- If the disc center hole or outside rim has burrs, use the disc only after removing the burrs with a ballpoint pen etc.
- Discs that are not round cannot be used.

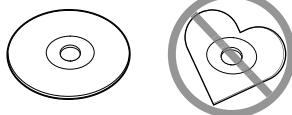

- 8-cm (3 inch) discs cannot be used.
- Discs with coloring on the recording surface or discs that are dirty cannot be used.
- This unit can only play the following types of CDs.



- This unit may not correctly play discs which do not have the mark.
- You cannot play a disc that has not been finalized. (For the finalization process, see your writing software and your recorder's instruction manual.)

### ■ About radio band

- You can register AM/FM radio frequencies to the preset buttons which allows to recall the registered station easily.

### ■ About USB devices

- This unit cannot support a USB device connected via a USB hub.
- Connecting a cable whose total length is longer than 5 m may result in abnormal playback.
- This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1.0 A.

### ■ About iPod/iPhone

- The models which have the Lightning port can be connected to this unit.
- Depending on the version of the operating system of the iPod/iPhone, some functions may not operate on this unit.

### ■ About Bluetooth


- Depending on the Bluetooth version of the device, some Bluetooth devices may not be able to connect to this unit.
- Signal conditions vary, depending on the surroundings.

## BASIC OPERATIONS


### Buttons overview

#### 2Din CD Premium Audio (Models with Bluetooth features)

Left-hand drive model:

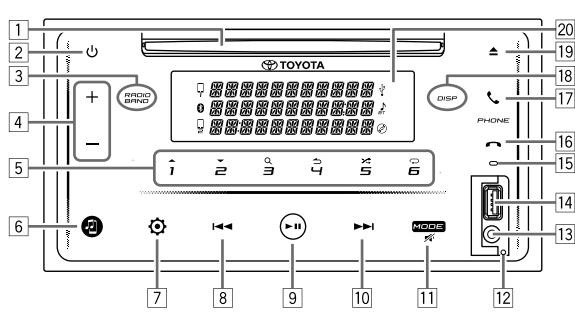

Right-hand drive model:

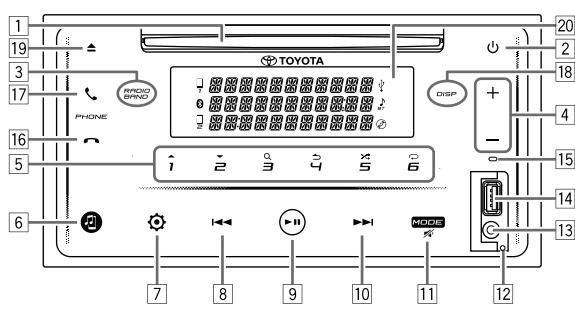

No.	Part	Operation	Function
1	Disc loading slot		Insert a disc.
2	⊕	To turn on/off the power	Touch the button to turn on the power. (When the ignition switch is in ON or ACC only.) • Touch and hold the button to turn off the power.
3	RADIO BAND	To select RADIO source To select radio band	Touch the button to select RADIO source. Touch the button to select radio band (FM1/FM2/AM) while in RADIO source.
4	+ / -	To adjust the volume	Touch button + or button - to adjust the volume. • Touch and hold button + to continuously increases the volume to 25.
5	1 to 6 1▲/2▼ 3Q 4⬅ 5➡ 6➡	To enter number selection To make selection To enter search mode To return to previous setting item To select random playback mode To select repeat playback mode	Touch button 1 to 6 to enter number selection directly. Touch the button to make selection. Touch the button to enter search mode. Touch the button to return to previous setting item. Touch the button to select random playback mode. Touch the button to select repeat playback mode.
6	BT	To select BT AUDIO source	Touch the button to select BT AUDIO source.
7	⚙	To enter [FUNCTION] menu	Touch the button to enter [FUNCTION] menu.


## BASIC OPERATIONS

No.	Part	Operation	Function
8	◀◀	To select an item or move to left position To reverse	Touch the button to select an item or to move to left position. Touch and hold the button to reverse a track/file.
		To search for a RADIO station	Touch the button to search for a station manually while in RADIO source. • Touch and hold the button to search for a station automatically.
9	▶▶	To play or pause To confirm selection	Touch the button to play or pause a track/file. Touch the button to confirm the selection.
10	▶▶	To select an item or move to right position To fast-forward	Touch the button to select an item or to move to right position. Touch and hold the button to fast-forward a track/file.
		To search for a RADIO station	Touch the button to search for a station manually while in RADIO source. • Touch and hold the button to search for a station automatically.
11	MODE	To select a playback source To mute the sound	Touch the button repeatedly to select your desired playback source. Touch and hold the button to mute the sound. • Touch and hold again to restore the previous volume.
12	Reset button	To reset the unit	Press using a sharp object to reset the unit. • Your preset adjustments will also be erased except stored radio stations.
13	Auxiliary input jack		Connect a portable audio player.
14	USB input terminal		Connect a USB device.
15	Built-in microphone		Speak via Bluetooth hands-free mode when a Bluetooth phone is connected. Speak the name of the contact you want to call or the voice command to control the phone functions when a Bluetooth phone is connected and [VOICE CONTROL] is activated.
16	📞	To end or reject a call	Touch the button to end or reject a call when a Bluetooth phone is connected.
17	📞	To answer a call	Touch the button to answer a call when a Bluetooth phone is connected.
18	DISP	To turn off illumination	Touch the button to turn off all the illumination on the touch panel. • See also "How to turn on the illumination on the touch panel" on page 9.
19	▲	To eject a disc	Touch the button to eject a disc.
20	Display window		Display the playback information or settings you made.


## BASIC OPERATIONS

### 2Din CD Basic Audio (Models without Bluetooth features)

Left-hand drive model:

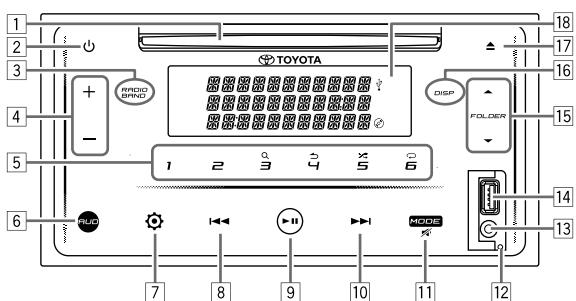

Right-hand drive model:

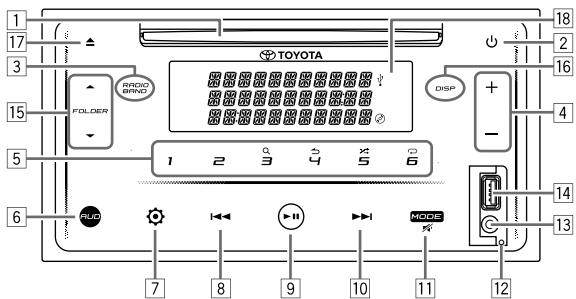

No.	Part	Operation	Function
1	Disc loading slot		Insert a disc.
2	⊕	To turn on/off the power	Touch the button to turn on the power. (When the ignition switch is in ON or ACC only.) • Touch and hold the button to turn off the power.
3	<b>RADIO BAND</b>	To select RADIO source To select radio band	Touch the button to select RADIO source. Touch the button to select radio band (FM1/FM2/AM) while in RADIO source.
4	+ / -	To adjust the volume	Touch button + or button - to adjust the volume. • Touch and hold the button + to continuously increases the volume to 25.
5	1 to 6	To enter number selection	Touch button 1 to 6 to enter number selection directly.
	3 ↗	To enter search mode	Touch the button to enter search mode.
4 ↙	To return to previous setting item		Touch the button to return to previous setting item.
5 ↗	To select random playback mode		Touch the button to select random playback mode.
6 ↘	To select repeat playback mode		Touch the button to select repeat playback mode.
6	<b>AUD</b>	To enter [AUDIO CONTROL] menu	Touch the button to enter [AUDIO CONTROL] menu.
7	⚙	To enter [FUNCTION] menu	Touch the button to enter [FUNCTION] menu.

## BASIC OPERATIONS

No.	Part	Operation	Function
8	◀◀	To select an item or move to left position To reverse	Touch the button to select an item or move to left position. Touch and hold the button to reverse a track/file.
		To search for a RADIO station	Touch the button to search for a station manually while in RADIO source. • Touch and hold the button to search for a station automatically.
9	▶▶	To play or pause To confirm selection	Touch the button to play or pause a track/file. Touch the button to confirm the selection.
10	▶▶	To select an item or move to right position To fast-forward	Touch the button to select an item or move to right position. Touch and hold the button to fast-forward a track/file.
		To search for a RADIO station	Touch the button to search for a station manually while in RADIO source. • Touch and hold the button to search for a station automatically.
11	MODE	To select a playback source To mute the sound	Touch the button repeatedly to select your desired playback source. Touch and hold the button to mute the sound. • Touch and hold again to restore the previous volume.
12	Reset button	To reset the unit	Press using a sharp object to reset the unit. • Your preset adjustments will also be erased except stored radio stations.
13	Auxiliary input jack		Connect a portable audio player.
14	USB input terminal		Connect a USB device.
15	FOLDER▲ / FOLDER▼	To make selection	Touch the button to make selection.
16	DISP	To turn off illumination	Touch the button to turn off all the illumination on the touch panel. • See also "How to turn on the illumination on the touch panel" on page 9.
17	▲	To eject a disc	Touch the button to eject a disc.
18	Display window		Display the playback information or settings you made.


## BASIC OPERATIONS

### ■ How to turn on the illumination on the touch panel


Touch any button on the touch panel to turn on the illumination. (Available for all models.)

#### 2Din CD Premium Audio (Models with Bluetooth features)

Left-hand drive model:

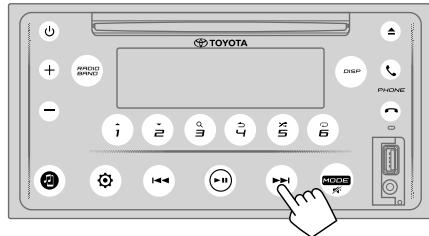


Right-hand drive model:

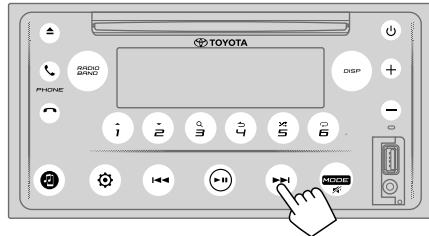


#### 2Din CD Basic Audio (Models without Bluetooth features)

Left-hand drive model:

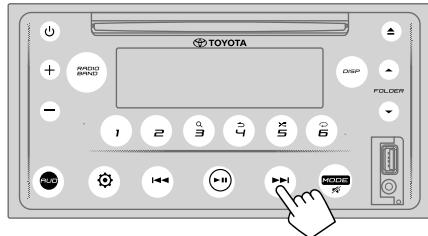

Right-hand drive model:

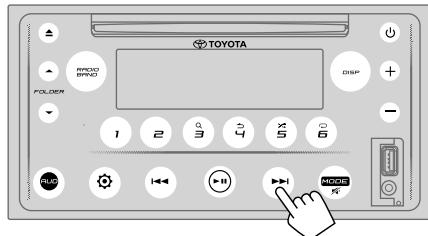

While the illumination is off...

- The illumination on the touch panel turn on automatically for 5 seconds when a disc is inserted or a USB device is plugged-in.
- The illumination on the touch panel turn on automatically while receiving signals from FM broadcast and turn off automatically when ended.
- The illumination on the touch panel turn on automatically while calling, receiving calls or talking via Bluetooth hands-free mode and turn off automatically when the conversation ended.
- When using remote control or steering switch to operate, the illumination on the touch panel turn on for 5 seconds and turn off automatically except for volume buttons.

## BASIC OPERATIONS

### Remote control

This unit can be operated using the remote control.  
Note: Remote Control is optional which may not be supplied in some vehicles.

### ⚠ WARNING

- Do not ingest the battery, Chemical Burn Hazard  
The remote control supplied with this product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.  
Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.  
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

### ⚠ CAUTION

- Put the remote control in a place where it will not move during braking or other operations.  
A dangerous situation could result, if the remote control falls down and gets wedged under the pedals while driving.
- Risk of fire or explosion if the battery is replaced by an incorrect type. Ensure to replace only with the same type.
- Risk of fire, explosion or the leakage of flammable liquid or gas if the battery is left in an extremely high temperature surrounding environment and/or subjected extremely low air pressure. The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Risk of fire, explosion or the leakage of flammable liquid or gas if the battery is disposed into fire or a hot oven, recharged, shorted, mechanically crushed or cut off the battery.
- If spilled fluid comes in contact with your eyes or on clothing, immediately rinse with water and consult a physician.


### Using the remote control

Point the remote control in the direction of the touch panel to operate.


- The remote control may not function properly in direct sunlight.

### IMPORTANT

- Do not store the remote control in high temperatures or direct sunlight.
- Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal.

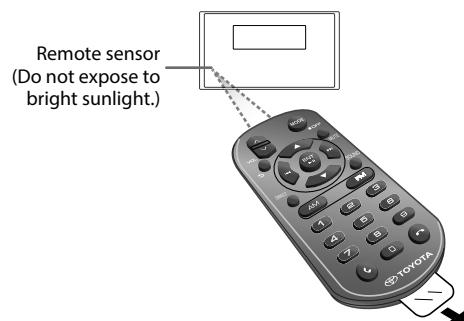


### How to replace the battery

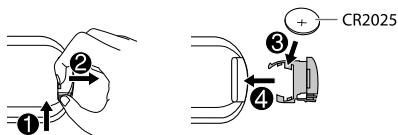

## BASIC OPERATIONS

### Buttons overview

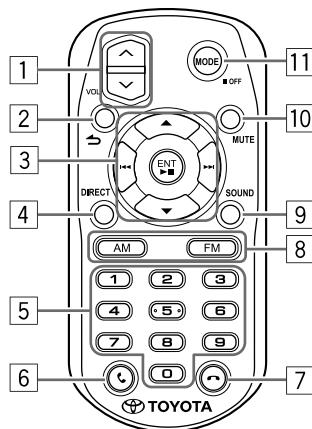


No.	Part	Operation	Function
1	<b>VOL ▲/▼</b>	To adjust the volume	Press <b>VOL ▲</b> or <b>VOL ▼</b> to adjust the volume. • Press and hold <b>VOL ▲</b> to continuously increase the volume to 25.
2	◀	To return to previous setting item	Press the button to return to previous setting item.
3	<b>ENT ▶ II</b>	To play or pause To confirm selection	Press the button to play or pause a track/file. Press the button to confirm the selection.
4	◀◀ / ▶▶	To select an item	Press the button to select an item.
		To reverse or fast-forward	Press and hold the button to reverse or fast-forward a track/file.
		To search for a RADIO station	• Press and hold the button to search for a station automatically while in RADIO source. • Press the button to select a preset station while in RADIO source.
	▲/▼	To make selection	Press the button to make selection.
5	<b>DIRECT</b>	To enter Direct Access Tuning / Direct Music Search	Press the button to enter Direct Access Tuning / Direct Music Search.
6	<b>0 to 9</b>	To enter number selection	Press the button to enter number selection directly.
		To enter preset station number	Press the button <b>1</b> to <b>6</b> to enter preset station number.
7	📞	To answer a call	Press the button to answer a call when a Bluetooth phone is connected.
8	📞	To end or reject a call	Press the button to end or reject a call when a Bluetooth phone is connected.
9	<b>AM / FM</b>	To select FM / AM band	Press the button to select FM1/FM2/AM band.
10	<b>MUTE</b>		
11	<b>MODE</b>		

## BASIC OPERATIONS

No.	Part	Operation	Function
9	<b>SOUND</b>	To enter [AUDIO CONTROL] menu	Press the button to enter [AUDIO CONTROL] menu.
10	<b>MUTE</b>	To mute the sound	Press the button to mute the sound. • Press the button again to restore the previous volume.
11	<b>MODE</b>	To turn on/off the power  To select a playback source	Press the button to turn on the power. (When the ignition switch is in ON or ACC only.) • Press and hold the button to turn off the power.  Press the button repeatedly to select your desired playback source. (When the power is on.)

### Operations using the steering switch

- This unit can be operated using the steering switch.
- Steering wheel control function is varied depends on vehicle and vehicle grade.

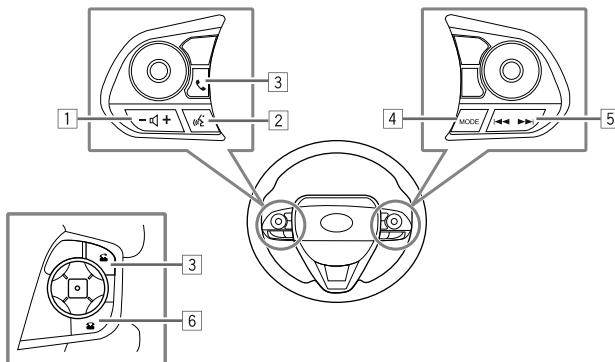

No.	Part	Operation	Function	2Din CD Audio	
				Basic	Premium
1	🔊 +/−	To adjust the volume	Press + / – to adjusts the volume. • Press and hold + to continuously increase the volume to 25. • Press and hold – to continuously decrease the volume.	Available	Available
2	🎙	To start or end voice recognition	When a Bluetooth phone is connected... • Press to start voice recognition. • Press and hold to end voice recognition.	Not available	Available
3	📞/📞	To answer a call	When there is an incoming call... • Press to answer a call. • Press and hold to reject a call.  While talking... • Press to put on hold or release the current call. • Press and hold to end a call.  While talking on the first incoming call... • Press to hold the current call and answer another incoming call.  While dialing... • Press and hold to cancel a call.	Not available	Available

## BASIC OPERATIONS



No.	Part	Operation	Function	2Din CD Audio	
				Basic	Premium
4	<b>MODE</b>	To select a playback source	Press the button repeatedly to select your desired playback source.	Available	Available
		To mute the sound	Press and hold the button to mute the sound. • Press and hold again to restore the previous volume.		
5		To reverse or fast-forward	Press the button to forward/reverse select the track, file or chapter.	Available	Available
		To search for a RADIO station	• Press and hold the button to search for a radio station automatically while in RADIO source. • Press the button to select a preset station while in RADIO source.		
6		To end or reject a call	When there is an incoming call... • Press to reject a call.  While talking... • Press to end a call.  While dialing... • Press to cancel a call.	Not available	Available

The functions and appearance vary depending on the car model.


### Note

- Voice Recognition button will work depends on the phone settings when mobile device is connected via Bluetooth. If the command is recognised by the connected Bluetooth device, it will operate according to the voice command. Voice Recognition is for call purpose only.

## BASIC SETTINGS

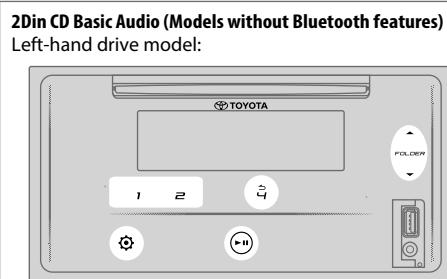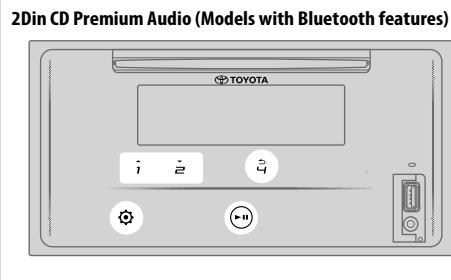

Right-hand drive model:

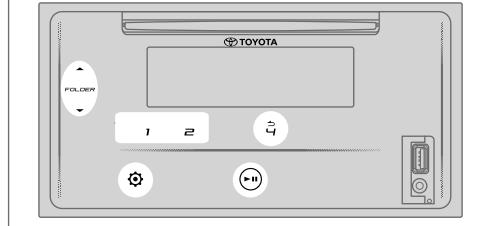

### Clock settings

#### Set the clock

- 1 Touch to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [CLOCK SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [TIME SET], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to set the hour, then touch  $\blacktriangleright \text{II}$  to confirm.
- 5 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to set the minute, then touch  $\blacktriangleright \text{II}$  to confirm.
- 6 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [TIME FORMAT], then touch  $\blacktriangleright \text{II}$ .
- 7 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [12H] or [24H], then touch  $\blacktriangleright \text{II}$  to confirm.
- 8 Touch to exit.

To return to the previous setting item, touch **4** .

#### Set the time display

- 1 Touch to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [CLOCK SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [TIME DISPLAY], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [ON] (default) to turn on the clock display on all sources. (or)  
Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [OFF] to turn off the clock display on all sources.
- 5 Touch  $\blacktriangleright \text{II}$  to confirm.
- 6 Touch to exit.

To return to the previous setting item, touch **4** .

## BASIC SETTINGS

### System settings

#### Set the keytouch tone

- 1 Touch  to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [SYSTEM SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [KEY BEEP], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [ON] or [OFF].  
[ON] (default): Activates the keytouch tone.  
[OFF]: Deactivates the keytouch tone.
- 5 Touch  $\blacktriangleright \text{II}$  to confirm.
- 6 Touch  to exit.

To return to the previous setting item, touch .

#### Select the language

- 1 Touch  to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [SYSTEM SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [LANGUAGE SELECT], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select the below display language for [FUNCTION] menu and music information if applicable.  
[ENGLISH] (default) / [PORTUGUES] / [BAHASA INDONESIA] / [BAHASA MALAYSIA] / [ESPAÑOL]
- 5 Touch  $\blacktriangleright \text{II}$  to confirm.
- 6 Touch  to exit.

To return to the previous setting item, touch .

### Audio settings

#### Select a preset equalizer

- 1 Touch  to enter [FUNCTION].
  - For 2Din CD Basic Audio, touching **AUD** enters [AUDIO CONTROL] menu directly.
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [AUDIO CONTROL], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [PRESET EQ], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select a preset equalizer suitable to the music genre, then touch  $\blacktriangleright \text{II}$  to confirm.
  - [FLAT] (default) / [POP] / [R&B] / [JAZZ] / [CLASSICAL] / [HARD ROCK] / [C-SUV H/B] / [SEDAN] / [MPV] / [SUV PU] / [VAN] / [USER]
  - Select [USER] to use the settings made in [MANUAL EQ].
  - The [PRESET EQ] is optimized for each vehicle type (Sedan / C-SUV, compact SUV / H/B, Hatchback / MPV / SUV PU, Pick Up Truck / Van) and produce clean, distortion-free natural sound at any listening level.
- 5 Touch  to exit.

To return to the previous setting item, touch .

#### Adjust the bass boost

- 1 Touch  to enter [FUNCTION].
  - For 2Din CD Basic Audio, touching **AUD** enters [AUDIO CONTROL] menu directly.
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [AUDIO CONTROL], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [BASS BOOST], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select your preferred bass boost level ([LEVEL1] to [LEVEL5]), or select [OFF] (default) to cancel.
- 5 Touch  $\blacktriangleright \text{II}$  to confirm.
- 6 Touch  to exit.

To return to the previous setting item, touch .

## BASIC SETTINGS

### ■ Adjust the rear and front speaker output balance

- 1 Touch  to enter [FUNCTION].
  - For 2Din CD Basic Audio, touching **AUD** enters [AUDIO CONTROL] menu directly.
- 2 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [AUDIO CONTROL], then touch .
- 3 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [FADER SETTING], then touch .
- 4 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to adjust the setting, then touch  to confirm.  
[POS R15] to [POS F15] (default: [POS 0])
- 5 Touch  to exit.

To return to the previous setting item, touch .

### ■ Adjust the left and right speaker output balance

- 1 Touch  to enter [FUNCTION].
  - For 2Din CD Basic Audio, touching **AUD** enters [AUDIO CONTROL] menu directly.
- 2 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [AUDIO CONTROL], then touch .
- 3 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [BALANCE SETTING], then touch .
- 4 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to adjust the setting, then touch  to confirm.  
[POS L15] to [POS R15] (default: [POS 0])
- 5 Touch  to exit.

To return to the previous setting item, touch .

### ■ Adjust the sound effect settings

- 1 Touch  to enter [FUNCTION].
  - For 2Din CD Basic Audio, touching **AUD** enters [AUDIO CONTROL] menu directly.
- 2 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [AUDIO CONTROL], then touch .
- 3 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [SOUND EFFECT], then touch .
- 4 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [K2 TECHNOLOGY], then touch .
- 5 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [ON] or [OFF].  
[ON] (default): Creates realistic sound by compensating the high-frequency components and restoring the rise-time of the waveform that are lost in audio data compression.  
[OFF]: Cancels.
  - Not applicable for RADIO source and AUX source.
- 6 Touch  to confirm.
- 7 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [SPACE ENHANCEMENT], then touch .
- 8 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to make one of the following selection.  
[SMALL] / [MEDIUM] / [LARGE]: Virtually enhances the sound space.  
[OFF] (default): Cancels.
  - Not applicable for RADIO source.
- 9 Touch  to confirm.

- 10 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [SOUND LIFT], then touch .

- 11 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to make one of the following selection.  
[LOW] / [MIDDLE] / [HIGH]: Virtually adjust the sound position heard from the speakers.  
[OFF] (default): Cancels.

- 12 Touch .

- 13 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [AUTO SOUND LEVEL], then touch .

- 14 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [ON] or [OFF].  
[ON] (default): Boosts the frequency to reduce the noise heard from outside the car or running noise of the tyres.  
[OFF]: Cancels.

- 15 Touch .

- 16 Touch  to exit.

To return to the previous setting item, touch .

### ■ Adjust the equalizer manually

Before making an adjustment, select the source you want to adjust.

- 1 Touch  to enter [FUNCTION].
  - For 2Din CD Basic Audio, touching **AUD** enters [AUDIO CONTROL] menu directly.
- 2 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [AUDIO CONTROL], then touch .
- 3 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [PRO MODE], then touch .
- 4 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [MANUAL EQ], then touch .
- The sound elements (frequency level, tone level, Q factor) are preset into each selection.
- 5 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select a frequency you want to adjust, then touch   
[62.5HZ] / [100HZ] / [160HZ] / [250HZ] / [400HZ] / [630HZ] / [1KHZ] / [1.6KHZ] / [2.5KHZ] / [4KHZ] / [6.3KHZ] / [10KHZ] / [16KHZ]
- 6 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to adjust the level to memorize for each source, then touch  to confirm.  
[LEVEL -9] to [LEVEL +9], (default: [LEVEL 0])
- 7 Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [Q FACTOR SETTING] to adjust the quality factor, then touch   
[1.35] / [1.50] (default) / [2.00]
- 8 Touch  to exit.

To return to the previous setting item, touch .

## BASIC SETTINGS

### Set the digital time alignment

Digital Time Alignment sets the delay time of the speaker output to create a more suitable environment for your vehicle.


- For more information, [Determining the value for \[DISTANCE\] and \[GAIN\] of \[DTA SETTINGS\]](#).

- Touch  to enter [FUNCTION].
  - For 2Din CD Basic Audio, touching **AUD** enters [AUDIO CONTROL] menu directly.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [AUDIO CONTROL], then touch **▶ II**.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [PRO MODE], then touch **▶ II**.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [DTA SETTINGS], then touch **▶ II**.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [POSITION], then touch **▶ II**.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select your listening position (reference point), then touch **▶ II** to confirm.
  - [ALL] (default): Not compensating;
  - [FRONT RIGHT]: Front right seat;
  - [FRONT LEFT]: Front left seat;
  - [FRONT ALL]: Front seat
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [DISTANCE], then touch **▶ II**.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to fine adjust the distance to compensate, then touch **▶ II** to confirm.
  - [0CM] (default) to [610CM]
    - Before making adjustment, select the speaker you want to adjust.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [GAIN], then touch **▶ II**.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to fine adjust the output volume of the selected speaker, then touch **▶ II** to confirm.
  - [-8DM] to [0DB] (default)
    - Before making adjustment, select the speaker you want to adjust.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [INITIALIZE SETTINGS], then touch **▶ II**.
- Touch **1▲ / 2▼ or FOLDER▲ / FOLDER▼** to select [YES] or [NO].
  - [YES]: Resets the settings ([DISTANCE] and [GAIN]) of the selected position to default.
  - [NO] (default): Cancels.
- Touch **▶ II** to confirm.
- Touch  to exit.

- Before making an adjustment for [DISTANCE] and [GAIN] of [DTA SETTINGS], select the speaker you want to adjust: [FRONT LEFT] / [FRONT RIGHT] / [REAR LEFT] / [REAR RIGHT]

To return to the previous setting item, touch **4◀**.

### Determining the value for [DISTANCE] and [GAIN] of [DTA SETTINGS]

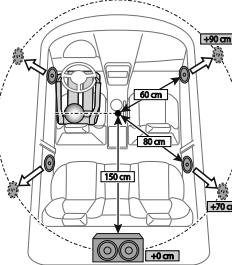

If you specify the distance from the center of the currently set listening position to every speaker, the delay time will be automatically computed and set.

- Determine the center of the currently set listening position as the reference point.
- Measure the distances from the reference point to the speakers.
- Calculate the differences between the distance of the furthest speaker (rear speaker) and other speakers.
- Set the [DISTANCE] calculated in step 3 for individual speakers.
- Adjust [GAIN] for individual speakers.

Example: When [FRONT ALL] is selected as the listening position

## BASIC SETTINGS

### Display settings

#### Adjust the brightness

- 1 Touch  to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [DISPLAY SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [BRTNESS LEVEL], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select your preferred brightness level for display illumination and button illumination, then touch  $\blacktriangleright \text{II}$  to confirm. [LEVEL 0] to [LEVEL 31]
  - The buttons illumination and display illumination automatically dim when the car's headlights are turned on or when the vehicle sensor detected the surrounding light levels are low.  
If you turn on the car's headlights or when the vehicle sensor detected the surrounding light levels are low when the unit is turned off, the buttons illumination automatically dim.
- 5 Touch  to exit.

To return to the previous setting item, touch .

#### Set text scrolling style

- 1 Touch  to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [DISPLAY SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [TEXT SCROLL], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select your preferred display information scrolling style, then touch  $\blacktriangleright \text{II}$  to confirm.  
[AUTO]: The display information scroll automatically.  
[ONCE] (default): The display information scroll only once.  
[OFF]: Cancels.
- 5 Touch  to exit.

To return to the previous setting item, touch .

#### Select illumination color

- 1 Touch  to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [DISPLAY SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [COLOR SELECT], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select your preferred illumination color, then touch  $\blacktriangleright \text{II}$  to confirm.  
[INITIAL COLOR] (default) / [VARIABLE SCAN] /  
[CUSTOM R/G/B] / preset colors\*  
\* [RED1] / [RED2] / [RED3] / [PURPLE1] / [PURPLE2] /  
[PURPLE3] / [BLUE1] / [BLUE2] / [SKYBLUE1] /  
[SKYBLUE2] / [LIGHTBLUE] / [AQUA1] / [AQUA2] / [GREEN1] /  
[GREEN2] / [GREEN3] / [YELLOWGREEN1] / [YELLOWGREEN2] /  
[YELLOW] / [ORANGE1] / [ORANGE2] / [ORANGERED]
  - Avoid setting the color tone which is equivalent to the LCD screen backlight as this may cause low visibility and also danger while driving.
- 5 Touch  to exit.

To return to the previous setting item, touch .

### Make your own color

- 1 Touch  to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [DISPLAY SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [COLOR SELECT], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [CUSTOM R/G/B] to make your own color.
  - The color you have made will be stored in [CUSTOM R/G/B].
  - Avoid setting the color tone which is equivalent to the LCD screen backlight as this may cause low visibility and also danger while driving.
- 5 Touch  $\blacktriangleright \text{II}$  to enter the detailed color adjustment.
- 6 Touch  $\blacktriangleleft / \blacktriangleright$  to select the color (R/G/B) to adjust.
- 7 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to adjust the level (0 to 9), then touch  $\blacktriangleright \text{II}$  to confirm.
- 8 Touch  to exit.

To return to the previous setting item, touch .

### Select display information


- 1 Touch  to enter [FUNCTION].
- 2 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [DISPLAY SETTING], then touch  $\blacktriangleright \text{II}$ .
- 3 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select [DISPLAY MODE], then touch  $\blacktriangleright \text{II}$ .
- 4 Touch  $1\Delta / 2\Delta$  or FOLDER  $\Delta / \nabla$  to select your preferred display information for the following playback source, then touch  $\blacktriangleright \text{II}$  to confirm.
  - USB SOURCE or CD MEDIA SOURCE:  
[TITLE ALBUM] (default) / [FILENAME FOLDER] /  
[PLAY TIME] / [TITLE ARTIST]
  - IPOD SOURCE or BT AUDIO SOURCE:  
[TITLE ALBUM] (default) / [PLAY TIME] / [TITLE ARTIST]
  - CDDA SOURCE:  
[TRK TITLE DISC] (default) / [PLAY TIME] /  
[TRK TITLE ARTIST]
- 5 Touch  to exit.

To return to the previous setting item, touch .


## RADIO

### 2Din CD Premium Audio (Models with Bluetooth features)

Left-hand drive model:

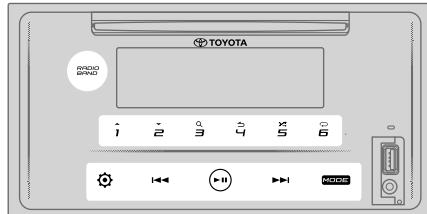


Right-hand drive model:

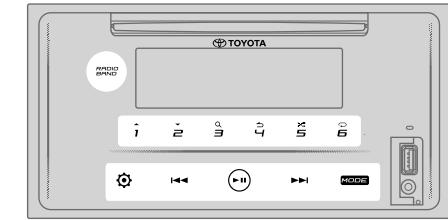


### 2Din CD Basic Audio (Models without Bluetooth features)

Left-hand drive model:

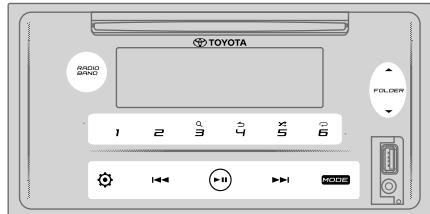

Right-hand drive model:

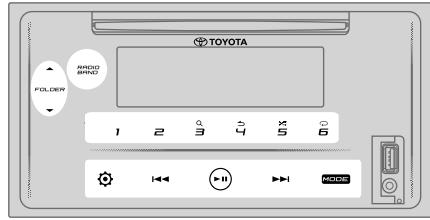

#### Search for a station

- 1 Touch **MODE** repeatedly to select RADIO (or press **MODE** repeatedly on the remote control).
  - While in other sources than RADIO, touching **RADIO BAND** enters RADIO directly.
- 2 Touch **RADIO BAND** repeatedly (or press **FM/AM** on the remote control) to select FM1/FM2/AM.
- 3 Touch **◀◀ / ▶▶** to search for a station manually.  
(or)  
Touch and hold **◀◀ / ▶▶** (or press and hold **◀◀ / ▶▶** on the remote control) to search for a station automatically.
  - To store a station:  
Touch and hold one of the number buttons (**1** to **6**).
  - To select a stored station:  
Touch one of the number buttons (**1** to **6**) (or press one of the number buttons (**1** to **6**) on the remote control / press **◀◀ / ▶▶** on the remote control).

#### Direct Access Tuning (using the remote control)

- 1 Press **DIRECT** to enter Direct Access Tuning.
- 2 Press the number buttons to enter a frequency.
- 3 Press **ENT ▶▶** to search for a station.
  - To cancel, press **◀** or **DIRECT**.
  - If no operation is done for 10 seconds after step **2**, Direct Access Tuning is automatically canceled.


#### Other settings

- 1 Touch **⋮** to enter [FUNCTION].
- 2 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select [RADIO SETTING], then touch **▶▶**.
- 3 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select [AUTO PRESET], then touch **▶▶**.
- 4 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select [YES] or [NO].
  - [YES]: Automatically starts memorizing 6 stations with good reception into the number buttons (**1** to **6**).
  - [NO] (default): Cancels.
- 5 Touch **▶▶** to confirm.
- 6 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select [MONO SET], then touch **▶▶**.
- 7 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select [ON] or [OFF].
  - [ON]: Improves the FM reception, but the stereo effect may be lost.
  - [OFF] (default): Cancels.
- 8 Touch **▶▶** to confirm.
- 9 Touch **⋮** to exit.


To return to the previous setting item, touch **4◀**.

## CD


### 2Din CD Premium Audio (Models with Bluetooth features) Left-hand drive model:

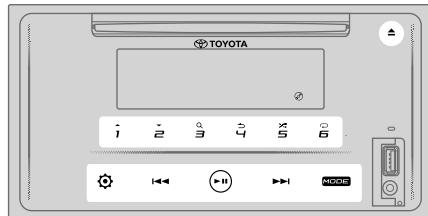


### Right-hand drive model:

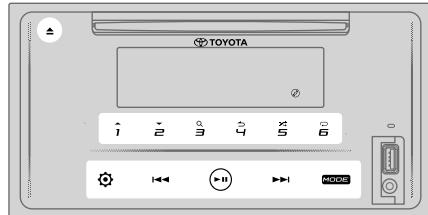


### 2Din CD Basic Audio (Models without Bluetooth features) Left-hand drive model:

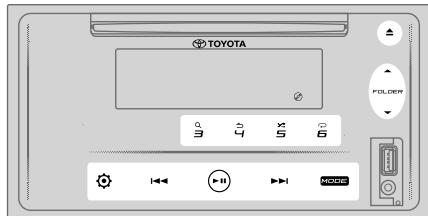

### Right-hand drive model:

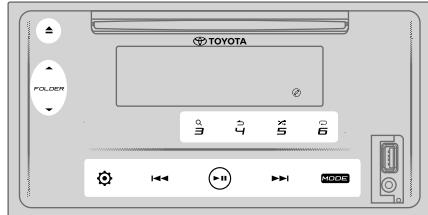

#### Inserting a disc

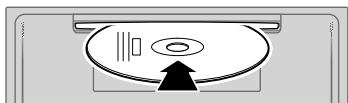 

##### Insert a disc into the disc loading slot.

- The source changes to "CD" and playback starts automatically.
- "" indicator lights up on the display window when a disc is inserted.
- Track number and play time appear on the display window for a few seconds when a disc is inserted. Then, other disc information appear. See [DISPLAY MODE] on page 18 for more information.
- If a disc has already been inserted, touch **MODE** repeatedly (or press **MODE** repeatedly on the remote control) to select "CD" as the playback source.

#### CAUTION

- Do not insert anything other than a disc into the disc loading slot.

#### Note

- When the unit is turned off, disc cannot be removed from the unit.
- Insert only one disc into the disc loading slot at a time.
- Do not use discs with labels or stickers.

#### Ejecting a disc

Touch **▲** to eject a disc.

Remove the disc from the disc loading slot.

#### Pause playback

Touch **▶▷** (or press **ENT ▶▷** on the remote control) to pause the playback.

Play time will be displayed and blinking during pause.

#### Track or file up/down

Touch **▶▷** (or press **▶▷** on the remote control) to go to the next track (or file).

Touch **◀◀** (or press **◀◀** on the remote control) to go to the previous track or file.

#### Folder up/down

Touch **1▲** or **FOLDER ▲** to go to the next folder.

Touch **2▼** or **FOLDER ▼** to go to the previous folder.

#### Note

- This function is available only when the disc contains more than one folder.
- This function is not available for Audio CD.

## CD

### Selecting a track or file from the list

- 1 Touch 3 to display the list on the display window.
- 2 Touch 1▲ / 2▼ or FOLDER▲ / FOLDER▼ to select your desired track or file.
- 3 Touch ▶ II to play the selected song.

To return to the previous setting item, touch 4.

### Selecting a file from a folder

- 1 Touch 3 to display the list on the display window.
- 2 Touch 1▲ / 2▼ or FOLDER▲ / FOLDER▼ to select your desired folder, then touch ▶ II to confirm.
- 3 Touch 1▲ / 2▼ or FOLDER▲ / FOLDER▼ to select your desired file.
- 4 Touch ▶ II to play the selected song.

(or using the remote control)

- 1 Press ▲ / ▼ to display the list on the display window.
- 2 Press ▲ / ▼ to go to the next or previous folder.

- To return to the top menu, touch 5.
- To return to the previous setting item, touch 4.
- To cancel, touch and hold 4.

#### Note

- This function is available only when the disc contains more than one folder.

### Direct Music Search (using the remote control)

- 1 Press DIRECT.
- 2 Press the number buttons to enter a track/file number.
- 3 Press ENT ▶ II to search for music.

To cancel, press ▲ or DIRECT.

#### Note

- Not available if Random Play is selected.

### Fast-forward/Fast-reverse

Touch and hold ▶▶ (or press and hold ▶▶ on the remote control) to fast-forward.

Touch and hold ▲◀ (or press and hold ▲◀ on the remote control) to fast-reverse.

### Repeat play

Touch 6 repeatedly to select the repeat playback mode.

Audio CD:

- TRACK REPEAT: Repeats the current track.
- ALL REPEAT: Repeats all the tracks in the current disc.

MP3/WMA/AAC file:

- SONG REPEAT: Repeats the current file.
- FOLDER REPEAT: Repeats all the files in the current folder.
- ALL REPEAT: Repeats all the files in the current disc.

### Random play

Touch 5 repeatedly to select the random playback mode.

Audio CD:

- DISC RANDOM: Plays all tracks in random order.
- RANDOM OFF: Cancels random playback mode.

MP3/WMA/AAC file:

- FOLDER RANDOM: Plays all files in the selected folder in random order.
- ALL RANDOM: Plays all files in random order.
- RANDOM OFF: Cancels random playback mode.



### Set the disc type

While listening to a disc...


- 1 Touch ⌂ to enter [FUNCTION].
- 2 Touch 1▲ / 2▼ or FOLDER▲ / FOLDER▼ to change to [SYSTEM SETTING], then touch ▶ II to select.
- 3 Touch 1▲ / 2▼ or FOLDER▲ / FOLDER▼ to change to [CD READ SETTING], then touch ▶ II to select.
- 4 Touch 1▲ / 2▼ or FOLDER▲ / FOLDER▼ to select an item below, then touch ▶ II to confirm.  
MODE 1 (default): Automatically distinguishes between audio file disc and music CD.;  
MODE 2: Forces to play as a music CD. No sound can be heard if an audio file disc is played.
- 5 Touch ⌂ to exit.

To return to the previous setting item, touch 4.

# USB

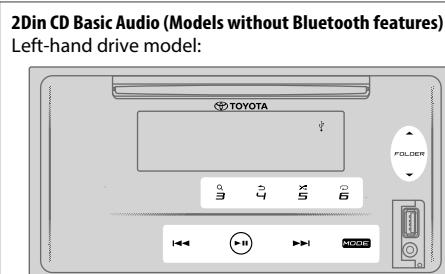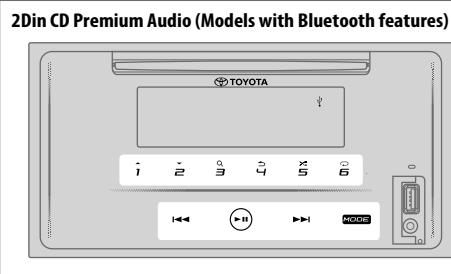


Right-hand drive model:

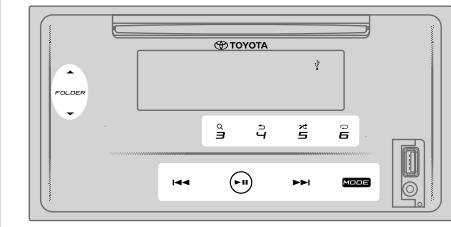

## CAUTION

- This product may not be compatible with all USB mass storage devices. We assume no responsibility for any loss of data on media players, smartphone, or other devices while using this product.
- Install the USB device in the place where it will not affect safe driving.
- Do not place the USB device and the connecting cables in the car to avoid damage by heat.

## Connecting a USB device

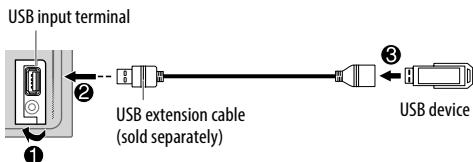

Connect a USB device to the USB input terminal using an USB extension cable.

- The source changes to "USB" and playback starts automatically.
- " indicator lights up on the display window when USB device is connected.
- File number and play time appear on the display window for a few seconds when a USB device is connected. Then, other information appear. See [DISPLAY MODE] on page 18 for more information.
- If a USB device has already been connected, touch **MODE** repeatedly (or press **MODE** repeatedly on the remote control) to select "USB" as the playback source.

## Pause playback

Touch **▶ II** (or press **ENT** **▶ II** on the remote control) to pause the playback.

Play time will be displayed and blinking during pause.

## File up/down

Touch **▶▶◀** (or press **▶▶◀** on the remote control) to go to the next file.

Touch **◀◀▶** (or press **◀◀▶** on the remote control) to go to the previous file.

## Folder up/down

Touch **1▲** or **FOLDER ▲** to go to the next folder.

Touch **2▼** or **FOLDER ▼** to go to the previous folder.

## Note

- This function is available only when the USB device contains more than one folder.

## USB

### Selecting a file from the list

- 1 Touch **3** to display the list on the display window.
- 2 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired file.
- 3 Touch **▶||** to play the selected song.

To return to the previous setting item, touch **4**.

### Selecting a file from a folder

- 1 Touch **3** to display the list on the display window.
  - 2 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired folder, then touch **▶||** to confirm.
  - 3 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired file.
  - 4 Touch **▶||** to play the selected song.
- To return to the top menu, touch **5**.
  - To return to the previous setting item, touch **4**.
  - To cancel, touch and hold **4**.

(or using the remote control)

- 1 Press **▲/▼** to display the list on the display window.
- 2 Press **▲/▼** to go to the next or previous folder.

#### Note

- This function is available only when the USB device contains more than one folder.

### Repeat play

Touch **6** repeatedly to select the repeat playback mode.

MP3/WMA/AAC/WAV/FLAC file:

SONG REPEAT: Repeats the current file.

FOLDER REPEAT: Repeats all the files in the current folder.

ALL REPEAT: Repeats all the files in the current USB device.

### Random play

Touch **5** repeatedly to select the random playback mode.

MP3/WMA/AAC/WAV/FLAC file:

FOLDER RANDOM: Plays all files in the selected folder in random order.

ALL RANDOM: Plays all files in random order.

RANDOM OFF: Cancels random playback mode.

#### NOTE

When connecting to some smartphone via USB, the display shows "NO DEVICE", which means the device is not compatible with this product. (→ 33)

### Direct Music Search (using the remote control)

- 1 Press **DIRECT**.
- 2 Press the number buttons to enter a file number.
- 3 Press **ENT ▶||** to search for music.

To cancel, press **◀** or **DIRECT**.

#### Note

- Not available if Random Play is selected.


### Fast-forward/Fast-reverse

Touch and hold **▶▶** (or press and hold **▶▶** on the remote control) to fast-forward.

Touch and hold **◀◀** (or press and hold **◀◀** on the remote control) to fast-reverse.


## iPod

### 2Din CD Premium Audio (Models with Bluetooth features)

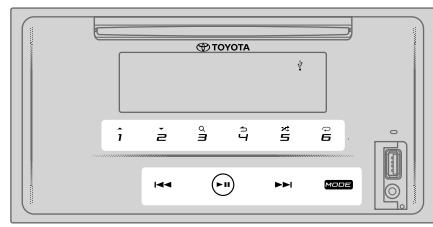


### 2Din CD Basic Audio (Models without Bluetooth features)

Left-hand drive model:

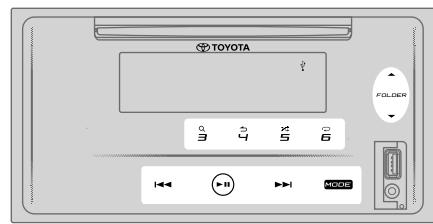


Right-hand drive model:

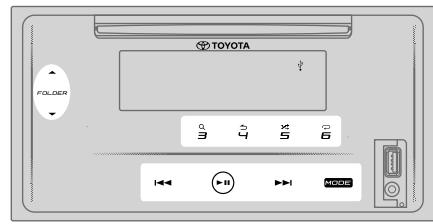

#### CAUTION

- This product may not be compatible with all iPod/iPhone. We assume no responsibility for any loss of data on iPod/iPhone while using this product. Please back up your iPod/iPhone data regularly.
- Install the iPod/iPhone in the place where it will not affect safe driving.
- Do not leave the iPod/iPhone in direct sunlight for extended amounts of time. Extended exposure to direct sunlight can result in iPod/iPhone malfunction due to the resulting high temperature.
- Do not leave the iPod/iPhone in any location with high temperatures.
- Firmly secure the iPod/iPhone when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal.
- Do not place the iPod/iPhone and the connecting cables in the car to avoid damage by heat.

### Connecting an iPod/iPhone

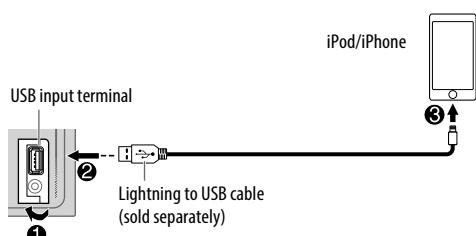

Connect an iPod/iPhone to the USB input terminal using a Lightning to USB cable.

- The source changes to "iPod USB" and playback starts automatically.
- " indicator lights up on the display window when iPod/iPhone is connected.
- File number and play time appear on the display window for a few seconds when an iPod/iPhone is connected. Then, other information appear. See [DISPLAY MODE] on page 18 for more information.
- If an iPod/iPhone has already been connected, touch **MODE** repeatedly (or press **MODE** repeatedly on the remote control) to select "iPod USB" as the playback source.

### Pause playback

Touch **▶||** (or press **ENT ▶||** on the remote control) to pause the playback.

Play time will be displayed and blinking during pause.

### Select control mode

Touch **4◀** repeatedly to select the control mode.

#### MODE ON:

Control iPod/iPhone using the iPod/iPhone itself. However, you can still play/pause, file skip, fast-forward or reverse from this unit.

#### MODE OFF:

Control iPod/iPhone from this unit.

### File up/down

Touch **▶▶|** (or press **▶▶|** on the remote control) to go to the next file.

Touch **|◀|** (or press **|◀|** on the remote control) to go to the previous file.

## iPod

### Selecting a file from a list

- 1 Touch **3** to display the list on the display window.
- 2 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired list, then touch **▶II** to confirm.
- 3 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired file.
- 4 Touch **▶II** to play the selected song.

To return to the previous setting item, touch **4**.

### Selecting a file using alphabet search

If you have many files in the iPod/iPhone, you can search through them quickly according to the first character of the file name.

- 1 Touch **3** to display the list on the display window.
  - 2 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired list.
  - 3 Touch and hold **3** to display the menu for character search on the display window.
  - 4 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired character.  
To search for a character other than A to Z and 0 to 9, enter only “\*”.
  - 5 Touch **|◀◀/▶▶|** to move to the entry position.
    - You can enter up to 3 characters.
  - 6 Touch **▶II** to start searching.
  - 7 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select your desired song.
  - 8 Touch **▶II** to play the selected song.
- To return to the top menu, touch **5**.
  - To return to the previous setting item, touch **4**.
  - To cancel, touch and hold **4**.

#### Note

- This function is applicable only when [MODE OFF] is selected.

### Repeat play

Touch **6** repeatedly to select the repeat playback mode.

SONG REPEAT: Repeats the current file.  
FOLDER REPEAT: Repeats all the files in the current list.  
REPEAT OFF: Cancels repeat playback mode.

### Random play

Touch **5** repeatedly to select the random playback mode.

FOLDER RANDOM: Plays all files in the selected list in random order.  
ALL RANDOM: Plays all files in random order.  
RANDOM OFF: Cancels random playback mode.

### Listen to TuneIn Radio/TuneIn Radio Pro

While listening to TuneIn Radio or TuneIn Radio Pro, connect the iPod/iPhone to the USB input terminal of the unit.

- The unit will output the sound from these applications.

### Fast-forward/Fast-reverse


Touch and hold **▶▶|** (or press and hold **▶▶|** on the remote control) to fast-forward.

Touch and hold **|◀◀** (or press and hold **|◀◀** on the remote control) to fast-reverse.

## AUX

### Start listening

- 1 Connect a portable audio player (commercially available).

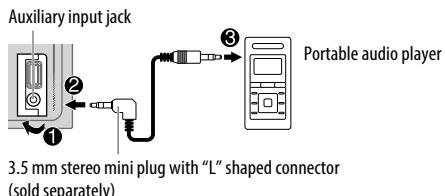

- 2 Touch **MODE** repeatedly to select AUX.
- 3 Turn on the portable audio player and start playback.

#### CAUTION

- Install the audio player in the place where it will not affect safe driving.
- Do not place the audio player and the connecting cable in the car to avoid damage by heat.

### Set the AUX name

While listening to a portable audio player connected to the unit...

- 1 Touch **⌚** to enter [FUNCTION].
- 2 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select [SYSTEM SETTING], then touch **▶ II**.
- 3 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select [AUX NAME SETTING], then touch **▶ II**.
- 4 Touch **1▲ / 2▼** or **FOLDER▲ / FOLDER▼** to select an item, then touch **▶ II**.  
AUX (default)/DVD/PORTABLE/GAME/VIDEO/TV
- 5 Touch **⌚** to exit.

To return to the previous setting item, touch **4◀**.

## BLUETOOTH®

(Only for models with Bluetooth features)

#### WARNING

- Certain uses of an iPhone or a smartphone may not be legal while driving in your jurisdiction, so you must be aware of and obey any such restrictions.
- If in doubt as to a particular function, only perform it while the car is parked.
- No feature should be used unless it is safe to do so under the driving conditions you are experiencing.

Depending on the operating system and the firmware version of your mobile phone, some Bluetooth features may not work with this unit.

### BLUETOOTH — Connection

Bluetooth devices can be connected without cables and communicate with each other

#### Supported Bluetooth profiles

- Hands-Free Profile (HFP)
- Advanced Audio Distribution Profile (A2DP)
- Audio/Video Remote Control Profile (AVRCP)
- Serial Port Profile (SPP)
- Phonebook Access Profile (PBAP)

#### Supported Bluetooth codecs

- Sub Band Codec (SBC)
- Advanced Audio Coding (AAC)

### Pairing a Bluetooth device for the first time

- 1 Touch **⌚** to turn on the unit.
- 2 Search and select "CAR MULTIMEDIA" on the Bluetooth device.  
"PAIRING (Device name)" → "PASS XXXXXX" → "PRESS PLAY/PAUSE" scrolls on the display.
  - For some Bluetooth devices, you may need to enter the Personal Identification Number (PIN) code immediately after searching.
- 3 Touch **▶ II** to start pairing.  
"PAIRING OK" appears when pairing is completed.


"**Bluetooth**" indicator lights up on the display window when Bluetooth connection is established (see the illustration on page 27).

- This unit supports Secure Simple Pairing (SSP).
- Up to 5 devices can be registered (paired) in total.
- Once the pairing is completed, the Bluetooth device will remain registered in the unit even if you reset the unit. To delete the paired device, see [DEVICE DELETE] on page 29.
- A maximum of two Bluetooth phones and one Bluetooth audio device can be connected at any time. If you tried to connect the third phone, "MAXIMUM 2 PHONES CONNECTED" appears.
- Some Bluetooth devices may not automatically connect to the unit after pairing. Connect the device to the unit manually.
- Never turn this unit off while the paired Bluetooth device is being deleted.
- Refer to the instruction manual of the Bluetooth device for more information.


## BLUETOOTH®

### BLUETOOTH — Hands-free

Left-hand drive model:

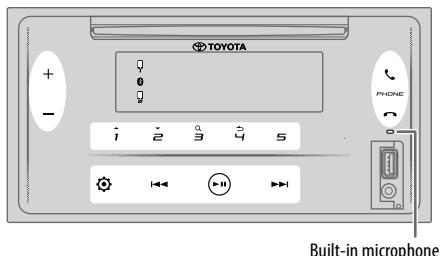

Right-hand drive model:

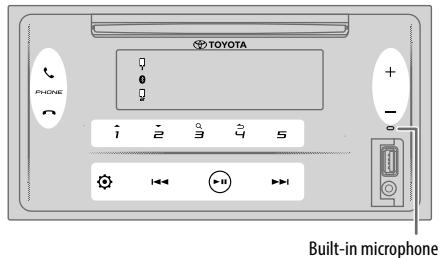

#### Connecting a registered Bluetooth phone

- 1 Touch to enter "BT PHONE SELECT".
- 2 Touch one of the number button (1 to 5) to select a registered Bluetooth phone.
  - The name of the Bluetooth phone will be displayed. The following icons appear in front of the device name to indicate:
    - "\*": Device is connected.
    - ".": Connecting the device.
    - (Blank): Device is disconnected or no operation.If there is no registered phone, "NO DEVICE" appears.
- 3 Touch to connect a registered Bluetooth phone.
- 4 Touch to exit.

**To disconnect a registered Bluetooth phone:** Repeat steps 1 to 4. Select the desired Bluetooth phone to disconnect in step 2.

#### Making a phone call

You can switch between two connected Bluetooth phones by pressing .

#### Using the phonebook

- 1 Touch to enter Hands-free mode.
- 2 Touch / to change to [CONTACTS], then touch to select.
- 3 Touch / to select a name, then touch to confirm.
- 4 Touch / to select a phone number, then touch to call.

If the phonebook contains many contacts, you can search for contacts using alphabet search mode.

- 1 Touch to enter Hands-free mode.
- 2 Touch / to change to [CONTACTS], then touch to select.
- 3 Touch and hold to enter alphabet search mode. The first menu (ABCDEFGHIJKLMN) appears.
  - To go to the other menu (OPQRSTUVWXYZ1\*), touch / .
- 4 Touch / to select the desired first letter, then touch to confirm.
  - Select "/" to search with numbers and select "\*" to search with symbols.
- 5 Touch / to select a name, then touch to confirm.
- 6 Touch / to select a phone number, then touch to call.

To return to the previous setting item, touch .

#### Note

- Applicable only if the phone supports PBAP.
- Depending on the setting of the phone, the phonebook of the connected phone is automatically transferred to the unit when pairing.
- Contacts are categorized as: HOME, OFFICE, MOBILE, OTHER, GENERAL.
- This unit can display only non-accent letters. (Accent letters such as "Ú" is shown as "U".)

#### Using the call history

- 1 Touch to enter Hands-free mode.
- 2 Touch / to change to [CALL HISTORY], then touch to select.
- 3 Touch / to select a name or a phone number.
  - "INCOMING", "OUTGOING", OR "MISSED" is shown to indicate the previous call status.
  - "NO DATA" appears if there is no recorded call history.
- 4 Touch to call.

#### Note

- Applicable only if the phone supports PBAP.

## **BLUETOOTH®**

### **Using the voice recognition**

- 1 Touch  to enter Hands-free mode.
- 2 Touch  /  to change to [VOICE CONTROL], then touch  to select.  
You can also activate the voice recognition of the connected phone by pressing and holding .
- 3 Speak the name of the contact you want to call or the voice command to control the phone functions.

#### **Note**

- Supported Voice Recognition features vary for each phone. Refer to the instruction manual of the connected phone for details.
- This unit also supports the intelligent personal assistant function of iPhone.

### **Answering a phone call**

When there is an incoming call, the unit will ring.

### **Receiving a call**

Touch  (or press  on the remote control) to answer the first incoming call.

While talking on the first incoming call, you can answer another incoming call by touching  (or pressing  on the remote control).

- The first incoming call will be put on-hold.

### **Operation during phone call**

#### **Adjusting the phone volume**

Touch + / - (or press **VOL**  / **VOL**  on the remote control) during a call to adjust the phone volume ([00] to [35]).

- Touching and holding + (or pressing and holding **VOL**  on the remote control) continuously increase the volume to [25].
- This adjustment will not affect the volume of the other sources.
- By default, volume [15] is selected.

#### **Ending or rejecting a call**

Touch  (or press  on the remote control) to end the current call or reject an incoming call.

- While talking on the first incoming call, you can reject another incoming call by touching  (or pressing  on the remote control).
- Touching  (or pressing  on the remote control) while having two active calls will end the current call and activate the held call.

#### **Switching between hands-free mode and private talk mode**

Touch **6** during a call to switch between hands-free mode and private talk mode.

#### **Note**

- Operations may vary according to the connected Bluetooth device.

### **Switching between active calls**

Touch  (or press  on the remote control) to swap between current call and held call.

#### **Adjusting the sensitivity of the microphone**

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [MIC GAIN], then touch  to select.
- 3 Touch  /  to adjust the sensitivity level of the microphone ([LEVEL -10] to [LEVEL +10]).  
The sensitivity of the microphone increases as the number increased.
- 4 Touch  to select the level.
- 5 Touch  to exit.

To return to the previous setting item, touch .

#### **Adjusting the noise reduction level**

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [NR LEVEL], then touch  to select.
- 3 Touch  /  to adjust the noise reduction level ([LEVEL -5] to [LEVEL +5]).  
Adjust the noise reduction level until the least noise is being heard during a phone conversation.
- 4 Touch  to select the level.
- 5 Touch  to exit.

To return to the previous setting item, touch .

#### **Adjusting the echo level**

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [ECHO CANCEL], then touch  to select.
- 3 Touch  /  to adjust the echo cancellation delay time ([LEVEL -5] to [LEVEL +5]).  
Adjust the echo cancellation delay time until the least echo is being heard during a phone conversation.
- 4 Touch  to select the level.
- 5 Touch  to exit.

To return to the previous setting item, touch .

## BLUETOOTH®

### Other settings

#### >Selecting the Bluetooth phone to connect or disconnect

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [BT MODE SETTING], then touch  to select.
- 3 Touch  /  to change to [PHONE SELECT], then touch  to select.
- 4 Touch  /  to select a Bluetooth phone to connect or disconnect, then touch  to confirm. "\*" appears in front of the device name when connected.
- 5 Touch  to exit.

To return to the previous setting item, touch .

#### Note

- You can only connect a maximum of two Bluetooth phones at any time.

#### >Selecting a Bluetooth audio device to connect or disconnect

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [BT MODE SETTING], then touch  to select.
- 3 Touch  /  to change to [AUDIO SELECT], then touch  to select.
- 4 Touch  /  to select a Bluetooth audio device to connect or disconnect, then touch  to confirm. "\*" appears in front of the device name when connected.  
"> appears when the device is connected and playing.
- 5 Touch  to exit.

To return to the previous setting item, touch .

#### Note

- You can only connect a maximum of one Bluetooth audio device at any time.

#### Deleting a Bluetooth device

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [BT MODE SETTING], then touch  to select.
- 3 Touch  /  to change to [DEVICE DELETE], then touch  to select.
- 4 Touch  /  to select a device to delete, then touch  to confirm.
- 5 Touch  /  to select [YES], then touch  to confirm.  
Selecting [NO] will cancel the deleting device feature.
- 6 Touch  to exit.

To return to the previous setting item, touch .

### Changing the PIN code

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [BT MODE SETTING], then touch  to select.
- 3 Touch  /  to change to [CHANGE PIN CODE], then touch  to select.
- 4 Touch  /  to select a number.
- 5 Touch  /  to move the entry position.  
Repeat steps 4 and 5 until you finish entering the PIN code.
- 6 Touch  to confirm.
- 7 Touch  to exit.

To return to the previous setting item, touch .

#### Note

- You can change the PIN code up to 6 digits.
- By default, [0000] is selected.

### Setting the auto reconnect feature

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [BT MODE SETTING], then touch  to select.
- 3 Touch  /  to change to [RECONNECT SETTING], then touch  to select.
- 4 Touch  /  to select [ON] to allow the unit to automatically reconnect when the last connected Bluetooth device is within range.  
Selecting [OFF] will cancel the auto reconnect feature.
- 5 Touch  to confirm.
- 6 Touch  to exit.

To return to the previous setting item, touch .

### Setting the initialize feature

- 1 Touch  to enter [FUNCTION].
- 2 Touch  /  to change to [BT MODE SETTING], then touch  to select.
- 3 Touch  /  to change to [INITIALIZE SETTING], then touch  to select.
- 4 Touch  /  to select [YES] to initialize all the Bluetooth settings (including stored pairing, phonebook, and etc.).  
Selecting [NO] will cancel the initialize setting feature.
- 5 Touch  to confirm.
- 6 Touch  to exit.


To return to the previous setting item, touch .

## BLUETOOTH®

### BLUETOOTH — Audio

- While in BT AUDIO source, you can connect up to five Bluetooth audio devices and switch between these five devices. See "Switch between Bluetooth audio devices" on page 31.
- Depending on the selected phone or Bluetooth audio device, playback may not start automatically.

Operations and display indications may differ according to their availability on the connected device.

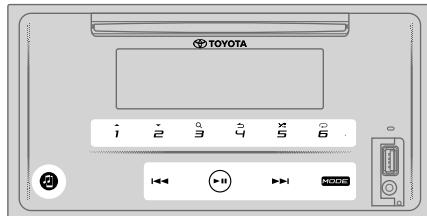

#### Audio player via Bluetooth

- Touch **MODE** repeatedly to select BT AUDIO (or press **MODE** repeatedly on the remote control). Touching enters BT AUDIO directly.
- Operate the audio player via Bluetooth to start playback.

#### File up/down

Touch (or press on the remote control) to go to the next file.

Touch (or press on the remote control) to go to the previous file.

#### Group or folder up/down

Touch to go to the next group or folder.

Touch to go to the previous group or folder.

#### Note

- This function is available depends on your connected Bluetooth audio player and only when the Bluetooth audio player contains more than one group or one folder.

#### Selecting a file from the list

- Touch to display the list on the display window.
- Touch / to select your desired file.
- Touch to play the selected song.

To return to the previous setting item, touch .

#### Selecting a file from a group or folder

- Touch to display the list on the display window.
- Touch / to select your desired group or folder, then touch to confirm.
- Touch / to select your desired file.
- Touch to play the selected song.

- To return to the previous setting item, touch .
- To cancel, touch and hold .

(or using the remote control)

- Press / to display the list on the display window.
- Press / to go to the next or previous folder.

#### Note

- This function is available depends on your connected Bluetooth audio player and only when the Bluetooth audio player contains more than one group or one folder.

#### Pause playback

Touch (or press **ENT** on the remote control) to pause the playback.

Play time will be displayed and blinking during pause.

#### Fast-forward/Fast-reverse

Touch and hold (or press and hold on the remote control) to fast-forward.

Touch and hold (or press and hold on the remote control) to fast-reverse.

#### Repeat play

Touch repeatedly to select the repeat playback mode.

**SONG REPEAT:** Repeats the current file.

**ALL REPEAT:** Repeats all the files in the current drive.

**REPEAT OFF:** Cancels repeat playback mode.

#### Random play

Touch repeatedly to select the random playback mode.

**FOLDER RANDOM:** Plays all files in the selected folder in random order.

**GROUP RANDOM:** Plays all files in the selected group in random order.

**ALL RANDOM:** Plays all files in random order.

**RANDOM OFF:** Cancels random playback mode.

## BLUETOOTH®

### Switch between Bluetooth audio devices

While in BT AUDIO source...

- 1 Touch  to enter "AUDIO SELECT".
- 2 Touch one of the number button (1 to 5) to select a Bluetooth audio device.  
The name of the Bluetooth audio device will be displayed.
- 3 Touch  to connect and play the selected device.

### 4 Repeat step 2 and 3 to change the Bluetooth audio device.

- The following icons appear in front of the device name to indicate:  
"＊": Device is connected and playing (active).  
(Blank): Device is not connected or device is connected but no operation.  
If there is no registered device, "NO DEVICE" appears.

- 5 Touch  to exit.

## REFERENCES

### Playable media and files

You can play various kinds of media and files on this unit.

Media type / standard	Support	Remark
CD	Music CD*	<input type="radio"/>
	CD-ROM	<input type="radio"/>
	CD-R	<input type="radio"/>
	CD-RW	<input type="radio"/>
	DTS CD	<input checked="" type="checkbox"/>
	Video CD (VCD)	<input checked="" type="checkbox"/>
	Super video CD	<input checked="" type="checkbox"/>
	Photo CD	<input checked="" type="checkbox"/>
	CD-EXTRA	<input type="triangle"/>
	HDCD	<input type="triangle"/>
Others disc	CCCD	<input checked="" type="checkbox"/>
	DualDisc	<input checked="" type="checkbox"/>
USB mass storage class device	Super audio CD	<input type="triangle"/>
		<input type="radio"/> MP3 (.mp3), WMA (.wma), AAC (.aac), AAC (.m4a), WAV (.wav), FLAC (.flac)

\* Incompatible with 8 cm (3 inch) discs.

- Playable disc file format: ISO 9660 Level 1/2, Joliet, Long file name
- Playable USB device file system: FAT12, FAT16, FAT32

Even when audio files comply with the standards listed above, playback may be impossible depending on the types or conditions of media or device.

The AAC (.m4a) file in a CD encoded by iTunes cannot be played on this unit.

## TROUBLESHOOTING

If you have problems operating this product, refer to this section. The most common problems are listed below, along with likely causes and solutions. If a solution to your problem cannot be found here, contact your dealer or your nearest Toyota Service Centre.

When problems occur with this product, an error message appears on the display. Refer to the table below to identify the problem, then take the suggested corrective action. There are occasions when you may see error messages other than those shown here. In such a case, follow the instructions given on the display. If the error persists, record the error message and contact your dealer or your nearest Toyota Service Centre.

### In case of trouble

Should this product fail to operate properly, contact your dealer or nearest authorised Toyota Service Station.

	<b>Symptom</b>	<b>Remedy</b>
General	Sound cannot be heard.	<ul style="list-style-type: none"> <li>Adjust the volume to the optimum level.</li> <li>Check the cords and connections.</li> </ul>
	"MISWIRING CHECK WIRING THEN PWR ON" appears.	Turn the power off, then check to be sure the terminals of the speaker wires are insulated properly. Turn the power on again.
	"PROTECT" appears.	Go to the nearest Toyota service center.
	The unit does not work at all.	Reset the unit. (→ 6, 8)
	Correct characters are not displayed.	<ul style="list-style-type: none"> <li>This unit can only display uppercase letters, numbers, and a limited number of symbols.</li> <li>Depending on the display language you have selected (→ 15), some characters may not be displayed correctly.</li> </ul>
Radio	<ul style="list-style-type: none"> <li>Radio reception is poor.</li> <li>Static noise while listening to the radio.</li> </ul>	Connect the antenna firmly.
	Disc cannot be ejected.	Touch and hold ▲ to forcibly eject the disc. Be careful not to drop the disc when it is ejected. If this does not solve the problem, reset the unit. (→ 6, 8)
	Noise is generated.	Skip to another track or change the disc.
	"PLEASE EJECT" appears.	Reset the unit (→ 6, 8). If this does not solve the problem, consult your nearest Toyota service center.
	Playback order is not as intended.	The playback order is determined by the order in which files were recorded (disc) or the file name (USB).
CD/USB/iPod	"READING" keeps flashing.	<ul style="list-style-type: none"> <li>Do not use too many hierarchical levels or folders.</li> <li>Reload the disc or reattach the device (USB/iPod/iPhone).</li> </ul>
	Elapsed playing time is not correct.	This depends on the recording process earlier (disc/USB).
	"UNRESPONSIVE DEVICE" appears.	Make sure the USB device is not malfunction and reattach the USB device.
	"USB HUB IS NOT SUPPORTED" appears.	This unit cannot support a USB device connected via a USB hub.
	<ul style="list-style-type: none"> <li>The source does not change to "USB" when you connect a USB device while listening to another source.</li> <li>"USB ERROR" appears.</li> </ul>	The USB port is drawing more power than the design limit. Turn the power off and unplug the USB device. Then, turn on the power and reattach the USB device. If this does not solve the problem, turn the power off and on (or reset the unit) before replacing with another USB device.
	The iPod/iPhone does not turn on or does not work.	<ul style="list-style-type: none"> <li>Check the connection between this unit and iPod/iPhone.</li> <li>Disconnect and reset the iPod/iPhone using hard reset.</li> </ul>

## TROUBLESHOOTING

Symptom	Remedy
"LOADING" appears when you enter search mode by touching <b>3 Q</b> .	This unit is still preparing the iPod/iPhone music list. It may take some time to load, try again later.
"NO DISC"	Insert a playable disc into the loading slot.
"TOC ERROR"	Make sure the disc is clean and inserted properly.
"NA FILE"	Make sure the media (disc/USB) contains supported audio files. (→ 4, 31)
"COPY PRO"	A copy-protected file is played (disc/USB).
"NO DEVICE"	<ul style="list-style-type: none"> <li>Connect a device (USB), and change the source to USB again.</li> <li>The connected USB device is not compatible with this unit. (→ 4)</li> </ul>
"NO MUSIC"	<ul style="list-style-type: none"> <li>Connect a device (USB) that contains playable audio files.</li> <li>Make sure the file systems are in supported formats (→ 31) and reattach the USB device.</li> </ul>
"iPod ERROR"	<ul style="list-style-type: none"> <li>Reconnect the iPod.</li> <li>Reset the iPod.</li> </ul>
"NO SUPPORT"	<ul style="list-style-type: none"> <li>The connected USB device is not compatible with this unit.</li> </ul>
No Bluetooth device is detected.	<ul style="list-style-type: none"> <li>Search from the Bluetooth device again.</li> <li>Reset the unit. (→ 6, 8)</li> </ul>
Pairing cannot be made.	<ul style="list-style-type: none"> <li>Make sure you have entered the same PIN code to both the unit and Bluetooth device.</li> <li>Delete pairing information from both the unit and the Bluetooth device, then perform pairing again. (→ 26)</li> </ul>
Echo or noise is heard during a phone conversation.	Check the [ECHO CANCEL] setting. (→ 28)
Phone sound quality is poor.	<ul style="list-style-type: none"> <li>Reduce the distance between the unit and the Bluetooth device.</li> <li>Move the car to a place where you can get a better signal reception.</li> </ul>
Voice calling method is not successful.	<ul style="list-style-type: none"> <li>Use voice calling method in a more quiet environment.</li> <li>Reduce the distance from the microphone when you speak the name.</li> <li>Make sure the same voice as the registered voice tag is used.</li> </ul>
Sound is being interrupted or skipped during playback of a Bluetooth audio player.	<ul style="list-style-type: none"> <li>Reduce the distance between the unit and the Bluetooth audio player.</li> <li>Turn off, then turn on the unit and try to connect again.</li> <li>Other Bluetooth devices might be trying to connect to the unit.</li> </ul>
The connected Bluetooth audio player cannot be controlled.	<ul style="list-style-type: none"> <li>Check whether the connected Bluetooth audio player supports Audio/Video Remote Control Profile (AVRCP). (Refer to the instructions of your audio player.)</li> <li>Disconnect and connect the Bluetooth player again.</li> </ul>
"NOT SUPPORT"	The connected phone does not support Voice Recognition feature or phonebook transfer.
"NO ENTRY"/"NO PAIR"/"NO DEVICE"	There is no registered device connected/found via Bluetooth.
"ERROR"	Try the operation again. If "ERROR" appears again, check if the device supports the function you have tried.
"NO INFO"/"NO DATA"	Bluetooth device cannot get the contact information.
"HF ERROR XX"/"BT ERROR"	Reset the unit (→ 6, 8) and try the operation again. If this does not solve the problem, consult your nearest service center.
The Bluetooth connection between the Bluetooth device and the unit is unstable.	Delete the unused registered Bluetooth device from the unit. (→ 29)

## SPECIFICATIONS

Radio	FM Frequency Range	87.5 MHz — 108.0 MHz (50 kHz space)	Only for 2Din CD Premium Audio (models with Bluetooth features)
	Usable Sensitivity (S/N = 30 dB)	-2.0 dB $\mu$	
	Frequency Response ( $\pm 3$ dB)	100 Hz — 10 kHz	
	Signal-to-Noise Ratio (MONO)	58 dB	
	Stereo Separation (1 kHz)	40 dB	
AM	Frequency Range	531 kHz — 1 602 kHz (9 kHz space)	Bluetooth
	Channel Space Selection	Band 1 / 9 kHz	
	Usable Sensitivity (S/N = 20 dB)	30 dB $\mu$	
CD player	Laser Diode	GaAlAs	
	Digital Filter (D/A)	8 times over sampling	
	Spindle Speed	500 rpm — 200 rpm (CLV)	
	Wow & Flutter	Below measurable limit	
	Frequency Response ( $\pm 1$ dB)	31 Hz — 20 kHz	
	Total Harmonic Distortion (1 kHz)	0.02 %	
	Signal-to-Noise Ratio (1 kHz)	85 dB	
	Dynamic Range	80 dB	
	Channel Separation	70 dB	
	MP3 Decode	Compliant with MPEG-1/2 Audio Layer-3	
	WMA Decode	Compliant with Windows Media Audio	
	AAC Decode	AAC-LC ".aac" files	
USB	USB Standard	USB 1.1, USB 2.0 (Full speed)	Audio
	File System	FAT12/16/32	
	Maximum Supply Current	DC 5 V = 1.0 A	
	MP3 Decode	Compliant with MPEG-1/2 Audio Layer-3	
	WMA Decode	Compliant with Windows Media Audio	
	AAC Decode	AAC-LC ".aac", ".m4a" files	
	WAV Decode	Linear-PCM	
Auxiliary	FLAC Decode	FLAC file (Up to 48 kHz/16 bit)	
	Frequency Response ( $\pm 3$ dB)	20 Hz — 20 kHz	
	Input Maximum Voltage	1 000 mV	
	Input Impedance	30 k $\Omega$	
	Operating Voltage	14.4 V (10.5 V — 16 V allowable)	
General	Maximum Current Consumption	10 A	General
	Dimensions (W × H × D)	205.5 mm × 104 mm × 168.5 mm	
	Weight	1.38 kg	

Subject to change without notice.

# SOFTWARE LICENSE AGREEMENT

The software embedded in the Product (hereinafter the "Licensed Software") provided by Licensor is copyrighted to or sublicensable by the Licensor, and this Agreement provides for the terms and conditions which Users shall follow in order to use the Licensed Software.

The User shall use the Licensed Software by agreeing with the terms of this Software License Agreement. This Agreement shall be deemed completed at the time the User (hereinafter the "User") initially used the Product in which the "Licensed Software" is embedded.

The Licensed Software may include the software which has been licensed to the Licensor directly or indirectly from any third party. In such case, some third parties require the Users to follow their conditions for use separately from this Software License Agreement. Such software shall not be subject to this Agreement, and the Users are urged to read the "Important Notice concerning the Software" to be provided separately below.

## Article 1 General Provision

The Licensor shall grant to the User a non-exclusive and non-transferable (other than the exceptional case referred to in Article 3, Paragraph 1) licensed to use the Licensed Software within the country of the User. (the country where the User bought the Product (hereinafter the "Country"))

## Article 2 License

1. The license granted under this Agreement shall be the right to use the Licensed Software in the Product.
2. The User shall not duplicate, copy, modify, add, translate or otherwise alter, or lease the Licensed Software and any related documents, whether in whole or in part.
3. The use of the Licensed Software shall be limited to personal purpose, and the Licensed Software shall not be distributed, licensed or sub-licensed whether it is for commercial purpose or not.
4. The User shall use the Licensed Software according to the directions described in the operation manual or help file, and is prohibited to use or duplicate any data in a manner violating the Copyright Law or any other laws and regulations by applying whole or a part of the Licensed Software.

## Article 3 Conditions for Grant of License

1. When the User transfers the Product, it may also transfer the license to use the Licensed Software embedded in the Product (including any related materials, updates and upgrades) on condition that no original, copies or related materials continue in the possession of the User, and that the User shall cause the transferee to comply with this Software License Agreement.
2. The User shall not carry out reverse engineering, disassembling, decompiling or any other code analysis works in connection with the Licensed Software.

## Article 4 Right pertaining to the Licensed Software

Any and all copyrights and other rights pertaining to the Licensed Software and related documents shall belong to the Licensor or the original holder of the right who granted to the Licensor the license or sublicense for the Licensed Software (hereinafter the "Original Rightholder"), and the User shall not be entitled to any right other than the license granted hereunder, in respect of the Licensed Software and any related documents.

## Article 5 Indemnification of Licensor

1. Neither the Licensor nor the Original Rightholder shall be liable for any damage incurred by the User or any third party due to the exercise of the license granted to the User under this Agreement, unless otherwise restricted by law.
2. The Licensor will offer no guarantee for the merchantability, convertibility and consistency with certain objective of the Licensed Software.

## Article 6 Liability to Third Party

If any dispute has arisen with any third party due to an infringement upon a copyright, patent or any other intellectual property right that was caused by the User's use of the Licensed Software, the User shall settle such dispute at its own cost and hold the Licensor and the Original Rightholder harmless from any inconvenience it may cause.

## Article 7 Confidentiality

The User shall keep the confidentiality of such portion of the Licensed Software, related documents thereof or any other information to be granted under this Agreement, as well as the conditions of this Agreement as has not yet entered the public domain, and shall not disclose or divulge the same to any third party without approval of the Licensor.

## Article 8 Termination

In case the User falls under any of the events described in the following items, the Licensor may immediately terminate this Agreement or claim that the User compensates for the damage incurred by the Licensor due to such event:

- (1) when the User violated any provision of this Agreement; or
- (2) when a petition has been filed against the User for an attachment, provisional attachment, provisional disposition or any other compulsory execution.

## Article 9 Destruction of the Licensed Software

If this Agreement is terminated pursuant to the provision of Article 8, the User shall destroy the Licensed Software, any related documents and copies thereof within two (2) weeks from such date of termination.

## SOFTWARE LICENSE AGREEMENT

### Article 10 Protection of Copyright

1. The copyright and all the other intellectual property rights relating to the Licensed Software shall belong to the Licensor and the Original Rightholder, and in no event shall they be under the ownership of the User.
2. The User shall, whenever it uses the Licensed Software, comply with any laws relating to the copyright and other intellectual property rights.

### Article 11 Export Restriction

1. It is prohibited to export the Licensed Software and any related documents outside the country of the User (including transmission thereof outside the country of the User via Internet or other communication tools).
2. The User shall understand that the Licensed Software shall be subject to the export restrictions adopted by the country of User and any other countries.
3. The User shall agree that the software will be subject to any and all applicable international and domestic laws (including the export control regulation of the country of User and any other countries, and any restrictions concerning the end-users, the use by end-users and importing countries to be provided by the country of User and any other countries, and any other governmental authorities).

### Article 12 Miscellaneous

1. In the event any part of this Agreement is invalidated by operation of law, the residual provisions shall continue in force.
2. Matters not stipulated in this Agreement or any ambiguity or question raised in the construction of this Agreement shall be provided or settled upon good-faith consultation between the Licensor and the User.
3. The Licensor and the User hereby agree that this Agreement is governed by the laws of Japan, and any dispute arising from, and relating to the rights and obligations under, this Agreement shall be submitted to the exclusive jurisdiction of the Tokyo District Court for its first instance.

### Important Notice concerning the Software

-jansson

Copyright (c) 2009-2012 Petri Lehtinen <petri@digip.org>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

-cJSON

Copyright (c) 2009 Dave Gamble

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

-CMP

The MIT License (MIT)

Copyright (c) 2014 Charles Gunyon

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## IMPORTANT NOTICE

### FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Supplier's Declaration of Conformity

Products: 2Din CD Premium Audio  
Model Name: DPXGT701R  
Responsible Party: JVCKENWOOD USA CORPORATION  
2201 East Dominguez Street, Long Beach, CA 90810, U.S.A.  
PHONE: 310 639-9000

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

### IC (Industry Canada) Caution

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

### Attention de 'IC (Industrie Canada)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage.
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### CAUTION

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

### ATTENTION

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

## **IMPORTANT NOTICE**

**CLASS 1  
LASER PRODUCT**

### **The marking of products using lasers**

The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.



### **Declaration of Conformity with regard to the RE Directive 2014/53/EU Declaration of Conformity with regard to the RoHS Directive 2011/65/EU**

#### **Manufacturer:**

JVC KENWOOD Corporation  
3-12, Moriya-cho, Kanagawa-ku, Yokohama-shi, Kanagawa, 221-0022, JAPAN

#### **EU Representative:**

JVC KENWOOD Europe B.V.  
Amsterdamseweg 37, 1422 AC UITHOORN, THE NETHERLANDS

#### **English**

Hereby, JVCKENWOOD declares that the radio equipment "DPXGT701R" is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
<http://www.kenwood.com/cs/ce/eudoc/>

#### **Français**

Par la présente, JVCKENWOOD déclare que l'équipement radio « DPXGT701R » est conforme à la directive 2014/53/UE. L'intégralité de la déclaration de conformité UE est disponible à l'adresse Internet suivante :  
<http://www.kenwood.com/cs/ce/eudoc/>

#### **Español**

Por la presente, JVCKENWOOD declara que el equipo de radio "DPXGT701R" cumple la Directiva 2014/53/EU. El texto completo de la declaración de conformidad con la UE está disponible en la siguiente dirección de internet:  
<http://www.kenwood.com/cs/ce/eudoc/>

#### **Português**

Deste modo, a JVCKENWOOD declara que o equipamento de rádio "DPXGT701R" está em conformidade com a Directiva 2014/53/UE. O texto integral da declaração de conformidade da UE está disponível no seguinte endereço de internet:  
<http://www.kenwood.com/cs/ce/eudoc/>

## IMPORTANT NOTICE

Manufacturer Model Name  
2Din CD Premium Audio DPXGT701R

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft.  
Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPhone, iPod, iPod classic, iPod nano, iPod touch, iTunes, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Android is a trademark of Google LLC.
- The "AAC" logo is a trademark of Dolby Laboratories.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVCKENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- The names of private corporations, products and other entities described in this product are the registered trademarks or trademarks of their respective firms.

### libFLAC

Copyright (C) 2000-2009 Josh Coalson

Copyright (C) 2011-2013 Xiph.Org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



**For further information**

Please check the below special website for further information.  
<https://19cy.jvckenwood.com>

**TO OWNER**

Please retain this booklet and write the serial number of this product for identification and accurate reporting to your local police in the event of theft.  
The serial number is labelled or stamped on the chassis.  
Please confirm this number at your car dealer or service shop when the product has been reinstalled or exchanged to you after repair or readjustment.

Serial No.



B5A-3296-23 (A9)



## KANDUNGAN

MAKLUMAT KESELAMATAN	2
SEBELUM PENGGUNAAN	3
OPERASI ASAS	5
Gambaran butang	
Alat kawalan jauh	
Operasi menggunakan suis stereng	
TETAPAN ASAS	14
Tetapan jam	
Tetapan sistem	
Tetapan audio	
Tetapan paparan	
RADIO	19
CD	20
USB	22
iPod	24
AUX	26
BLUETOOTH®	26
RUJUKAN	31
PENYELESAIAN MASALAH	32
SPESIFIKASI	34
PERJANJIAN LESEN PERISIAN	35
NOTIS PENTING	37

### Jika terdapat masalah

Sekiranya produk ini gagal berfungsi dengan baik, hubungi pengendar anda atau Stesen Perkhidmatan Toyota yang sah berdekatan.

### Cara membaca manual ini

- Operasi dijelaskan terutamanya menggunakan butang pada panel sentuh model dengan ciri Bluetooth (model pandu sebelah kiri).
- Paparan yang dipaparkan dalam contoh mungkin berbeza daripada paparan sebenar, yang boleh diubah tanpa notis untuk penambahbaikan prestasi dan fungsi.
- Petunjuk Bahasa Inggeris digunakan untuk tujuan penjelasan. Anda boleh memilih bahasa paparan dari menu [FUNGSI]. (→ 15)
- [XX] menandakan item yang dipilih.
- (→ XX) menunjukkan terdapat rujukan pada halaman yang dinyatakan.

## MAKLUMAT KESELAMATAN

Demi alasan keselamatan, manual pengguna ini menunjukkan item yang memerlukan perhatian khusus dengan tanda berikut.

### ⚠ AMARAN

- Ini adalah amaran terhadap apa-apa yang boleh menyebabkan kematian atau kecederaan serius kepada orang jika amaran ini diabaikan. Anda dimaklumkan mengenai perkara yang perlu atau tidak perlu dilakukan untuk mengurangkan risiko kematian atau kecederaan serius kepada diri sendiri dan orang lain.

### ⚠ PERHATIAN

- Ini adalah amaran terhadap apa-apa yang boleh menyebabkan kecederaan kepada orang jika amaran tersebut diabaikan. Anda dimaklumkan mengenai perkara yang perlu atau tidak perlu dilakukan untuk mengurangkan risiko kecederaan kepada diri sendiri dan orang lain.

### Langkah berjaga-jaga

### PENTING

Untuk memastikan penggunaan yang betul, sila baca manual ini sebelum menggunakan produk ini. Amatlah penting untuk anda membaca dan mematuhi AMARAN dan PERHATIAN dalam manual ini. Sila simpan manual di tempat yang selamat dan boleh diakses untuk rujukan masa depan.

### ⚠ AMARAN

#### Untuk mengelakkan kecederaan atau kebakaran, sila ikuti langkah-langkah berikut:

- Untuk mengelakkan litar pintas, jangan sekali-kali meletakkan atau meninggalkan objek logam (seperti syiling atau alat logam) di dalam unit.
- Jangan menonton atau menetapkan mata anda pada paparan unit semasa memandu untuk tempoh yang lama.
- Jangan menggunakan unit semasa memandu. Jika anda perlu mengendalikan unit semasa memandu, pastikan anda melihat sekililing dengan teliti.
- Jangan cuba memasang atau mengendalikan produk dengan sendiri. Pemasangan atau servis produk ini oleh orang tanpa latihan dan pengalaman dalam peralatan elektronik dan aksesori automotif mungkin berbahaya dan boleh mendedahkan anda kepada risiko kejutan elektrik, kecederaan atau bahaya lain.
- Jangan biarkan produk ini terdedah kepada cecair. Kejutan elektrik boleh berlaku. Selain itu, dapat mengakibatkan kerosakan kepada produk, berasap, dan kepanasan berlebihan.
- Sekiranya cecair atau bahan asing masuk ke dalam produk ini, hentikan kenderaan anda di tempat yang selamat, matikan engin (ACC OFF) dengan serta-merta dan rujuk kepada pengendar anda atau Stesen Perkhidmatan Toyota yang sah berdekatan. Jangan menggunakan produk ini secara berterusan kerana boleh mengakibatkan kebakaran, kejutan elektrik, atau kegagalan lain.

## MAKLUMAT KESELAMATAN

- Jika anda melihat asap, bunyi atau bau aneh dari produk ini, atau apa-apa tanda tidak normal pada skrin LCD, matikan enjin dengan segera dan hubungi pengedar anda atau Stesen Perkhidmatan Toyota yang sah berdekatan. Menggunakan produk ini secara berterusan boleh mengakibatkan kerosakan kepada sistem.
- Jangan buka atau ubah suai produk ini, kerana terdapat komponen bervoltan tinggi di dalamnya yang boleh mengakibatkan kejutan elektrik. Hubungi pengedar anda atau Stesen Perkhidmatan Toyota yang sah berdekatan untuk pemeriksaan, pelarasan atau pembaikan dalaman.



Simbol ini pada produk bermaksud terdapat arahan pengendalian dan penyelenggaraan penting dalam buku panduan pemilik ini. Perlu dipastikan supaya anda membaca arahan dalam buku panduan pemilik ini dengan teliti.

## SEBELUM PENGGUNAAN

### ■ Sebelum mengeluarkan bateri kenderaan

Maklumat akan dipadamkan apabila kabel kuasa dicabut dari bateri (atau mengeluarkan bateri). Beberapa tetapan dan kandungan yang dirakam tidak akan ditetapkan semula.

### ■ Pembersihan unit

Sekiranya unit plat muka ternoda, lap dengan kain lembut dan kering seperti kain silikon. Jika plat muka ternoda dengan teruk, lap dengan kain lembap dan pembersih neutral, kemudian lap sekali lagi dengan kain lembut dan kering yang bersih.

### CATATAN

Pemakaian penyembur secara langsung ke unit boleh merosakkan bahagian mekanikalnya. Mengelap plat muka dengan kain kasar atau cecair meruap seperti tiner atau alkohol boleh mencalar permukaan atau memadam cetakan saring.

### ■ Perlindungan monitor

- Untuk melindungi monitor daripada kerosakan, jangan mengendalikan monitor dengan menggunakan pen atau alat yang serupa dengan hujung tajam.
- Jika anda melekatkan pelindung skrin filem pada skrin, ia mungkin mengganggu operasi panel sentuh.

### ■ Panel sentuh

- Sensitiviti panel sentuh berkurangan jika pelindung skrin dipasang.
- Butang pencahayaan dan pencahayaan paparan dimatikan secara automatik apabila lampu depan kereta dihidupkan atau apabila sensor kendaraan mengesan tahap cahaya di sekeliling rendah. Jika anda menghidupkan lampu depan kereta atau tahap cahaya sekeliling rendah apabila unit dimatikan, butang pencahayaan secara automatik menjadi redup.
- Sinar matahari yang langsung boleh menjaskan keterlihatan tetingkap paparan dan dalamannya.
- Pantulan mungkin berlaku disebabkan oleh paparan yang berkilat.

 
### ■ Pengabutan lensa

Apabila anda menghidupkan pemanas kereta dalam cuaca sejuk, embun mungkin terbentuk pada lensa di pemain cakera unit kerana kondensasi. Kondensasi pada lensa (juga disebut pengabutan lensa) mungkin tidak membolehkan cakera dimainkan. Jika berlaku, keluarkan cakera dan tunggu titisan air untuk tersejat.

## SEBELUM PENGGUNAAN

### ■ Langkah berjaga-jaga untuk pengendalian cakera

- Jangan sentuh permukaan rakaman cakera.
- Jangan melekatkan pita dll. pada cakera, atau menggunakan cakera dengan pita di atasnya.
- Jangan menggunakan aksesori jenis cakera.
- Bersihkan cakera dari tengah ke arah tepi.
- Apabila mengeluarkan cakera dari unit ini, tariknya secara mendatar.
- Jika tengah cakera atau rim luar bergerigi, gunakan cakera hanya selepas mengeluarkan gerigi dengan pen dll.
- Cakera yang tidak berbentuk bulat tidak boleh digunakan.

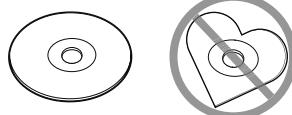

- Cakera 8-cm (3 inci) tidak boleh digunakan.
- Cakera dengan pewarna pada permukaan rakaman atau cakera yang kotor tidak boleh digunakan.
- Unit ini hanya boleh memainkan jenis CD berikut.



- Unit ini mungkin tidak memainkan cakera dengan betul jika tidak mempunyai tanda.
- Anda tidak boleh memainkan cakera yang belum dimuktamadkan. (Untuk dimuktamadkan, lihat perisian penulisan anda dan manual perakam anda.)

### ■ Jalur radio

- Anda boleh mendaftarkan frekuensi radio AM/FM ke butang pratetap yang menyimpan stesen berdaftar dengan mudah.

### ■ Peranti USB

- Unit ini tidak dapat menyokong peranti USB yang disambungkan melalui hab USB.
- Menyambung kabel dengan panjang melebihi 5 m boleh menyebabkan main semula yang tidak normal.
- Unit ini tidak dapat mengenali peranti USB yang penarafannya melebihi 5 V dan melebihi 1.0 A.

### ■ iPod/iPhone

- Model yang mempunyai port Kilat boleh disambungkan ke unit ini.
- Sesetengah fungsi mungkin tidak beroperasi pada unit ini kerana bergantung kepada versi sistem operasi iPod/iPhone.

### ■ Bluetooth


- Bergantung kepada versi peranti Bluetooth, sesetengah peranti Bluetooth mungkin tidak dapat disambungkan ke unit ini.
- Keadaan isyarat adalah berbeza, bergantung kepada persekitaran.

# OPERASI ASAS


## Gambaran butang

### Audio Premium CD 2Din (Model dengan ciri Bluetooth)

Model pandu sebelah kiri:

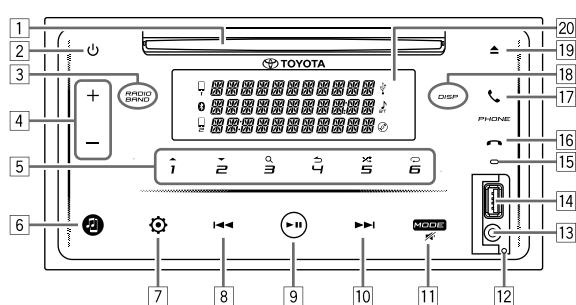

Model pandu sebelah kanan:

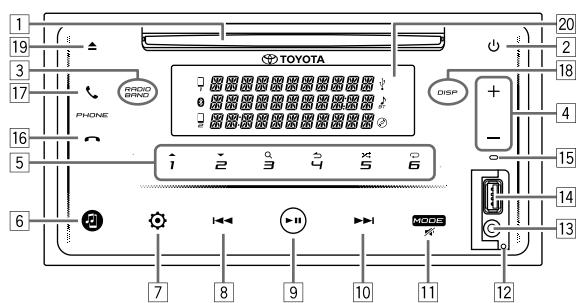

No	Bahagian	Operasi	Fungsi
1	Slot pemuat cakera		Memasukkan cakera.
2	⊕	Menghidupkan/mematiakan unit	Sentuh butang untuk menghidupkan kuasa. (Apabila suis ON atau ACC sahaja.) • Sentuh dan tahan butang untuk mematiakan kuasa.
3	JALUR RADIO	Memilih sumber RADIO Memilih jalur radio	Sentuh butang untuk memilih sumber RADIO. • Sentuh butang untuk memilih jalur radio (FM1/FM2/AM) semasa dalam sumber RADIO.
4	+ / -	Mengubah kelantangan	Sentuh butang + atau - untuk melaraskan kelantangan. • Sentuh dan tahan butang + untuk terus meningkatkan kelantangan kepada 25
5	1 hingga 6	Untuk pemilihan nombor	Sentuh butang 1 hingga 6 untuk memasukkan pemilihan nombor secara langsung.
	1 ▲ / 2 ▼	Untuk membuat pilihan	Sentuh butang untuk membuat pilihan.
3 ↗	Untuk mod carian		Sentuh butang untuk mod carian.
4 ←	Untuk kembali ke item tetapan sebelumnya		Sentuh butang untuk kembali ke item tetapan sebelumnya.
5 ×	Untuk memilih mod main balik secara rawak		Sentuh butang untuk memilih mod main balik secara rawak.
6 ↘	Untuk memilih mod main balik ulangan		Sentuh butang untuk memilih mod main balik ulangan.
6 ↗	Untuk memilih sumber AUDIO BT		Sentuh butang untuk memilih sumber AUDIO BT.
7 ☰	Untuk masuk menu [FUNGSI]		Sentuh butang untuk masuk menu [FUNGSI].


## OPERASI ASAS

No	Bahagian	Operasi	Fungsi
8		Untuk memilih item atau pindahkan ke kedudukan kiri	Sentuh butang untuk memilih item atau untuk berpindah ke kedudukan kiri.
		Untuk undur	Sentuh dan tahan butang untuk membalik trek/fail.
		Untuk mencari stesen RADIO	Sentuh butang untuk mencari stesen secara manual semasa dalam sumber RADIO. • Sentuh dan tahan butang untuk mencari stesen secara automatik.
9		Untuk main atau jeda	Sentuh butang untuk main atau jeda trek/fail.
		Untuk mengesahkan pemilihan	Sentuh butang untuk mengesahkan pemilihan.
10		Untuk memilih item atau pindahkan ke kedudukan yang betul	Sentuh butang untuk memilih item atau untuk berpindah ke kedudukan yang betul.
		Untuk mara laju	Sentuh dan tahan butang untuk mara laju ke trek/fail.
		Untuk mencari stesen RADIO	Sentuh butang untuk mencari stesen secara manual semasa dalam sumber RADIO. • Sentuh dan tahan butang untuk mencari stesen secara automatik.
11		Untuk memilih sumber main balik	Sentuh butang berulang kali untuk memilih sumber main balik yang diingini.
		Untuk mod senyap	Sentuh dan tahan butang untuk mod senyap. • Sentuh dan tahan lagi untuk mengembalikan kelantangan terdahulu.
12	Butang set semula	Untuk menetapkan semula unit	Tekan dengan menggunakan objek tajam untuk menetapkan semula unit. • Pelarasan pratetap anda juga akan dipadamkan kecuali stesen radio yang disimpan.
13	Bicu input tambahan		Sambungkan pemain audio mudah alih.
14	Terminal input USB		Sambungkan peranti USB.
15	Mikrofon terbina dalam		Bercakap melalui mod bebas tangan Bluetooth apabila bersambung telefon Bluetooth.  Sebutkan nama kenalan yang anda hendak panggil atau arahan suara untuk mengawal fungsi telefon apabila telefon Bluetooth bersambung dan <b>[KAWALAN AUDIO]</b> diaktifkan.
16		Untuk menamatkan atau menolak panggilan	Sentuh butang untuk menamatkan atau menolak panggilan apabila telefon Bluetooth dihubungkan.
17		Untuk menjawab panggilan	Sentuh butang untuk menjawab panggilan apabila telefon Bluetooth dihubungkan.
18		Untuk mematikan pencahayaan	• Lihat juga "Cara menghidupkan pencahayaan pada panel sentuh" di halaman 9.
19		Untuk mengeluarkan cakera	Sentuh butang untuk mengeluarkan cakera.
20	Paparan tetingkap		Paparkan maklumat main semula atau tetapan yang anda buat.


## OPERASI ASAS

### Audio Asas CD 2Din (Model tanpa ciri Bluetooth)

Model pandu sebelah kiri:

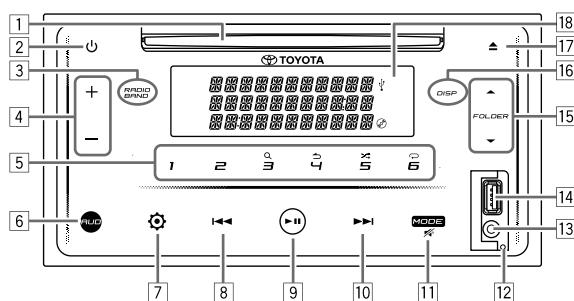

Model pandu sebelah kanan:

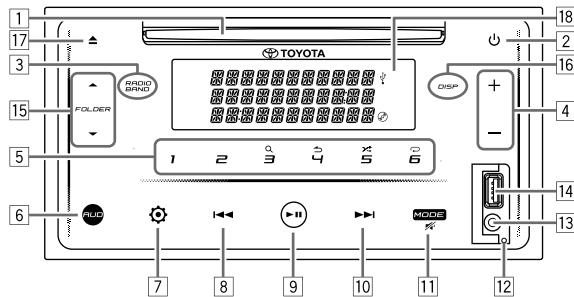

No	Bahagian	Operasi	Fungsi
1	Slot pemasangan cakera		Memasukkan cakera
2	⊕	Menghidupkan/mematikan unit	Sentuh butang untuk menghidupkan unit. (Apabila suis ON atau ACC sahaja.) • Sentuh dan tahan butang untuk mematikan kuasa.
3	<b>RADIO BAND</b>	Memilih sumber RADIO Memilih jalur radio	Sentuh butang untuk memilih sumber RADIO. • Sentuh butang untuk memilih jalur radio (FM1/FM2/AM) semasa dalam sumber RADIQ.
4	+ / -	Mengubah kelantangan	Sentuh butang + atau - untuk melaraskan kelantangan. • Sentuh dan tahan butang + untuk terus meningkatkan kelantangan kepada 25
5	<b>1 hingga 6</b>	Untuk pemilihan nombor	Sentuh butang 1 hingga 6 untuk memasukkan pemilihan nombor secara langsung.
3 ↗	Untuk mod carian		Sentuh butang untuk mod carian.
4 ←	Untuk kembali ke item tetapan sebelumnya		Sentuh butang untuk kembali ke item tetapan sebelumnya.
5 ×	Untuk memilih mod main balik secara rawak		Sentuh butang untuk memilih mod main balik secara rawak.
6 ↡	Untuk memilih mod main balik ulangan		Sentuh butang untuk memilih mod main balik ulangan.
6 <b>AUD</b>	Untuk masuk menu [KAWALAN AUDIO]		Sentuh butang untuk masuk menu [KAWALAN AUDIO].
7 ☰	Untuk masuk menu [FUNGSI]		Sentuh butang untuk masuk menu [FUNGSI].

## OPERASI ASAS

No	Bahagian	Operasi	Fungsi
8		Untuk memilih item atau pindahkan ke kedudukan kiri Untuk undur Untuk mencari stesen RADIO	Sentuh butang untuk memilih item atau untuk berpindah ke kedudukan kiri. Sentuh dan tahan butang untuk membalik trek/fail. Sentuh butang untuk mencari stesen secara manual semasa dalam sumber RADIO. • Sentuh dan tahan butang untuk mencari stesen secara automatik.
9		Untuk main atau jeda Untuk mengesahkan pemilihan	Sentuh butang untuk main atau jeda trek/fail. Sentuh butang untuk mengesahkan pemilihan.
10		Untuk memilih item atau pindahkan ke kedudukan yang betul Untuk mara laju Untuk mencari stesen RADIO	Sentuh butang untuk memilih item atau untuk berpindah ke kedudukan yang betul. Sentuh dan tahan butang untuk mara laju ke trek/fail. Sentuh butang untuk mencari stesen secara manual semasa dalam sumber RADIO. • Sentuh dan tahan butang untuk mencari stesen secara automatik.
11		Untuk memilih sumber main balik Untuk mod senyap	Sentuh butang berulang kali untuk memilih sumber main balik yang diingini. Sentuh dan tahan butang untuk mod senyap. • Sentuh dan tahan lagi untuk mengembalikan kelantangan terdahulu.
12	Butang set semula	Untuk menetapkan semula unit	Tekan dengan menggunakan objek tajam untuk menetapkan semula unit. • Pelarasan pratetap anda juga akan dihapuskan kecuali stesen radio yang disimpan.
13	Bicu input tambahan		Sambungkan pemain audio mudah alih.
14	Terminal input USB		Sambungkan peranti USB.
15		Untuk membuat pilihan	Sentuh butang untuk memilih.
16		Untuk mematikan pencahayaan	xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx • Lihat juga "Cara menghidupkan pencahayaan pada panel sentuh" di halaman 9.
17		Untuk mengeluarkan cakera	Sentuh butang untuk mengeluarkan cakera.
18	Paparan tetingkap	Untuk mengeluarkan cakera	Paparkan maklumat main semula atau tetapan yang anda buat.


## OPERASI ASAS

### ■ Cara menghidupkan pencahayaan pada panel sentuh


Sentuh mana-mana butang pada panel sentuh \*\* untuk menghidupkan pencahayaan. (Terdapat pada semua model.)

#### Audio Premium CD 2Din (Model dengan ciri Bluetooth)

Model pandu sebelah kiri:

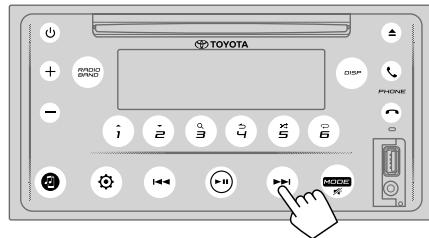


Model pandu sebelah kanan:

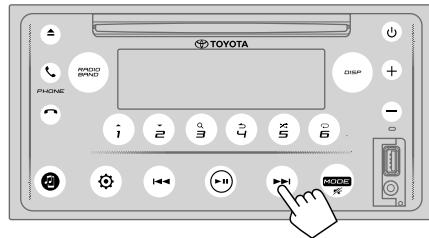


#### Audio Asas CD 2Din (Model tanpa ciri Bluetooth)

Model pandu sebelah kiri:

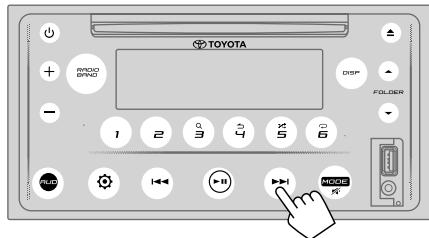

Model pandu sebelah kanan:

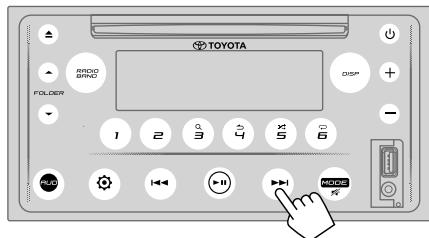

Semasa pencahayaan dimatikan...

- Pencahayaan pada panel sentuh dihidupkan secara automatik selama 5 saat apabila cakera dimasukkan atau peranti USB dipasang.
- Pencahayaan pada panel sentuh dihidupkan secara automatik semasa menerima isyarat daripada siaran FM dan dimatikan secara automatik apabila tamat.
- Pencahayaan pada panel sentuh dihidupkan secara automatik semasa memanggil, menerima panggilan atau berbual melalui mod Bluetooth bebas tangan dan dimatikan secara automatik apabila perbualan berakhir.
- Apabila menggunakan alat kawalan jauh atau suis stereng untuk beroperasi, pencahayaan pada panel sentuh dihidupkan selama 5 saat dan dimatikan secara automatik kecuali untuk butang kelantangan.

## OPERASI ASAS

### Alat kawalan jauh

Unit ini boleh dioperasikan dengan alat kawalan jauh.

### ▲ AMARAN

- Jangan menelan bateri, Bahaya Melecur  
Alat kawalan jauh yang dibekalkan dengan produk ini mengandungi bateri koin / butang. Jika bateri butang/ koin ditelan, ia boleh menyebabkan luka bakar dalam yang teruk dalam hanya 2 jam dan boleh mengakibatkan kematian.  
Pastikan bateri baru dan jauh dari kanak-kanak. Jika penutup bateri tidak ditutup dengan selamat, berhenti menggunakan produk ini dan jauhi dari kanak-kanak.  
Jika anda menyangka bateri telah ditelan atau diletakkan di dalam mana-mana bahagian badan, dapatkan bantuan perubatan segera.

### ▲ PERHATIAN

- Letakkan alat kawalan jauh di tempat yang tidak akan bergerak semasa brek atau operasi lain.  
Kedua-dua berbahaya boleh terjadi, jika kawalan jauh jatuh dan tersangkul di bawah pedal semasa memandu.
- Risiko berlaku kebakaran atau letupan jika bateri digantikan dengan jenis yang tidak betul. Pastikan menggantikannya hanya dengan jenis yang sama.
- Risiko berlaku kebakaran, letupan atau kebocoran cecair atau gas yang mudah terbakar jika bateri dibiarkan berada dalam suhu persekitaran yang terlalu tinggi dan/atau mengalami tekanan udara yang terlalu rendah. Sarung bateri atau sebilangan bateri tidak seharusnya terdedah kepada haba yang melampau seperti cahaya matahari, api atau seumpamanya.
- Risiko berlaku kebakaran, letupan atau kebocoran cecair atau gas yang mudah terbakar jika bateri dilupuskan ke dalam api atau ketuhar panas, dicas semula, dipintas, dihancurkan atau dipotong secara mekanikal.
- Jika bendalir yang tumpah, terkena pada mata atau pakaian anda, bilas segera dengan air dan rujuk nasihat pakar perubatan.

### Penggunaan alat kawalan jauh

Arahkan alat kawalan jauh ke arah panel sentuh \*\* untuk beroperasi.


- Alat kawalan jauh mungkin tidak berfungsi dengan baik dalam cahaya matahari langsung.

### PENTING

- Jangan simpan alat kawalan jauh dalam suhu tinggi atau cahaya matahari langsung.
- Jangan biarkan alat kawalan jauh jatuh ke lantai, di mana ia boleh tersekut di bawah brek atau pedal pemecut.




### Cara menggantikan bateri

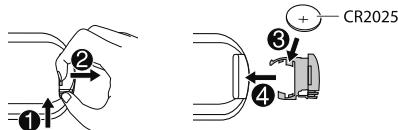

## OPERASI ASAS

### Penggunaan alat kawalan jauh

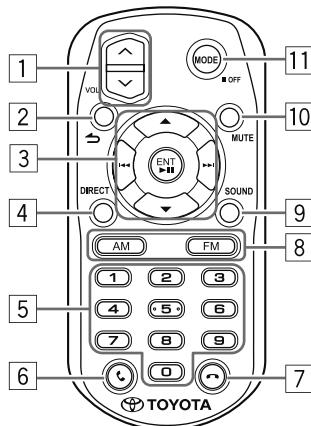


No	Bahagian	Operasi	Fungsi
1	<b>VOL ▲ / VOL ▼</b>	Untuk melaraskan kelantangan	Tekan <b>VOL ▲</b> atau <b>VOL ▼</b> untuk melaraskan kelantangan • Sentuh dan tahan butang <b>▲</b> untuk terus meningkatkan kelantangan kepada 25.
2	<b>◀</b>	Untuk kembali ke item tetapan sebelumnya	Tekan butang untuk kembali ke item tetapan sebelumnya
3	<b>ENT ► II</b>	Untuk main atau jeda Untuk mengesahkan pilihan	Tekan butang untuk main atau jeda Tekan butang untuk mengesahkan pilihan
	<b>◀◀ / ▶▶</b>	Untuk memilih item Untuk undur atau mara laju Untuk mencari stesen RADIO	Tekan butang untuk memilih item Tekan butang untuk undur atau mara laju • Tekan butang untuk mencari stesen RADIO • Tekan butang untuk memilih stesen pratetap semasa berada di sumber RADIO.
	<b>▲ / ▼</b>	Untuk membuat pilihan	Tekan butang untuk membuat pilihan.
4	<b>LANGSUNG</b>	Untuk Carian Akses Langsung Penalaan/Muzik Langsung	Tekan butang untuk Carian Akses Langsung Tuning / Muzik Langsung.
5	<b>0 hingga 9</b>	Untuk memilih nombor Untuk memasukkan nombor stesen pratetap	Untuk memilih nombor Tekan butang untuk memilih nombor secara langsung.
6	<b>📞</b>	Untuk menjawab panggilan	Tekan butang untuk menjawab panggilan apabila telefon Bluetooth disambungkan.
7	<b>📞</b>	Untuk menamatkan atau menolak panggilan	Tekan butang untuk menamatkan atau menolak panggilan apabila telefon Bluetooth disambungkan.
8	<b>AM / FM</b>	Untuk memilih jalur AM/FM	Tekan butang untuk memilih jalur FM1/FM2/AM.

## OPERASI ASAS

No	Bahagian	Operasi	Fungsi
9	<b>SUARA</b>	Untuk masuk menu [KAWALAN SUARA]	Tekan butang untuk masuk menu [KAWALAN SUARA]
10	<b>MUTE</b>	Untuk mod senyap	Tekan butang untuk mod senyap • Tekan butang sekali lagi untuk mengembalikan kelantangan terdahulu.
11	<b>MODE</b>	Untuk menghidupkan / mematikan unit	Sentuh butang untuk menghidupkan unit. (Apabila suis ON atau ACC sahaja.) • Sentuh dan tahan butang untuk mematikan kuasa.
		Untuk memilih sumber main balik	Tekan dan tahan butang untuk mematikan unit. Tekan butang berulang kali untuk memilih sumber main balik yang diingini. (Apabila unit dihidupkan.)

### Operasi menggunakan suis stereng

- Unit ini boleh dioperasikan dengan suis stereng.
- Fungi kawalan stereng bervariasi bergantung kepada kenderaan dan gred kenderaan.

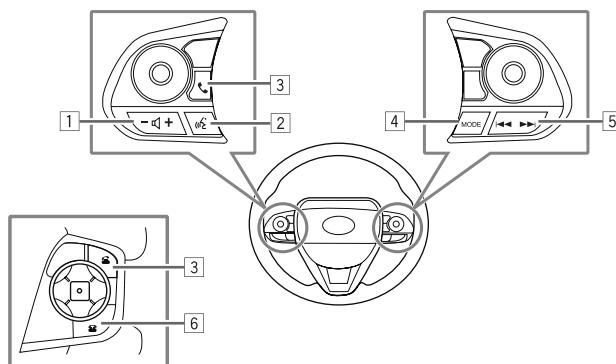

No	Bahagian	Operasi	Fungsi	Audio CD 2Din	
				Asas	Premium
1		Untuk melaraskan kelantangan	Tekan +/− untuk menyesuaikan kelantangan. • Tekan dan tahan + untuk meningkatkan kelantangan hingga 25. • Tekan dan tahan − terus menerus mengurangkan kelantangan.	Tersedia	Tersedia
2		Untuk memulakan atau menamatkan pengecaman suara	Apabila telefon Bluetooth dihubungkan... • Tekan untuk memulakan pengecaman suara. • Tekan dan tahan untuk menamatkan pengecaman suara.	Tidak Tersedia	Tersedia
3		Untuk menjawab panggilan	Apabila panggilan masuk... • Tekan untuk menjawab panggilan. • Tekan dan tahan untuk menolak panggilan.  Semasa bercakap ... • Tekan untuk menahan atau melepaskan panggilan semasa. • Tekan dan tahan untuk menamatkan panggilan.  Semasa bercakap pada panggilan pertama... • Tekan untuk menahan panggilan semasa dan menjawab panggilan yang lain.  Semasa mendial ... • Tekan dan tahan untuk membatalkan panggilan.	Tidak Tersedia	Tersedia

## OPERASI ASAS

No	Bahagian	Operasi	Fungsi	Audio CD 2Din	
				Asas	Premium
4	<b>MODE</b>	Untuk memilih sumber main balik	Tekan butang berulang kali untuk memilih sumber main balik yang diingini.	Tersedia	Tersedia
		Untuk membisukan bunyi	Tekan dan tahan butang untuk membisukan bunyi. • Tekan dan tahan semula untuk mengembalikan kelantangan sebelumnya	Tersedia	Tersedia
5		Untuk undur atau mara laju	Tekan butang untuk maju/undur memilih trek, fail atau bab.	Tersedia	Tersedia
		Untuk mencari stesen RADIO	Tekan dan tahan butang untuk mencari stesen radio secara automatik semasa dalam sumber RADIO. • Tekan butang untuk memilih stesen pratetap semasa berada di sumber RADIO.	Tersedia	Tersedia
6		Untuk menamatkan atau menolak panggilan	Semasa panggilan masuk ... • Tekan untuk menolak panggilan. Semasa bercakap ... • Tekan untuk menamatkan panggilan. Semasa mendial ... • Tekan untuk membatalkan panggilan.	Tidak Tersedia	Tersedia


Fungsi dan rupa berbeza bergantung kepada model kereta.

### Catatan

- Butang Pengecaman suara akan berfungsi bergantung kepada tetapan telefon apabila peranti mudah alih disambungkan melalui Bluetooth. Jika arahan tersebut dikenali oleh peranti Bluetooth yang bersambung, ia akan beroperasi mengikut arahan suara. Pengecaman Suara hanya untuk tujuan panggilan.


## TETAPAN ASAS

### Audio Asas CD 2Din (Model tanpa ciri Bluetooth)

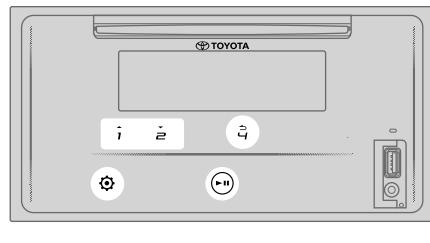


### Audio Asas CD 2Din (Model tanpa ciri Bluetooth)

Model pandu sebelah kiri:

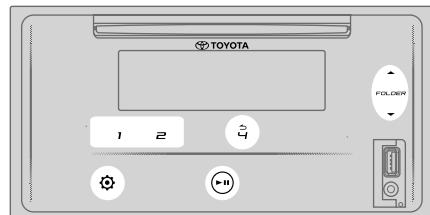

Model pandu sebelah kanan:

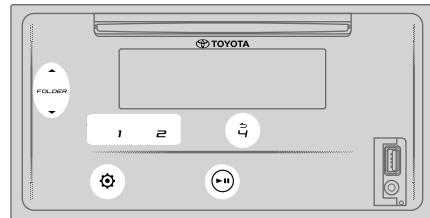

### Tetapan Jam

#### Menetapkan jam

1. Sentuh untuk masuk [FUNGSI].
2. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN JAM], kemudian sentuh **► II**.
3. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [SET WAKTU], kemudian sentuh **► II**.
4. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk set jam, kemudian sentuh **► II** untuk mengesahkan.
5. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk set minit, kemudian sentuh **► II** untuk mengesahkan.
6. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [FORMAT WAKTU], kemudian sentuh **► II**.
7. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [12J] atau [24J], kemudian sentuh **► II** untuk mengesahkan.
8. Sentuh untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↵**.

#### Menetapkan paparan waktu

1. Sentuh untuk masuk [FUNGSI].
2. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN JAM], kemudian sentuh **► II**.
3. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [PAPARAN WAKTU], kemudian sentuh **► II**.
4. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [ON] (asal) untuk menghidupkan paparan jam di semua sumber.  
(atau)  
Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [OFF] untuk mematikan paparan jam di semua sumber.
5. Sentuh **► II** untuk mengesahkan.
6. Sentuh untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↵**.

## TETAPAN ASAS

Tetapan sistem	Tetapan Suara
<p><b>Menetapkan nada kekunci sentuh</b></p> <ol style="list-style-type: none"><li>1. Sentuh  untuk masuk [<b>FUNGSI</b>].</li><li>2. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih [<b>TETAPAN SISTEM</b>], kemudian sentuh <b>► II</b>.</li><li>3. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih [<b>PILIH BAHASA</b>], kemudian sentuh <b>► II</b>.</li><li>4. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih bahasa paparan berikut untuk menu [<b>FUNGSI</b>] dan maklumat music jika berlaku. [ENGLISH] (asal) / [PORTUGUES] / [BAHASA INDONESIA] / [BAHASA MALAYSIA] / [ESPAÑOL]</li><li>5. Sentuh <b>► II</b> untuk mengesahkan.</li><li>6. Sentuh  untuk keluar.</li></ol> <p>Untuk kembali ke item tetapan sebelumnya, sentuh <b>4 ↴</b>.</p> <p><b>Menetapkan nada kekunci sentuh</b></p> <ol style="list-style-type: none"><li>1. Sentuh  untuk masuk [<b>FUNGSI</b>].</li><li>2. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih [<b>TETAPAN SISTEM</b>], kemudian sentuh <b>► II</b>.</li><li>3. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih [<b>PILIH BAHASA</b>], kemudian sentuh <b>► II</b>.</li><li>4. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih bahasa paparan berikut untuk menu [<b>FUNGSI</b>] dan maklumat music jika berlaku. [ENGLISH] (asal) / [PORTUGUES] / [BAHASA INDONESIA] / [BAHASA MALAYSIA] / [ESPAÑOL]</li><li>5. Sentuh <b>► II</b> untuk mengesahkan.</li><li>6. Sentuh  untuk keluar.</li></ol> <p>Untuk kembali ke item tetapan sebelumnya, sentuh <b>4 ↴</b>.</p>	<p><b>Memilih penyama pratetap</b></p> <ol style="list-style-type: none"><li>1. Sentuh  untuk masuk [<b>FUNGSI</b>].<ul style="list-style-type: none"><li>• Untuk Audio Asas CD 2Din, menyentuh AUD akan terus memasuki menu [<b>KAWALAN SUARA</b>].</li></ul></li><li>2. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih [<b>KAWALAN SUARA</b>], kemudian sentuh <b>► II</b>.</li><li>3. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih [<b>PENYAMA PRATETAP</b>], kemudian sentuh <b>► II</b>.</li><li>4. Sentuh <b>1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼</b> untuk memilih penyama pratetap yang sesuai dengan genre muzik, kemudian sentuh <b>► II</b> untuk mengesahkan. [DATAR] (asal) / [POP] / [R&amp;B] / [JAZZ] / [KLASIK] / [HARD ROCK] / [C-SUV H/B] / [SEDAN] / [MPV] / [VAN] / [PENGGUNA]<ul style="list-style-type: none"><li>• Pilih [<b>PENGGUNA</b>] untuk menggunakan tetapan yang dibuat dalam [<b>MANUAL SAMA</b>].</li><li>• [<b>PENYAMA PRATETAP</b>] dioptimumkan untuk setiap jenis kenderaan (Sedan / C-SUV, SUV / H/B kompak, Hatchback / MPV / SUV PU, Track Pikap / Van) dan menghasilkan bunyi semulajadi yang lancar dan bebas-distorsi pada mana-mana tahap pendengaran.</li></ul></li><li>5. Sentuh  untuk keluar.</li></ol> <p>Untuk kembali ke item tetapan sebelumnya, sentuh <b>4 ↴</b>.</p>

## TETAPAN ASAS

### Melaras imbang output pembesar suara belakang dan depan

1. Sentuh  untuk masuk [FUNGSI].
  - Untuk Audio Asas CD 2Din, menyentuh **AUD** akan terus memasuki menu [**KAWALAN SUARA**].
2. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**KAWALAN SUARA**], kemudian sentuh **► II**.
3. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**TETAPAN PUDAR**], kemudian sentuh **► II**.
4. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk melaras tetapan, kemudian sentuh **► II**.  
([POS R15] hingga [POS F15]), (asal: [POS 0])
5. Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

### Melaras imbang output pembesar suara kiri dan kanan

1. Sentuh  untuk masuk [FUNGSI].
  - Untuk Audio Asas CD 2Din, menyentuh **AUD** akan terus memasuki menu [**KAWALAN SUARA**].
2. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**KAWALAN SUARA**], kemudian sentuh **► II**.
3. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**TETAPAN IMBANG**], kemudian sentuh **► II**.
4. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk melaras tetapan, kemudian sentuh **► II**.  
([POS L15] hingga [POS R15]), (asal: [POS 0])
5. Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

### Melaras tetapan kesan bunyi

1. Sentuh  untuk masuk [FUNGSI].
  - Untuk Audio Asas CD 2Din, menyentuh **AUD** akan terus memasuki menu [**KAWALAN SUARA**].
2. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**KAWALAN SUARA**], kemudian sentuh **► II**.
3. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**KESAN BUNYI**], kemudian sentuh **► II**.
4. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**TEKNOLOGI K2**], kemudian sentuh **► II**.
5. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**ON**] atau [**OFF**].  
[**ON**] (asal) Menghasilkan bunyi realistik dengan mengimbangi komponen frekuensi tinggi dan memulihkan masa naik bentuk gelombang yang hilang dalam pemampatan data audio.  
[**OFF**]: Membatalkan.
  - Tidak berlaku untuk sumber RADIO dan sumber AUX.
6. Sentuh **► II** untuk mengesahkan.
7. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**PENINGKATAN RUANG**], kemudian sentuh **► II**.
8. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk membuat salah satu daripada pilihan berikut.  
[**KECIL**] / [**SEDERHANA**] / [**BESAR**]: Meningkatkan ruang bunyi.  
[**OFF**] (asal): Membatalkan.
  - Tidak berlaku untuk sumber RADIO.
9. Sentuh **► II** untuk mengesahkan.

10. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**PENINGKATAN BUNYI**], kemudian sentuh **► II**.
11. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk membuat salah satu daripada pilihan berikut.  
[**RENDAH**] / [**SEDERHANA**] / [**TINGGI**]: Melaraskan posisi bunyi dari pembesar suara.  
[**OFF**] (asal): Membatalkan.
12. ASentuh \*\* untuk mengesahkan.
13. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**TAHAP BUNYI AUTO**], kemudian sentuh **► II**.
14. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**ON**] atau [**OFF**].  
[**ON**] (asal): Meningkatkan frekuensi untuk mengurangkan bunyi yang didengar dari luar kereta atau bunyi bising tayar.  
[**OFF**]: Membatalkan.
15. Sentuh **► II** untuk mengesahkan.
16. Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

### Melaras penyama secara manual

Sebelum membuat penyelarasan, pilih sumber yang ingin dilaraskan.

1. Sentuh  untuk masuk [FUNGSI].
  - Untuk Audio Asas CD 2Din, menyentuh **AUD** akan terus memasuki menu [**KAWALAN SUARA**].
2. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**KAWALAN SUARA**], kemudian sentuh **► II**.
3. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**MOD PRO**], kemudian sentuh **► II**.
4. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**PENYAMA MANUAL**], kemudian sentuh **► II**.
  - Elemen bunyi (tahap frekuensi, tahap nada, faktor Q) diprata tap ke dalam setiap pemilihan.
5. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih frekuensi pilihan anda, kemudian sentuh **► II**.  
[**62.5HZ**] / [**100HZ**] / [**160HZ**] / [**250HZ**] / [**400HZ**] / [**630HZ**] / [**1KHZ**] / [**1.6KHZ**] / [**2.5KHZ**] / [**4KHZ**] / [**6.3KHZ**] / [**10KHZ**] / [**16KHZ**]
6. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk melaras tahap untuk menyimpan setiap sumber, kemudian sentuh **► II**.  
[**TAHAP-9**] hingga [**TAHAP+9**], (asal: [**TAHAP0**])
7. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih [**TETAPAN Faktor Q**] untuk melaras faktor kualiti, kemudian sentuh **► II**.  
[**1.35**] / [**1.50**] (asal) / [**2.00**]
8. Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

## TETAPAN ASAS

### Menetapkan penjajaran waktu digital


Penjajaran Waktu Digital menetapkan waktu tunda output pembesar suara untuk membuat persekitaran yang lebih sesuai untuk kenderaan anda.

- Untuk maklumat lanjut, ➔ **Menentukan nilai untuk [JARAK] dan [TAMBAH] [TETAPAN DTA]**.

- Sentuh ⌂ untuk masuk [FUNGSI].
  - Untuk Audio Asas CD 2Din, menyentuh AUD akan terus memasuki menu [KAWALAN SUARA].
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [KAWALAN SUARA], kemudian sentuh ► II.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [MOD PRO], kemudian sentuh ► II.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [TETAPAN DTA], kemudian sentuh ► II.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [POSISI], kemudian sentuh ► II.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih kedudukan pendengaran (titik rujukan), kemudian sentuh ► II untuk mengesahkan.  
[SEMUA] (asal): Tanpa penyeimbangan;  
[KANAN DEPAN]: Tempat duduk kanan depan;  
[KIRI DEPAN]: Tempat duduk kiri depan;  
[SEMUA DEPAN]: Tempat duduk depan
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [JARAK], kemudian sentuh ► II.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk melaras secara halus output jarak untuk penyeimbangan, kemudian sentuh ► II untuk mengesahkan.  
[OCM] (asal) hingga [610cm]
  - Sebelum membuat pelarasan, pilih pembesar suara yang anda inginkan.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [TAMBAH], kemudian sentuh ► II.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk melaras secara halus output kelantangan pembesar suara yang dipilih, kemudian sentuh ► II untuk mengesahkan.  
[-8DM] hingga [0D] (asal)
  - Sebelum membuat pelarasan, pilih pembesar suara yang anda inginkan.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [TETAPAN AWAL], kemudian sentuh ► II.
- Sentuh 1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼ untuk memilih [YA] atau [TIDAK].  
[YA]: Menetapkan semula tetapan ([JARAK] dan [TAMBAH]) dari kedudukan yang dipilih ke asal.  
[TIDAK] (asal): Membatalkan.
- Sentuh ► II untuk mengesahkan.
- Sentuh ⌂ untuk keluar.
  - Sebelum membuat penyeiaran untuk [JARAK] dan [TAMBAH] dari [TETAPAN DTA], pilih pembesar suara terlebih dahulu: [KIRI DEPAN] / [KANAN DEPAN] / [KIRI BELAKANG] / [KANAN BELAKANG]

Untuk kembali ke item tetapan sebelumnya, sentuh 4 ⌂.

### Menentukan nilai untuk [JARAK] dan [TAMBAH] [TETAPAN DTA]

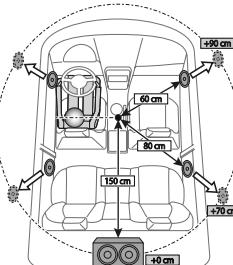

Jika anda menentukan jarak dari pusat kedudukan pendengaran yang ditetapkan pada setiap pembesar suara, masa tunda akan dikira secara automatik dan ditetapkan.

- Tentukan pusat kedudukan pendengaran yang ditetapkan saat ini sebagai titik rujukan.
- Ukur jarak dari titik rujukan kepada pembesar suara.
- Kira perbezaan di antara jarak pembesar suara yang paling jauh (pembesar suara belakang) dengan pembesar suara lain.
- Tetapkan [JARAK] yang dikira dalam langkah 3 untuk pembesar suara individu.
- Laraskan [TAMBAH] untuk pembesar suara individu.

Contoh: Apabila [SEMUA DEPAN] dipilih sebagai kedudukan pendengaran

## TETAPAN ASAS

### Tetapan paparan

#### Melaraskan kecerahan

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN PAPARAN], kemudian sentuh ► II.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TAHAP KECERAHAN], kemudian sentuh ► II.
- 4 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih tahap kecerahan untuk pencahayaan paparan dan butang, kemudian sentuh ► II untuk mengesahkan.  
**[TAHAP 0] hingga [TAHAP 31]**
  - Pencahayaan butang dan pencahayaan paparan secara automatik dimatikan apabila lampu depan kereta dihidupkan atau apabila sensor kenderaan mengesan tahap cahaya yang rendah di sekelilingnya.  
Jika anda menghidupkan lampu depan kereta atau apabila sensor kenderaan mengesan tahap cahaya yang rendah di sekelilingnya apabila unit dimatikan, pencahayaan butang secara automatik menjadi redup.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

#### Menetapkan gaya menatal teks

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN PAPARAN], kemudian sentuh ► II.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TATAL TEKS], kemudian sentuh \*\*.
- 4 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih gaya menatal teks anda, kemudian sentuh ► II untuk mengesahkan.  
**[AUTO]:** Maklumat paparan ditatal secara automatik.  
**[SEKALI] (asal):** Maklumat paparan ditatal sekali sahaja.  
**[OFF]:** Membatalkan.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

#### Memilih warna pencahayaan

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN PAPARAN], kemudian sentuh ► II.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [PILIH WARNA], kemudian sentuh ► II.
- 4 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih warna pencahayaan anda, kemudian sentuh ► II untuk mengesahkan.  
**[WARNA ASAL] (asal) / [IMBAS VARIABEL] / [R/G/B TERSUAJ] / warna pratetap \***
  - \* **[MERAH1] / [MERAH2] / [MERAH3] / [UNGU1] / [UNGU2] / [UNGU3]**  
**[BIRU1] / [BIRU2] / [BIRULANGIT1] / [BIRULANGIT2] / [BIRUMUDA] / [AKUA1] / [AKUA2] / [HIJAU1] / [HIJAU2] / [HIJAU3] / [HIJAUKUNING1] / [HIJAUKUNING2] / [KUNING] / [OREN1] / [OREN2] / [MERAHOREN]**
  - Elakkan menetapkan ton warna yang bersamaan dengan latar belakang skrin LCD kerana ini boleh menyebabkan penurunan penglihatan dan juga berbahaya semasa memandu.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

#### Membuat warna sendiri

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN PAPARAN], kemudian sentuh ► II.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [PILIH WARNA], kemudian sentuh ► II.
- 4 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [R/G/B TERSUAJ] untuk membuat warna anda sendiri.
  - Warna yang telah anda buat akan disimpan dalam [R/G/B TERSUAJ]
  - Elakkan menetapkan ton warna yang bersamaan dengan latar belakang skrin LCD kerana 5 5 Sentuh untuk memasukkan pelaras warna terperinci.
- 5 Sentuh ► II untuk memasukkan pelaras warna terperinci.
- 6 Sentuh **◀◀ / ▶▶** untuk memilih warna (R/G/B) untuk dilaraskan.
- 7 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk melaraskan tahap (0 hingga 9), kemudian sentuh ► II untuk mengesahkan.
- 8 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

#### Memilih maklumat paparan


- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN PAPARAN], kemudian sentuh ► II.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [MOD PAPARAN], kemudian sentuh ► II.
- 4 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih maklumat paparan pilihan anda untuk sumber main balik, kemudian sentuh ► II untuk mengesahkan.
  - **SUMBER USB atau SUMBER MEDIA CD:**  
[TAJUK ALBUM] (asal) / [NAMA FAIL FOLDER] / [WAKTU MAIN] / [TAJUK ARTIS]
  - **SUMBER IPOD atau SUMBER AUDIO BT:**  
[TAJUK ALBUM] (asal) / [MASA MAIN] / [TAJUK ARTIS]
  - **SUMBER CDDA:**  
[TAJUK TRK CAKER] (asal) / [MASA MAIN] / [TAJUK TRK ARTIS]
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.


# RADIO

## Audio Premium CD 2Din (Model dengan ciri Bluetooth)

Model pandu sebelah kiri:

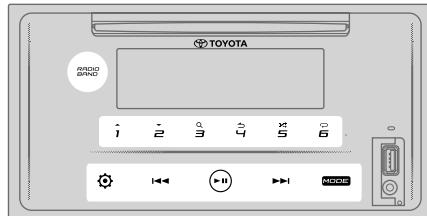


Model pandu sebelah kanan:

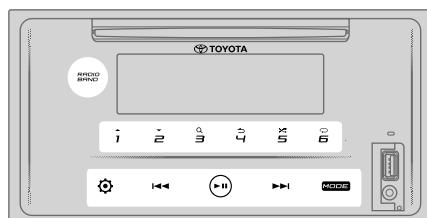


## Audio Asas CD 2Din (Model tanpa ciri Bluetooth)

Model pandu sebelah kiri:

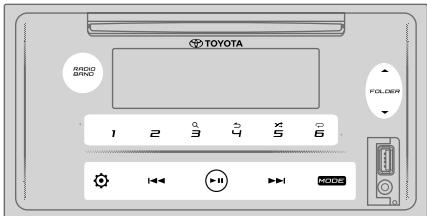

Model pandu sebelah kanan:

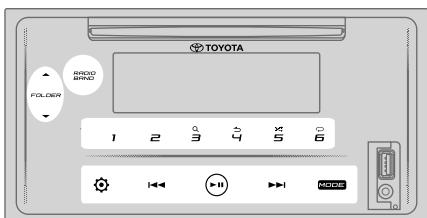

### Mencari stesen

- Sentuh **MOD** berulang kali untuk memilih **RADIO** (atau tekan **MOD** berulang kali dengan alat kawalan jauh).
  - Jika sumber selain daripada **RADIO**, menyentuh **JALUR RADIO** akan memasuki **RADIO** secara langsung.
- Sentuh **JALUR RADIO** berulang kali (atau tekan **FM / AM** pada alat kawalan jauh) untuk memilih FM1 / FM2 / AM.
- Sentuh **|<< / >>|** untuk mencari stesen secara manual. (atau)  
Sentuh dan tahan **|<< / >>|** (atau tekan dan tahan **|<< / >>|** alat kawalan jauh) untuk mencari stesen secara automatik.
- Untuk menyimpan stesen:**  
Sentuh dan tahan salah satu butang nombor (**1 hingga 6**).
  - Untuk memilih stesen yang disimpan:**  
Sentuh salah satu daripada butang nombor (**1 hingga 6**) (atau tekan salah satu daripada butang nombor (**1-6**) pada alat kawalan jauh / tekan **|<< / >>|** pada alat kawalan jauh).

### Penalaan Akses Langsung (menggunakan alat kawalan jauh)

- Tekan **LANGSUNG** untuk masuk Penalaan Akses Langsung.
- Tekan butang nombor untuk memasukkan frekuensi.
- Tekan **ENT >||** untuk mencari stesen.
  - Untuk membatalkan, tekan **◀** atau **LANGSUNG**.
  - Jika tiada operasi dilakukan selama 10 saat selepas langkah **2**, Penalaan Akses Langsung dibatalkan secara automatik.

### Tetapan lain


- Sentuh **⚙** untuk masuk **[FUNGSI]**.
- Sentuh **1 ▲ / 2 ▼** atau **FOLDER ▲ / FOLDER ▼** untuk memilih **[TETAPAN RADIO]**, kemudian sentuh **>||**.
- Sentuh **1 ▲ / 2 ▼** atau **FOLDER ▲ / FOLDER ▼** untuk memilih **[PRATETAP AUTO]**, kemudian sentuh **>||**.
- Sentuh **1 ▲ / 2 ▼** atau **FOLDER ▲ / FOLDER ▼** untuk memilih **[YA]** atau **[TIDAK]**.
  - [YA]:** Secara automatik mula menyimpan 6 stesen dengan penerimaan baik ke dalam butang nombor (**1 hingga 6**).
  - [TIDAK] (asal):** Membatalkan.
- Sentuh **>||** untuk mengesahkan.
- Sentuh **1 ▲ / 2 ▼** atau **FOLDER ▲ / FOLDER ▼** untuk memilih **[SET MONO]**, kemudian sentuh **>||**.
- Sentuh **1 ▲ / 2 ▼** atau **FOLDER ▲ / FOLDER ▼** untuk memilih **[ON]** atau **[OFF]**.
  - [ON]:** Meningkatkan penerimaan FM, tetapi kesan stereo mungkin hilang.
  - [OFF] (asal):** Membatalkan.
- Sentuh **>||** untuk mengesahkan.
- Sentuh **⚙** untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ⌂**.


## CD

### Audio Premium CD 2Din (Model dengan ciri Bluetooth)

Model pandu sebelah kiri:

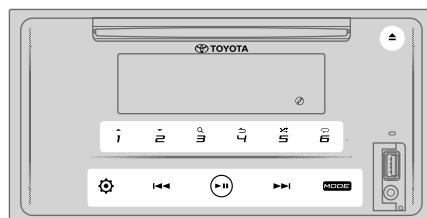


Model pandu sebelah kanan:

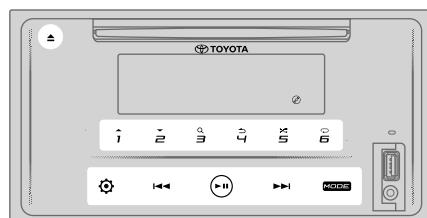


### Audio Asas CD 2Din (Model tanpa ciri Bluetooth)


Model pandu sebelah kiri:

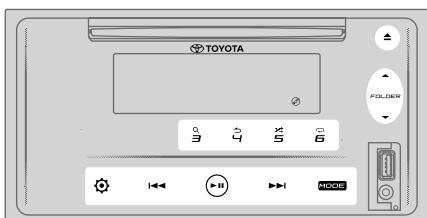

Model pandu sebelah kanan:

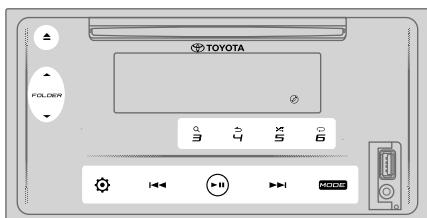

### Memasukkan cakera

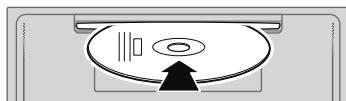 

#### Masukkan cakera ke dalam slot pemuat cakera.

- Sumber berubah kepada "CD" dan main semula bermula secara automatik.
- Penunjuk "" menyala pada tetingkap paparan apabila cakera dimasukkan.
- Nombor trek dan masa main muncul di tetingkap paparan selama beberapa saat apabila cakera dimasukkan. Kemudian, maklumat cakera lain muncul. Lihat **[PAPARAN MOD]** pada halaman 17 untuk maklumat lanjut.
- Jika cakera telah dimasukkan, sentuh **MOD** berulang kali (atau tekan **MOD** berulang kali pada alat kawalan jauh) untuk memilih "CD" sebagai sumber main balik.

#### PERHATIAN

- Jangan masukkan apa-apa selain cakera ke dalam slot pemuat cakera.

#### Catatan

- Apabila unit dimatikan, cakera tidak boleh dikeluarkan dari unit.
- Masukkan hanya satu cakera ke dalam slot pemuat cakera pada satu masa.
- Jangan gunakan cakera dengan label atau pelekat.

### Mengeluarkan cakera

Sentuh **▲** untuk mengeluarkan cakera.  
Keluarkan cakera dari slot pemuat cakera.

### Jeda main balik

Sentuh **► II** (atau tekan **ENT ► II** pada alat kawalan jauh) untuk menjedakan main balik.  
Masa main akan dipaparkan dan berklik semasa jeda.

### Trek atau fail atas/bawah

Sentuh **►►I** (atau tekan **►►I** pada alat kawalan jauh) untuk pergi ke trek seterusnya (atau fail).  
Sentuh **I◀◀** (atau tekan **I◀◀** pada alat kawalan jauh) untuk pergi ke trek atau fail sebelumnya.

### Folder atas/bawah

Sentuh **1 ▲** atau **FOLDER ▲** untuk pergi ke folder seterusnya.  
Sentuh **1 ▼** atau **FOLDER ▼** untuk pergi ke folder sebelumnya.

#### Catatan

- Fungsi ini hanya tersedia apabila cakera mengandungi lebih daripada satu folder.
- Fungsi ini tidak tersedia untuk CD Audio.

## CD

### Memilih trek atau fail dari senarai

- 1 Sentuh **3** untuk memaparkan senarai pada tetingkap paparan.
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih trek atau fail yang dikehendaki.
- 3 Sentuh **▶ II** untuk memainkan lagu yang dipilih.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

### Memilih trek atau fail dari senarai

- 1 Sentuh **3** untuk memaparkan senarai pada tetingkap paparan.
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih trek atau fail yang dikehendaki, kemudian tekan **▶ II** untuk mengesahkan.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih fail anda.
- 4 Sentuh **▶ II** untuk memainkan lagu yang dipilih.

- (atau menggunakan alat kawalan jauh)
- 1 Sentuh **▲ /▼** untuk memaparkan senarai pada tetingkap paparan.
  - 2 Sentuh **▲ /▼** untuk pergi ke folder sebelum atau seterusnya.

Untuk kembali ke menu atas, sentuh **5**.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.

Untuk membatalkan, sentuh dan tahan **4 ↴**.

#### Catatan

Fungsi ini hanya tersedia apabila cakera mengandungi lebih daripada satu folder.

### Carian Muzik Langsung (menggunakan alat kawalan jauh)

- 1 Tekan **LANGSUNG**.
- 2 Tekan butang nombor untuk memasukkan nombor trek / fail.
- 3 Tekan **ENT ▶ II** untuk mencari muzik.

Untuk membatalkan, tekan **◀** atau **LANGSUNG**.

#### Catatan

• Tidak tersedia jika Main Rawak dipilih.

### Maju laju/Undur laju

Sentuh dan tahan **▶▶I** (atau tekan dan tahan **▶▶I** pada alat kawalan jauh) untuk maju laju.

Sentuh dan tahan **I◀◀** (atau tekan dan tahan **I◀◀** pada alat kawalan jauh) untuk undur laju.

### Main ulang

Sentuh **6** berulang kali untuk memilih mod main ulang.

CD Audio:

ULANG TREK: Mengulang trek semasa.

ULANG SEMUA: Mengulang semua trek dalam cakera semasa.

Fail MP3 / WMA / AAC:

ULANG LAGU: Mengulang fail semasa.

ULANG FOLDER: Mengulang semua fail dalam folder semasa

ULANG SEMUA: Mengulang semua fail dalam cakera semasa.

### Main rawak

Sentuh **5>◀** berulang kali untuk memilih mod main balik rawak.

CD audio:

CAKERA RAWAK: Memainkan semua trek dalam susunan rawak. BATAL RAWAK: Membatalkan mod main balik rawak.

Fail MP3/WMA/AAC:

FOLDER RAWAK: Memainkan semua fail dalam folder secara rawak. RAWAK SEMUA: Memainkan semua fail secara rawak. BATAL RAWAK: Membatalkan mod main balik rawak.

### Menetapkan jenis cakera


Semasara mendengar memainkan lagu...

- 1 Sentuh **⚙** untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [TETAPAN SISTEM], kemudian sentuh **▶ II** untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih [BACA TETAPAN CD], kemudian sentuh **\*\*** untuk memilih.
- 4 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih item di bawah, kemudian sentuh **▶ II** untuk mengesahkan.  
MOD 1 (asal): Secara automatik membezakan antara cakera fail audio dan CD muzik.; MOD 2: Tetap memainkan sebagai CD muzik. Tiada bunyi boleh didengar jika cakera fail audio dimainkan.
- 5 Sentuh **⚙** untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↴**.


## USB

### Audio Premium CD 2Din (Model dengan ciri Bluetooth)

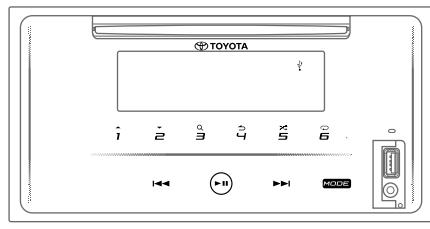


### Audio Asas CD 2Din (Model tanpa ciri Bluetooth)

Model pandu sebelah kiri:

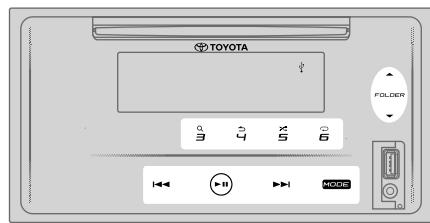

Model pandu sebelah kanan:

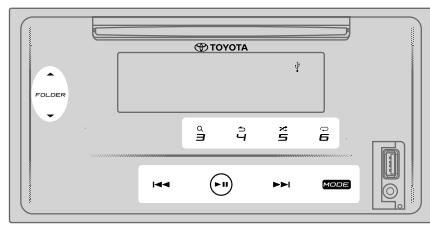


#### PERHATIAN

- Produk ini mungkin tidak sesuai dengan semua peranti storan massa USB. Kami tidak bertanggungjawab atas sebarang kehilangan data pada pemain media, telefon pintar atau peranti lain semasa menggunakan produk ini.
- Pasang peranti USB di tempat yang selamat yang tidak akan menjasikan pemanduan.
- Jangan letakkan peranti USB dan kabel penyambung di dalam kereta untuk mengelakkan kerosakan akibat haba.

### Menyambungkan peranti USB

Terminal input USB

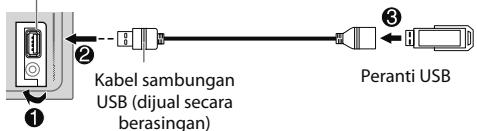

Sambungkan peranti USB ke terminal input USB menggunakan kabel sambungan USB.

- Sumber berubah kepada "USB" dan main semula dimulakan secara automatik.
- Penunjuk "USB" menyala pada tetingkap paparan apabila USB peranti disambungkan.
- Nombor fail dan masa main dipaparkan pada paparan tetingkap selama beberapa saat apabila peranti USB disambungkan. Kemudian, maklumat lain muncul. Lihat **[MOD PAPARAN]** pada halaman 18 untuk maklumat lanjut.
- Jika peranti USB telah disambungkan, sentuh **MOD** berulang kali (atau tekan **MOD** berulang kali pada alat kawalan jauh) untuk memilih "USB" sebagai sumber main balik.

### Jeda main balik

Sentuh **ENT** (atau tekan **ENT** pada alat kawalan jauh) untuk menjedakan main balik.

Masa main akan dipaparkan dan berkelipl semasa jeda.

### Fail atas/bawah

Sentuh **▶▶** (atau tekan **▶▶** pada kawalan jauh) untuk pergi ke fail seterusnya.

Sentuh **◀◀** (atau tekan **◀◀** pada kawalan jauh) untuk pergi ke fail sebelumnya.

### Folder atas/bawah

Sentuh entuh **1 ▲** atau **FOLDER ▲** untuk pergi ke folder seterusnya.

Sentuh **2 ▼** atau **FOLDER ▼** untuk pergi ke folder sebelumnya.

#### Catatan

- Fungsi ini hanya tersedia apabila peranti USB mengandungi lebih daripada satu folder.

## USB

### Memilih fail dari senarai

- 1 Sentuh **3 Q** untuk memaparkan senarai pada tetingkap paparan.
  - 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih fail yang dikehendaki.
  - 3 Sentuh **▶ II** untuk memainkan lagu yang dipilih.
- Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↵**.

### Memilih fail dari folder

- 1 Sentuh **3 Q** untuk memaparkan senarai pada tetingkap paparan.
  - 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih folder yang dikehendaki, kemudian tekan **▶ II** untuk mengesahkan.
  - 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih fail anda.
  - 4 Sentuh **▶ II** untuk memainkan lagu yang dipilih.
- Untuk kembali ke menu atas, sentuh **5**.
  - Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↵**.
  - Untuk membatalkan, sentuh dan tahan **4 ↵**.

(atau menggunakan alat kawalan jauh) —————

- 1 Sentuh **▲ /▼** untuk memaparkan senarai pada tetingkap paparan.
- 2 Sentuh **▲ /▼** untuk pergi ke folder sebelum atau seterusnya.

### Catatan

Fungsi ini hanya tersedia apabila USB mengandungi lebih daripada satu folder.

### Carian Muzik Langsung (menggunakan alat kawalan jauh)

- 1 Tekan **LANGSUNG**.
- 2 Tekan butang nombor untuk memasukkan nombor trek / fail.
- 3 Tekan **ENT ▶ II** untuk mencari muzik.

Untuk membatalkan, tekan **↵** atau **LANGSUNG**.

### Catatan

• Tidak tersedia jika Main Rawak dipilih.

### Maju laju/Undur laju

Sentuh dan tahan **▶▶I** (atau tekan dan tahan **▶I** pada alat kawalan jauh) untuk maju laju.

Sentuh dan tahan **I◀◀** (atau tekan dan tahan **I◀** pada alat kawalan jauh) untuk undur laju.

### Main ulang

Sentuh **6 ↻** berulang kali untuk memilih mod main ulang.

Fail MP3/WMA/AAC/WAV/FLAC:

**ULANG LAGU:** Mengulang fail semasa.

**ULANG FOLDER:** Mengulang semua fail dalam folder semasa.

**ULANG SEMUA:** Mengulang semua fail dalam peranti USB semasa.

### Main rawak

Sentuh **5 ↷** berulang kali untuk memilih mod main balik rawak.

Fail MP3/WMA/AAC/WAV/FLAC:

**FOLDER RAWAK:** Memainkan semua fail dalam folder secara rawak.

**RAWAK SEMUA:** Memainkan semua fail secara rawak.


**BATAL RAWAK:** Membatalkan mod main balik rawak.

### CATATAN

Apabila menyambungkan telefon pintar Android dengan USB dan paparan menunjukkan "PERANTI TIDAK DISOKONG", bermaksud peranti tidak serasi dengan produk ini. (→ 32)


# iPOD

## Audio Premium CD 2Din (Model dengan ciri Bluetooth)

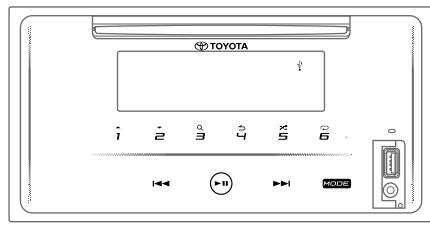


## Audio Asas CD 2Din (Model tanpa ciri Bluetooth)

Model pandu sebelah kiri:

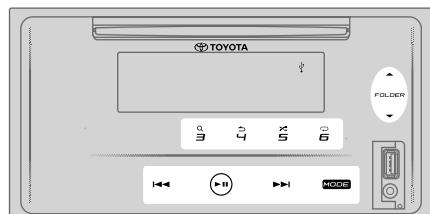


Model pandu sebelah kanan:

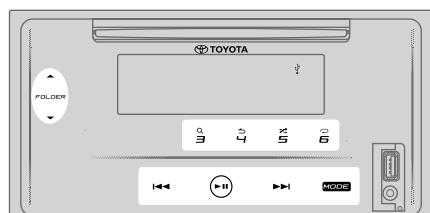

### PERHATIAN

- Produk ini mungkin tidak serasi dengan semua iPod/iPhone. Kami tidak bertanggungjawab terhadap kehilangan data pada iPod/iPhone semasa menggunakan produk ini. Sila semak data iPod/iPhone anda dengan kerap.
- Pasang iPod/iPhone di tempat yang selamat.
- Jangan biarkan iPod/iPhone terdedah kepada cahaya matahari langsung untuk jangka masa yang panjang. Pendedahan berterusan boleh mengakibatkan kerosakan iPod/iPhone disebabkan oleh suhu yang tinggi.
- Jangan tinggalkan iPod/iPhone di mana-mana lokasi bersuhu tinggi.
- Letakkan iPod/iPhone di tempat yang sesuai semasa memandu. Jangan biarkan iPod jatuh ke lantai, di mana ia boleh terserak di bawah brek atau pedal pemecut.
- Jangan letakkan iPod/iPhone dan kabel penyambung di dalam kereta untuk mengelakkan kerosakan akibat haba.

## Menyambungkan iPod/iPhone

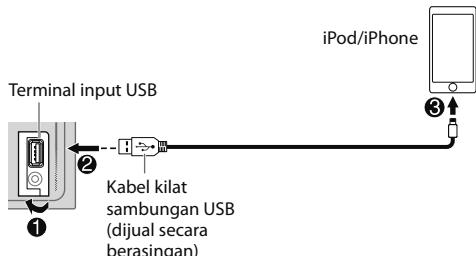

### Sambungkan iPod/iPhone ke terminal input USB menggunakan kabel kilat sambungan USB.

- Sumber berubah kepada "iPod USB" dan main semula dimulakan secara automatik.
- Penunjuk "iPod" menyala pada tetingkap paparan apabila iPod/iPhone disambungkan.
- Nombor fail dan masa main dipaparkan pada paparan tetingkap selama beberapa saat apabila iPod/iPhone disambungkan. Kemudian, maklumat lain muncul. Lihat **[MOD PAPARAN]** pada halaman 18 untuk maklumat lanjut.
- Jika iPod/iPhone telah disambungkan, sentuh **MOD** berulang kali (atau tekan **MOD** berulang kali pada alat kawalan jauh) untuk memilih "iPod/iPhone" sebagai sumber main balik.

## Jeda main balik

Sentuh **► II** (atau tekan **ENT ► II** pada alat kawalan jauh) untuk menjedakan main balik.

Masa main akan dipaparkan dan berkelipl semasa jeda.

## Pilih mod kawalan

Sentuh **4 ↪** berulang kali untuk memilih mod kawalan.

### MOD ON:

Kawal iPod/iPhone menggunakan iPod/iPhone sendiri. Walau bagaimanapun, anda masih boleh main/jeda, langku fail, maju atau undur laju dari unit ini.

### MOD OFF:

Kawal iPod/iPhone dari unit ini.

## Fail atas/bawah

Sentuh **►►I** (atau tekan **►►I** pada kawalan jauh) untuk pergi ke fail seterusnya.

Sentuh **I◄◄** (atau tekan **I◄◄** pada kawalan jauh) untuk pergi ke fail sebelumnya.

## iPOD

### Memilih fail dari senarai

- 1 Sentuh **3 Q** untuk memaparkan senarai pada tetingkap paparan.
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih senarai yang dikehendaki, kemudian tekan **► II** untuk mengesahkan.
- 3 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih fail yang dikehendaki.
- 4 Sentuh **► II** untuk memainkan lagu yang dipilih.

Untuk kembali ke tetapan item sebelumnya, sentuh **4 ↳**.

### Memilih fail menggunakan carian abjad

Jika anda mempunyai banyak fail dalam iPod/iPhone, anda boleh mencari dengan cepat mengikut aksara pertama nama fail.

- 1 Sentuh **3 Q** untuk memaparkan senarai pada tetingkap paparan.
- 2 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih senarai yang dikehendaki.
- 3 Sentuh dan tahan **3 Q** untuk memaparkan menu untuk carian aksara pada tetingkap paparan.
- 4 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih aksara yang dikehendaki. Untuk mencari aksara selain A hingga Z dan 0 hingga 9, hanya masukkan “#”.
- 5 Sentuh **I◀◀ / ►I** untuk bergerak ke kedudukan masuk.
  - Anda boleh memasukkan sehingga 3 aksara.
- 6 Sentuh **► II** untuk mula mencari.
- 7 Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ /FOLDER ▼** untuk memilih lagu yang dikehendaki.
- 8 Sentuh **► II** untuk memainkan lagu yang dipilih.
  - Untuk kembali ke menu atas, sentuh **5**.
  - Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↳**.
  - Untuk membatalkan, sentuh dan tahan **4 ↳**.

#### Catatan

- Fungsi ini hanya berlaku apabila [MOD OFF] dipilih.

### Main ulang

Sentuh **6 ↵** kali ganda untuk memilih main semula mod.

**ULANG LAGU:** Mengulang fail semasa.

**ULANG FOLDER:** Mengulang semua fail dalam folder semasa.

**BATAL ULANG:** Membatalkan mod main ulang.

### Main rawak

Sentuh **5 ↵** berulang kali untuk memilih mod main balik rawak.

**FOLDER RAWAK:** Memainkan semua fail dalam folder secara rawak.

**RAWAK SEMUA:** Memainkan semua fail secara rawak.

**BATAL RAWAK:** Membatalkan mod main balik rawak.

### Mendengar Radio Tuneln/Radio Tuneln Pro

Semasa mendengar Radio Tuneln atau Radio Tuneln Pro, sambungkan iPod/iPhone ke terminal input USB.

- Unit akan mengeluarkan bunyi dari aplikasi ini.

### Maju laju / Undur laju

Sentuh dan tahan **►I** (atau tekan dan tahan **►I** pada alat kawalan jauh) untuk maju laju.


Sentuh dan tahan **I◀◀** (atau tekan dan tahan **I◀◀** pada alat kawalan jauh) untuk menolak laju.

## AUX

### Start Listening

- 1 Sambungkan pemain audio mudah alih (tersedia secara komersial).

Bicu input tambahan

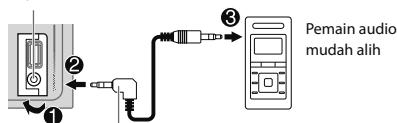

Plug mini stereo 3–3.5 mm dengan penyambung berbentuk "L" (dijual bersamaan)

- 2 Sentuh **MOD** berulang kali untuk memilih **AUX**.
- 3 Hidupkan pemain audio mudah alih dan mulakan main balik.

#### PERHATIAN

- Pasang pemain audio di tempat yang selamat dan tidak menjelaskan pemanduan.
- Jangan biarkan pemain audio dan kabel penyambung di dalam kereta untuk mengelakkan kerosakan akibat haba.

### Menetapkan nama AUX

Semasa mendengar pemain audio mudah alih yang disambungkan dengan unit ini...

1. Sentuh untuk masuk **[FUNGSI]**.
2. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih **[TETAPAN SISTEM]**, kemudian sentuh **► II**.
3. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih **[TETAPAN NAMA AUX]**, kemudian sentuh **► II**.
4. Sentuh **1 ▲ / 2 ▼ atau FOLDER ▲ / FOLDER ▼** untuk memilih item, kemudian sentuh **► II**.
5. Sentuh untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ▶**.

## BLUETOOTH®

(Hanya untuk model dengan ciri Bluetooth)

#### AMARAN

- Penggunaan tertentu iPhone atau telefon pintar mungkin salah dari segi undang-undang semasa memandu, jadi anda mesti mematuhi undang-undang tersebut.
- Jika anda ragu-ragu dengan fungsi tertentu, lakukan sahaja semasa kereta diparkir.
- Unit tidak perlu digunakan kecuali dalam keadaan selamat untuk dilakukan semasa anda memandu.

Bergantung pada sistem pengendalian dan versi perisian tegar telefon bimbit anda, sesetengah ciri Bluetooth mungkin tidak berfungsi dengan unit ini.

### BLUETOOTH – Sambungan

Peranti Bluetooth boleh disambungkan tanpa kabel dan berkomunikasi satu sama lain

#### Profil Bluetooth yang disokong

- Profil Bebas Tangan (HFP)
- Profil Pengedaran Audio Lanjutan (A2DP)
- Profil Alat Kawalan Jauh Audio/Video (AVRCP)
- Profil Port Serial (SPP)
- Profil Akses Buku Telefon (PBAP)

#### Codec Bluetooth yang disokong

- Codec Jalur Sub (SBC)
- Pengekodan Audio Maju (AAC)

### Menetapkan nama AUX

Memasang peranti Bluetooth untuk kali pertama

- 1 Sentuh untuk menghidupkan unit.
- 2 Cari dan pilih "MULTIMEDIA KERETA" pada peranti Bluetooth.  
"MENYAMBUNG (Nama peranti)" ---> "PASS XXXXXX"--->"TEKAN MAIN/JEDA" tatal pada paparan.
  - Untuk sesetengah peranti Bluetooth, anda mungkin perlu memasukkan Kod Nombor Pengenalan Peribadi (PIN) segera selepas mencari.
- 3 Sentuh **► II** untuk memulakan sambungan.  
"SAMBUNGAN OK" muncul apabila pasangan selesai.


Penunjuk menyala pada tetingkap paparan apabila terbentuk sambungan Bluetooth (lihat ilustrasi pada halaman 27).

- Unit ini menyokong Pemasangan Mudah Selamat (SSP).
- Sehingga 5 peranti boleh didaftarkan (dipasangkan) secara keseluruhan.
- Setelah penyambungan selesai, peranti Bluetooth akan tetap berdaftar dalam unit walaupun anda menetapkan semula unit. Untuk memadam peranti yang tersambung, lihat [PADAM PERANTI] di halaman 29.
- Maksimum dua telefon Bluetooth dan satu peranti audio Bluetooth boleh disambungkan pada bila-bila masa. Jika anda cuba menyambungkan telefon ketiga, maka akan muncul "MAKSIMUM 2 TELEFON TERSAMBUNG".
- Sesetengah peranti Bluetooth tidak boleh menyambung secara automatik ke unit selepas disambungkan. Sambungkan peranti ke unit secara manual.
- Jangan sekali-kali mematikan unit ini semasa peranti Bluetooth yang tersambung sedang dipadamkan.
- Rujuk kepada manual arahan peranti Bluetooth untuk maklumat lanjut.

## BLUETOOTH®


### BLUETOOTH – Bebas tangan

Model pandu sebelah kiri:

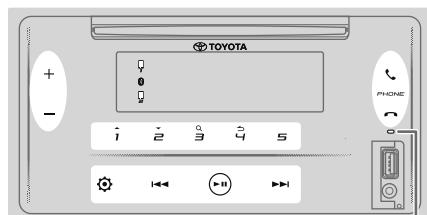

Mikrofon terbina dalam

Model pandu sebelah kanan:

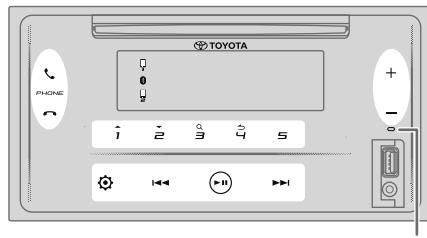

Mikrofon terbina dalam

### Menyambungkan telefon Bluetooth berdaftar

- 1 Sentuh untuk "PILIH TELEFON BT".
- 2 Sentuh salah satu daripada butang nombor (1 hingga 5) untuk memilih telefon Bluetooth berdaftar.
  - Nama telefon Bluetooth akan dipaparkan. Ikon berikut muncul di depan nama peranti untuk menunjukkan:  
"-": Peranti tersambung.  
"-": Menyambungkan peranti.  
(Kosong): Peranti terputus atau tiada operasi.
- 3 Sentuh untuk menyambungkan telefon Bluetooth berdaftar.
- 4 Sentuh untuk keluar.

Penunjuk " dan/atau " menyalas di atas tetingkap paparan apabila telefon Bluetooth berdaftar disambungkan.

**Untuk memutuskan sambungan telefon Bluetooth berdaftar:** Ulangi langkah 1 hingga 4. Pilih telefon Bluetooth yang dikehendaki untuk memutuskan sambungan dalam langkah 2.

### Membuat panggilan telefon

Anda boleh bertukar di antara dua telefon Bluetooth yang bersambung dengan menekan .

Menggunakan buku telefon

- 1 Sentuh untuk memasuki mod Bebas tangan.
- 2 Sentuh / untuk menukar ke [KENALAN], kemudian sentuh untuk memilih.
- 3 Sentuh / untuk memilih nama, kemudian sentuh untuk mengesahkan.
- 4 Sentuh / untuk memilih nombor telefon, kemudian sentuh untuk menelefon.

Jika buku telefon mengandungi banyak kenalan, anda boleh mencari kenalan menggunakan mod carian abjad.

- 1 Sentuh untuk memasuki mod Bebas tangan.
- 2 Sentuh / untuk menukar ke [KENALAN], kemudian sentuh untuk memilih.
- 3 Sentuh dan tahan untuk memasukkan mod carian abjad. Menu pertama (ABCDEFGHIJKLMN) muncul.
  - Untuk pergi ke menu lain (OPQRSTUVWXYZ1\*), sentuh / .
- 4 Sentuh / untuk memilih huruf pertama yang dikehendaki, kemudian sentuh untuk mengesahkan. Pilih untuk mencari dengan nombor dan pilih "\*" untuk mencari dengan simbol.
- 5 Sentuh / untuk memilih nama, kemudian sentuh untuk mengesahkan.
- 6 Sentuh / untuk memilih nombor telefon, kemudian sentuh untuk memanggil.

Untuk kembali ke item tetapan sebelumnya, sentuh 4\*.

#### Catatan

- Hanya berlaku untuk telefon yang menyokong PBAP.
- Bergantung kepada tetapan telefon, buku telefon dipindahkan secara automatik ke unit apabila berpasangan.
- Kenalan dikategorikan sebagai: RUMAH, PEJABAT, MUDAH ALIH, LAIN-LAIN, UMUM.
- Unit ini hanya boleh memaparkan huruf bukan aksen. (Huruf aksen seperti "Ü" ditunjukkan sebagai "U").

### Menggunakan sejarah panggilan

- 1 Sentuh untuk memasuki mod Bebas tangan.
- 2 Sentuh / untuk menukar ke [SEJARAH CALL], kemudian sentuh untuk memilih.
- 3 Sentuh / untuk memilih nama atau nombor telefon.
  - "MASUK", "KELUAR", ATAU "TAK TERJAWAB" ditunjukkan untuk menunjukkan status panggilan sebelumnya.
  - "TIADA DATA" muncul jika tiada sejarah panggilan yang dirakam. 4 Sentuh \*\* untuk menelefon.

#### Catatan

- Hanya berlaku untuk telefon yang menyokong PBAP.

## BLUETOOTH®

### Menggunakan pengecaman suara

- 1 Sentuh  untuk menggunakan mod Bebas tangan.
- 2 Sentuh **1 ▲ / 2 ▼** untuk menukar ke [KAWALAN SUARA], kemudian sentuh  untuk memilih. Anda juga boleh mengaktifkan pengecaman suara telefon yang tersambung dengan menekan dan menahan \*.
- 3 Sebut nama kenalan yang anda hendak telefon atau arahan suara untuk mengawal fungsi telefon.

#### Catatan

- Ciri Pengecaman Suara yang disokong berbeza untuk setiap telefon. Rujuk kepada manual arahan telefon yang berkenaan untuk maklumat lanjut.
- Unit ini juga menyokong fungsi pembantu peribadi pintar iPhone.

### Menjawab panggilan telefon

Apabila terdapat panggilan masuk, unit akan berdering.

### Menerima panggilan

Sentuh  (atau tekan  pada alat kawalan jauh) untuk menjawab panggilan masuk yang pertama.

Semasa bercakap dengan panggilan pertama, anda boleh menjawab panggilan yang lain dengan menyentuh  (atau menekan  pada alat kawalan jauh).

- Panggilan pertama akan ditangguhan.

### Operasi semasa panggilan telefon

#### Melaraskan kelantangan telefon

Sentuh  /  (atau tekan VOL  / VOL 

- Menyentuh dan menahan + (atau menekan dan menahan VOL  pada alat kawalan jauh) akan terus meningkatkan kelantangan kepada [25].
- Pelarasian ini tidak akan menjelaskan kelantangan sumber lain.
- Kelantangan asal adalah [15].

#### Menamatkan atau menolak panggilan

Sentuh  (atau tekan  pada alat kawalan jauh) untuk menamatkan panggilan semasa atau menolak panggilan masuk.

- Semasa bercakap pada panggilan pertama, anda boleh menolak panggilan yang lain dengan menyentuh  (atau menekan  pada alat kawalan jauh) semasa mendapat dua panggilan aktif akan menamatkan panggilan semasa dan mengaktifkan panggilan yang ditunda.

#### Bertukar di antara mod bebas tangan dan mod perbualan peribadi

Sentuh **6** semasa panggilan untuk bertukar di antara mod bebas tangan dan mod perbualan peribadi.

#### Catatan

- Operasi mungkin berbeza, bergantung kepada peranti Bluetooth yang bersambung.

### Bertukar di antara panggilan aktif

Sentuh  (atau tekan  pada alat kawalan jauh) untuk menukar di antara panggilan semasa dan panggilan yang ditunda.

#### Melaraskan sensitiviti mikrofon

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk menukar ke [MIK TAMBAH], kemudian sentuh  untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk melaraskan tahap sensitiviti mikrofon ([TAHAP --10] hingga [TAHAP +10]).  
Sensitiviti mikrofon meningkat apabila kelantangan meningkat.
- 4 Sentuh  untuk memilih tahap.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↳**.

#### Melaraskan tahap pengurangan hingar

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk menukar ke [TAHAP NR], kemudian sentuh  untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk melaraskan tahap pengurangan hingar ([TAHAP --5] ke [TAHAP +5]).  
Laraskan tahap pengurangan hingar sehingga hingar sangat berkurang semasa perbualan telefon.
- 4 Sentuh  untuk memilih tahap.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↳**.

#### Melaraskan tahap gema

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk menukar ke [BATAL GEMA], kemudian sentuh  untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk melaraskan masa tunda pembatalan gema ([TAHAP --5] ke [TAHAP +5]).  
Laraskan masa tunda pembatalan gema sehingga gema sangat berkurang semasa perbualan telefon.
- 4 Sentuh  untuk memilih tahap.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ↳**.

## BLUETOOTH®

### Tetapan lain

#### Memilih telefon Bluetooth untuk menyambung atau memutuskan sambungan

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN MOD BT], kemudian sentuh **▶ II** untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [PILIH TELEFON], kemudian sentuh **\*\*** untuk memilih.
- 4 Sentuh **1 ▲ / 2 ▼** untuk menyambungkan atau memutuskan telefon Bluetooth, kemudian sentuh **▶ II** untuk mengesahkan.  
\*\* muncul di hadapan nama peranti apabila berjaya disambungkan.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ◄**.

#### Catatan

- Anda hanya boleh menyambung maksimum dua telefon Bluetooth.

#### Memilih peranti audio Bluetooth untuk menyambung atau memutuskan sambungan

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN MOD BT], kemudian sentuh **▶ II** untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [PILIH AUDIO], kemudian sentuh **▶ II** untuk memilih.
- 4 Sentuh **1 ▲ / 2 ▼** untuk menyambungkan atau memutuskan telefon Bluetooth, kemudian sentuh **▶ II** untuk mengesahkan.  
\*\* muncul di hadapan nama peranti apabila berjaya disambungkan.
- 5 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ◄**.

#### Catatan

- Anda hanya boleh menyambungkan maksimum satu peranti audio Bluetooth.

#### Memadamkan peranti Bluetooth

- 1 Sentuh  untuk masuk [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN MOD BT], kemudian sentuh **▶ II** untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [HAPUS PERANTI], kemudian sentuh **▶ II** untuk memilih.
- 4 Sentuh **1 ▲ / 2 ▼** untuk memilih peranti untuk dihapuskan, kemudian sentuh **▶ II** untuk mengesahkan.
- 5 Sentuh **1 ▲ / 2 ▼** untuk memilih [YA], kemudian sentuh **▶ II** untuk mengesahkan. Memilih [TIDAK] akan menyebabkan peranti tidak dihapus.
- 6 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ◄**.

#### Menukar kod PIN

- 1 Sentuh  untuk masukkan [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN MOD BT], kemudian sentuh **▶ II** untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [GANTI KOD PIN], kemudian sentuh **▶ II** untuk memilih.
- 4 Sentuh **1 ▲ / 2 ▼** untuk memilih nombor.
- 5 Sentuh **1 ▲ / 2 ▼** untuk memindahkan kedudukan masuk. Ulangi langkah 4 dan 5 sehingga anda selesai memasukkan kod PIN.
- 6 Sentuh **▶ II** untuk mengesahkan.
- 7 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ◄**.

#### Catatan

- Anda boleh menukar kod PIN sehingga 6 digit.
- Pilihan asal adalah [0000].

#### Menetapkan ciri sambung semula auto

- 1 Sentuh  untuk masukkan [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN MOD BT], kemudian sentuh **▶ II** untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN SAMBUNG SEMULA], kemudian sentuh **▶ II** untuk memilih.
- 4 Sentuh **1 ▲ / 2 ▼** untuk memilih [ON] untuk membenarkan unit menyambung semula secara automatik apabila peranti Bluetooth yang terakhir disambungkan. Memilih [OFF] akan membatalkan ciri sambung semula auto.
- 5 Sentuh **▶ II** untuk mengesahkan.
- 6 Sentuh  untuk keluar.

Untuk kembali ke item tetapan sebelumnya, sentuh **4 ◄**.

#### Menetapkan ciri permulaan

- 1 Sentuh  untuk masukkan [FUNGSI].
- 2 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN MOD BT], kemudian sentuh **▶ II** untuk memilih.
- 3 Sentuh **1 ▲ / 2 ▼** untuk tukar ke [TETAPAN PERMULAAN], kemudian sentuh **▶ II** untuk memilih.
- 4 Sentuh **1 ▲ / 2 ▼** untuk memilih [YA] untuk mengembalikan semua tetapan asal Bluetooth (termasuk pasangan tersimpan, buku telefon, dll). Memilih [NO] akan membatalkan penetapan ciri permulaan.
- 5 Sentuh **▶ II** untuk mengesahkan.
- 6 Sentuh  untuk keluar.


Untuk kembali ke item tetapan sebelumnya, sentuh **4 ◄**.

## BLUETOOTH®

### BLUETOOTH -- Audio

- Semasa dalam sumber AUDIO BT, anda dapat menyambung sehingga lima peranti audio Bluetooth dan bertukar di antara lima peranti ini. Lihat "Bertukar di antara peranti audio Bluetooth" di halaman 31.
- Bergantung pada telefon atau peranti audio Bluetooth yang dipilih, main balik mungkin tidak bermula secara automatik.

Petunjuk operasi dan paparan mungkin berbeza mengikut ketersediaan mereka pada peranti yang bersambung.

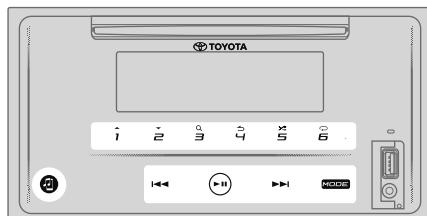

#### Pemain audio melalui Bluetooth

- Sentuh **MOD** berulang kali untuk memilih AUDIO BT (atau tekan **MOD** berulang kali pada alat kawalan jauh). Menyentuh memasukkan ke AUDIO BT secara langsung.
- Operasikan pemain audio melalui Bluetooth untuk melukiskan main balik.

#### Fail atas/bawah

- Sentuh (atau tekan pada alat kawalan jauh) untuk pergi ke fail seterusnya.  
Sentuh (atau tekan pada alat kawalan jauh) untuk pergi ke fail sebelumnya.

#### Kumpulan atau folder ke atas / bawah

- Sentuh **1▲** untuk pergi ke kumpulan atau folder seterusnya.  
Sentuh **2▼** untuk pergi ke kumpulan atau folder terdahulu.

#### Catatan

- Fungsi yang tersedia bergantung kepada pemain audio Bluetooth yang bersambung dan hanya apabila pemain audio Bluetooth mengandungi lebih daripada satu kumpulan atau satu folder.

#### Memilih fail dari senarai

- Sentuh **3Q** untuk memaparkan senarai pada tetingkap paparan.
- Sentuh **1▲ / 2▼** untuk memilih fail yang dikehendaki.
- Sentuh untuk memainkan lagu yang dipilih.

Untuk kembali ke item tetapan sebelumnya, sentuh .

#### Memilih fail dari kumpulan atau folder

- Sentuh **3Q** untuk memaparkan senarai pada tetingkap paparan.
- Sentuh **1▲ / 2▼** untuk memilih kumpulan atau folder yang dikehendaki, kemudian sentuh untuk mengesahkan.
- Sentuh **1▲ / 2▼** untuk memilih fail yang dikehendaki.
- Sentuh untuk memainkan lagu yang dipilih.

- Untuk kembali ke item tetapan sebelumnya, sentuh .
- Untuk membatalkan, sentuh dan tahan .

(jika menggunakan alat kawalan jauh)

- Tekan **▲ / ▼** untuk memaparkan senarai pada tetingkap paparan.
- Tekan **▲ / ▼** untuk pergi ke folder seterusnya atau sebelumnya.

#### Catatan

- Fungsi yang tersedia bergantung kepada pemain audio Bluetooth yang bersambung dan hanya apabila pemain audio Bluetooth mengandungi lebih daripada satu kumpulan atau satu folder.

#### Jeda main balik

Sentuh (atau tekan **ENT** pada alat kawalan jauh) untuk menghentikan main balik. Masa main akan dipaparkan dan berkelip semasa jeda.

#### Maju laju / Undur laju

Sentuh dan tahan (atau tekan dan tahan pada alat kawalan jauh) untuk maju laju.

Sentuh dan tahan (atau tekan dan tahan pada alat kawalan jauh) untuk undur laju.

#### Main ulang

Sentuh berulang kali untuk memilih mod main ulang

**ULANG LAGU:** Mengulangi fail semasa.

**ULANG SEMUA:** Mengulangi semua fail dalam pamacu semasa.

**BATAL ULANG:** Membatalkan mod main ulang.

#### Main Rawak

Sentuh berulang kali untuk memilih mod main balik rawak.

**FOLDER RAWAK:** Memainkan semua fail dalam folder secara rawak.

**KUMPULAN RAWAK:** Memainkan semua fail dalam kumpulan yang dipilih secara rawak.

**RAWAK SEMUA:** Memainkan semua fail secara rawak.

**BATAL RAWAK:** Membatalkan mod main balik rawak.

## **BLUETOOTH®**

### **Bertukar di antara peranti audio Bluetooth**

Semasa dalam sumber AUDIO BT...

- 1 Sentuh  untuk masuk "PILIH AUDIO".
- 2 Sentuh salah satu daripada butang nombor (1 hingga 5) untuk memilih Peranti audio Bluetooth.  
Nama peranti audio Bluetooth akan dipaparkan.
  - Ikon berikut muncul di hadapan nama peranti untuk menunjukkan:
    - "%": Peranti disambungkan dan dimainkan (aktif).
    - (Kosong): Peranti tidak bersambung atau peranti bersambung tetapi tiada operasi.
 Sekiranya tiada peranti berdaftar, "TIADA PERANTI" muncul.
- 3 Sentuh  untuk keluar.

## **RUJUKAN**

### **Media dan fail yang boleh dimainkan**

Anda boleh memainkan pelbagai jenis media dan fail pada unit ini.

<b>Jenis media/standard</b>		<b>Serasi</b>	<b>Catatan</b>
CD	CD Muzik *	<input type="radio"/>	
	CD--ROM	<input type="radio"/>	<ul style="list-style-type: none"> <li>• MP3 (.mp3), WMA (.wma), AAC (.aac)</li> </ul>
	CD--R	<input type="radio"/>	<ul style="list-style-type: none"> <li>• Pelbagai sesi disokong</li> </ul>
	CD--RW	<input type="radio"/>	<ul style="list-style-type: none"> <li>• Tulis paket tidak disokong</li> </ul>
	DTS CD	X	
	Video CD (VCD)	X	
	CD video super	X	
	CD foto	X	
	CD--EKSTRA	△	Hanya sesi CD muzik boleh dimainkan.
	HDCD	△	Kualiti bunyi CD muzik biasa.
Cakera lain	CCCD	X	
	Cakera Duaan	X	
Peranti kelas storan massa USB	CD audio super	△	Hanya lapisan CD boleh dimainkan.
	Peranti kelas storan massa USB	<input type="radio"/>	MP3 (.mp3), WMA (.wma), AAC (.aac), AAC (.m4a), WAV (.wav), FLAC (.flac)

\* Tidak serasi dengan cakera 8 cm (3 inci).

- Format fail cakera yang boleh dimainkan: ISO 9660 Tahap 1/2, Joliet, nama fail Panjang
- Sistem fail peranti USB yang boleh dimainkan: FAT12, FAT16, FAT32

Walaupun fail audio mematuhi piawaian yang disenaraikan di atas, main balik mungkin mustahil pada beberapa jenis atau keadaan media atau peranti.

Fail AAC (.m4a) dalam CD yang dikodkan oleh iTunes tidak dapat dimainkan di unit ini.

## PENYELESAIAN MASALAH

Sekiranya anda mempunyai masalah menggunakan produk ini, sila rujuk bahagian ini. Masalah yang paling biasa disenaraikan di bawah, bersama dengan sebab dan penyelesaian yang mungkin. Sekiranya penyelesaian kepada masalah anda tidak terdapat di sini, sila hubungi pengedar atau Pusat Perkhidmatan Toyota yang sah berdekatan.

Apabila masalah terjadi pada produk ini, mesej ralat akan muncul di paparan. Rujuk jadual di bawah untuk mengenal pasti masalah itu, kemudian ambil tindakan yang bersesuaian.

Terdapat beberapa keadaan apabila anda mungkin melihat mesej ralat selain daripada yang terdapat di sini. Dalam keadaan sedemikian, sila ikuti arahan yang diberikan pada paparan. Jika kesilapan berterusan, catat mesej ralat dan sila hubungi pengedar atau Pusat Perkhidmatan Toyota yang sah berdekatan.

Sekiranya berlaku masalah

Sekiranya produk ini gagal berfungsi dengan baik, sila hubungi pengedar atau Pusat Perkhidmatan Toyota yang sah berdekatan.

Masalah	Penyelesaian
Umum	Bunyi tidak kedengaran. <ul style="list-style-type: none"><li>• Laraskan kelantangan ke tahap optimum.</li><li>• Periksa tali dan sambungan.</li></ul>
	"MASALAH WAYAR SEMAK WAYAR KEMUDIAN ON" muncul. <ul style="list-style-type: none"><li>• Matikan kuasa, kemudian pastikan terminal wayar pembesar suara terasing dengan betul. Hidupkan kuasa sekali lagi.</li></ul>
	"LINDUNG!" muncul. <ul style="list-style-type: none"><li>• Pergi ke pusat servis Toyota berdekatan.</li></ul>
	Unit ini tidak berfungsi sama sekali. <ul style="list-style-type: none"><li>• Tetapkan semula unit. (► 6, 8)</li></ul>
Radio	Aksara yang betul tidak dipaparkan. <ul style="list-style-type: none"><li>• Unit ini hanya boleh memaparkan huruf besar, nombor, dan bilangan simbol yang terhad.</li><li>• Bergantung pada bahasa paparan yang anda pilih (-&gt; 15), beberapa aksara mungkin tidak dipaparkan dengan betul.</li></ul>
	<ul style="list-style-type: none"><li>• Penerimaan radio adalah kurang.</li><li>• Bunyi statik semasa mendengar radio</li></ul> <ul style="list-style-type: none"><li>• Sambungkan antena dengan betul.</li></ul>
	Cakera tidak boleh dikeluarkan. <ul style="list-style-type: none"><li>• Sentuh dan tahan ▲ secara paksa untuk mengeluarkan cakera. Berhati-hatilah untuk tidak melepaskan cakera ketika itu dikeluarkan. Jika ini tidak membantu, tetapkan semula unit. (►6, 8)</li></ul>
	Bunyi dihasilkan. <ul style="list-style-type: none"><li>• Langkau ke trek lain atau tukar cakera.</li></ul>
CD/USB/iPod	"SILA KELUARKAN" muncul. <ul style="list-style-type: none"><li>• Tetapkan semula unit (► 6, 8). Jika ini tidak membantu, rujuk pusat servis Toyota terdekat anda.</li></ul>
	Pesan main balik tidak seperti yang dimaksudkan. <ul style="list-style-type: none"><li>• Pesanan main balik ditentukan oleh perintah di mana fail dirakam (cakera) atau nama fail (USB).</li></ul>
	"MEMBACA" terus berkelip. <ul style="list-style-type: none"><li>• Jangan gunakan terlalu banyak tahap atau hierarki folder.</li><li>• Muat semula cakera atau sambung semula peranti (USB/iPod/iPhone).</li></ul>
	Waktu bermain berlalu tidak betul. <ul style="list-style-type: none"><li>• Ini bergantung kepada proses rakaman lebih awal (cakera/USB).</li></ul>
	"PERANTI TIDAK SERASI" muncul. <ul style="list-style-type: none"><li>• Peranti USB yang bersambung tidak serasi dengan unit ini.</li><li>• Pastikan sistem fail dalam format yang disokong (► 4, 31) dan padan semula peranti USB. Pastikan peranti USB tidak rosak dan sambungkan peranti USB.</li></ul>
	"PERANTI TIDAK RESPON" muncul. <ul style="list-style-type: none"><li>• Unit ini tidak dapat menyokong peranti USB yang disambungkan melalui hab USB.</li></ul>
	"HAB USB TIDAK SERASI" muncul. <ul style="list-style-type: none"><li>• Port USB memakan lebih banyak kuasa daripada had reka bentuk.</li></ul>
	<ul style="list-style-type: none"><li>• Sumber tidak berubah kepada "USB" apabila anda menyambungkan peranti USB sewaktu mendengar sumber lain.</li><li>• "Ralat USB" muncul.</li></ul> <ul style="list-style-type: none"><li>• Matikan kuasa dan cabut peranti USB. Kemudian, hidupkan kuasa dan padan semula peranti USB. Jika ini tidak menyelesaikan masalah, matikan dan hidupkan kuasa (atau set semula unit) sebelum diganti dengan peranti USB yang lain.</li></ul>
	iPod/iPhone tidak menyala atau tidak berfungsi. <ul style="list-style-type: none"><li>• Semak sambungan antara unit ini dan iPod/iPhone.</li><li>• Putuskan dan set semula iPod/iPhone.</li></ul>

## PENYELESAIAN MASALAH

Masalah	Penyelesaian
"MEMUAT" muncul apabila anda masuk mod carian dengan menyentuh <b>3 Q</b> .	Unit ini masih menyediakan senarai muzik iPod/iPhone. Ia mungkin mengambil sedikit masa untuk memuatkan, cuba lagi kemudian.
"TIADA CAKERA"	Masukkan cakera yang boleh dimainkan ke dalam slot pemuatkan.
"RALAT TOC"	Pastikan cakera itu bersih dan dimasukkan dengan betul.
"TIADA FAIL"	Pastikan media (cakera/USB) mengandungi fail audio yang disokong. (► 4, 31)
"COPY PRO"	Fail yang dilindungi salinan dimainkan (cakera / USB).
"TIADA PERANTI"	Sambungkan peranti (USB), dan tukar sumber kepada USB sekali lagi
"TIADA MUSIK"	Sambungkan peranti (USB) yang mengandungi fail audio yang boleh dimainkan.
"RALAT iPod"	<ul style="list-style-type: none"> <li>• Sambung semula iPod.</li> <li>• Tetapkan semula iPod.</li> </ul>
"TIDAK SERASI"	Peranti USB yang bersambung tidak serasi dengan unit ini.
CD/USB/iPod	Tiada peranti Bluetooth yang dikesan. <ul style="list-style-type: none"> <li>• Cari dari peranti Bluetooth sekali lagi.</li> <li>• Tetapkan semula unit. (► 6, 8)</li> </ul>
	Tidak boleh disambungkan. <ul style="list-style-type: none"> <li>• Pastikan anda telah memasukkan kod PIN yang sama kepada kedua-dua unit dan peranti Bluetooth.</li> <li>• Padam maklumat sambungan dari kedua-dua unit dan peranti Bluetooth, kemudian sambungkan lagi. (► 26)</li> </ul>
	Gema atau bunyi terdengar semasa perbualan telefon. <ul style="list-style-type: none"> <li>• Semak tetapan <b>[BATALKAN GEMA]</b>. (► 28)</li> </ul>
	Kualiti bunyi telefon kurang baik. <ul style="list-style-type: none"> <li>• Kurangkan jarak di antara unit dan peranti Bluetooth.</li> <li>• Pindahkan kereta ke tempat di mana anda boleh mendapatkan penerimaan isyarat yang lebih baik.</li> </ul>
	Kaedah panggilan suara tidak berjaya. <ul style="list-style-type: none"> <li>• Gunakan kaedah panggilan suara dalam persekitaran yang lebih senyap.</li> <li>• Kurangkan jarak dari mikrofon apabila anda menyebut nama itu.</li> <li>• Pastikan suara yang sama seperti tag suara berdaftar digunakan.</li> </ul>
	Bunyi sedang diganggu atau dilangkau semasa main balik pemain audio Bluetooth. <ul style="list-style-type: none"> <li>• Kurangkan jarak antara unit dan pemain audio Bluetooth.</li> <li>• Matikan, kemudian aktifkan unit dan cuba sambung semula.</li> <li>• Peranti Bluetooth lain mungkin cuba menyambung ke unit.</li> </ul>
	Pemain audio Bluetooth yang bersambung tidak boleh dikawal. <ul style="list-style-type: none"> <li>• Semak sama ada pemain audio Bluetooth yang bersambung serasi dengan Profil Alat Kawalan Jauh Audio/Video (AVRCP). (Rujuk arahan pemain audio anda.)</li> <li>• Putuskan sambungan dan hubungkan pemain Bluetooth sekali lagi.</li> </ul>
	"TIDAK SERASI"
	Telefon yang disambung tidak menyokong ciri Pengecaman Suara atau pemindahan buku telefon.
	"DILARANG MASUK" / "NO PAIR" / "NO DEVICE"
Bluetooth	Tiada peranti berdaftar yang disambungkan/dijumpai melalui Bluetooth.
	"ERROR"
	Cuba operasi lagi sekali. Jika "RALAT" muncul semula, semak jika peranti menyokong fungsi yang telah anda cuba.
	"NO INFO" / "NO DATA"
	Peranti Bluetooth tidak boleh mendapatkan maklumat kenalan.
	"RALAT HF XX" / RALAT BT
	Tetapkan semula unit (► 6, 8) dan cuba operasi lagi sekali. Jika ini tidak berjaya, rujuk pusat servis terdekat anda.
	Sambungan Bluetooth antara peranti Bluetooth dan unit tidak stabil.
	Padamkan peranti Bluetooth berdaftar yang tidak digunakan dari unit. (► 29)

## SPESIFIKASI

<b>Radio</b>	Julat Frekuensi FM:	87.5 MHz -- 108.0 MHz (ruang 50 kHz)	<b>Bluetooth</b>	Versi:	Bluetooth 3.0
	Sensitiviti yang boleh digunakan (S/N = 30 dB):	--2.0 dBμ Respons		Frekuensi Julat:	2.402 GHz - 2.480 GHz
	Kekerapan ( $\pm 3$ dB):	100 Hz -- 10 kHz		Kuasa Output:	+4 dBm (MAKS), 0 dBm (RATA) Kelas Kuasa 2
	Nisbah Isyarat--ke--Bunyi (MONO):	58 dB		Julat Komunikasi Maksimum:	Garis tampak lebih kurang. 10 m (32.8 kaki)
	Pemisahan Stereo (1 kHz):	40 dB		Profil:	HFP (Profil Bebas Tangan) SPP (Profil Port Serial) PBAP (Profil Akses Buku Telefon) A2DP (Profil Pengedaran Audio Lanjutan) AVRCP (Profil Alat Kawalan Jauh Audio/Video)
	Julat Frekuensi AM:	531 kHz -- 1 602 kHz (ruang 9 kHz)			
	Sensitiviti yang boleh digunakan (S/N = 20 dB):	30 dBμ			
	Diod Laser:	GaAlAs			
	Penyaring Digital (D/A):	8 kali lebih daripada sampel			
	Kelajuan Spindel:	500 rpm -- 200 rpm (CLV) Di bawah had yang boleh diukur			
<b>Player CD</b>	Wow & Flutter:	31 Hz -- 20 kHz	<b>Audio</b>		
	Respons Frekuensi ( $\pm 1$ dB):	0.02%		Tindakan Nada:	Jalur1 62.5 Hz ± 9 dB Jalur2 100 Hz ± 9 dB Jalur3 160 Hz ± 9 dB Jalur4 250 Hz ± 9 dB Jalur5 400 Hz ± 9 dB Jalur6 630 Hz ± 9 dB Jalur7 1 kHz ± 9 dB Jalur8 1.6 kHz ± 9 dB Jalur9 2.5 kHz ± 9 dB Jalur10 4 kHz ± 9 dB Jalur11 6.3 kHz ± 9 dB Jalur12 10 kHz ± 9 dB Jalur13 16 kHz ± 9 dB
	Penyelewengan Harmonik Jumlah (1 kHz):	85 dB			
	Nisbah Isyarat--ke--Bunyi (1 kHz):				
	Julat Dinamik:	80 dB			
	Pemisahan Saluran:	70 dB			
	Nyahkod MP3:	Mematuhi MPEG-1/2 Audio Layer-3			
	Nyahkod WMA:	Mematuhi Windows Media Audio			
	Nyahkod AAC:	Fail AAC--LC ".aac"			
	USB Standard:	USB 1.1, USB 2.0 (Kelajuan penuh)			
<b>USB</b>	Sistem Fail:	FAT12/16/32	<b>Bantuan</b>	Respons Frekuensi ( $\pm 3$ dB):	20 Hz - 20 kHz
	Nyahkod Arus Bekalan Maksimum MP3: DC 5 V ----- 1.0			Voltan Maksimum Input:	1 000 mV
	A Nyahkod MP3:	Mematuhi MPEG-1/2 Audio Layer-3		Input Impedans:	30 kΩ
	Nyahkod WMA:	Mematuhi Windows Media Audio		Voltan Operasi:	14.4 V (10.5 V - 16 V dibenarkan)
	Nyahkod AAC:	Fail AAC--LC ".aac", ".m4a"		Penggunaan Arus Maksimum:	10 A
	Nyahkod WAV:	Linear-PCM		Dimensi (W × H × D):	205.5 mm × 104 mm × 168.5 mm
	Nyahkod FLAC:	Fail FLAC (Sehingga 48 kHz/16 bit)		Berat:	1.38 kg

Tertakluk kepada perubahan tanpa notis.

# **PERJANJIAN LESEN PERISIAN**

The software embedded in the Product (hereinafter the "Licensed Software") provided by Licensor is copyrighted to or sublicensable by the Licensor, and this Agreement provides for the terms and conditions which Users shall follow in order to use the Licensed Software.

The User shall use the Licensed Software by agreeing with the terms of this Software License Agreement. This Agreement shall be deemed completed at the time the User (hereinafter the "User") initially used the Product in which the "Licensed Software" is embedded.

The Licensed Software may include the software which has been licensed to the Licensor directly or indirectly from any third party. In such case, some third parties require the Users to follow their conditions for use separately from this Software License Agreement. Such software shall not be subject to this Agreement, and the Users are urged to read the "Important Notice concerning the Software" to be provided separately below.

## **Article 1 General Provision**

The Licensor shall grant to the User a non-exclusive and non-transferable (other than the exceptional case referred to in Article 3, Paragraph 1) licensed to use the Licensed Software within the country of the User. (the country where the User bought the Product (hereinafter the "Country"))

## **Article 2 License**

1. The license granted under this Agreement shall be the right to use the Licensed Software in the Product.
2. The User shall not duplicate, copy, modify, add, translate or otherwise alter, or lease the Licensed Software and any related documents, whether in whole or in part.
3. The use of the Licensed Software shall be limited to personal purpose, and the Licensed Software shall not be distributed, licensed or sub-licensed whether it is for commercial purpose or not.
4. The User shall use the Licensed Software according to the directions described in the operation manual or help file, and is prohibited to use or duplicate any data in a manner violating the Copyright Law or any other laws and regulations by applying whole or a part of the Licensed Software.

## **Article 3 Conditions for Grant of License**

1. When the User transfers the Product, it may also transfer the license to use the Licensed Software embedded in the Product (including any related materials, updates and upgrades) on condition that no original, copies or related materials continue in the possession of the User, and that the User shall cause the transferee to comply with this Software License Agreement.
2. The User shall not carry out reverse engineering, disassembling, decompiling or any other code analysis works in connection with the Licensed Software.

## **Article 4 Right pertaining to the Licensed Software**

Any and all copyrights and other rights pertaining to the Licensed Software and related documents shall belong to the Licensor or the original holder of the right who granted to the Licensor the license or sublicense for the Licensed Software (hereinafter the "Original Rightholder"), and the User shall not be entitled to any right other than the license granted hereunder, in respect of the Licensed Software and any related documents.

## **Article 5 Indemnification of Licensor**

1. Neither the Licensor nor the Original Rightholder shall be liable for any damage incurred by the User or any third party due to the exercise of the license granted to the User under this Agreement, unless otherwise restricted by law.
2. The Licensor will offer no guarantee for the merchantability, convertibility and consistency with certain objective of the Licensed Software.

## **Article 6 Liability to Third Party**

If any dispute has arisen with any third party due to an infringement upon a copyright, patent or any other intellectual property right that was caused by the User's use of the Licensed Software, the User shall settle such dispute at its own cost and hold the Licensor and the Original Rightholder harmless from any inconvenience it may cause.

## **Article 7 Confidentiality**

The User shall keep the confidentiality of such portion of the Licensed Software, related documents thereof or any other information to be granted under this Agreement, as well as the conditions of this Agreement as has not yet entered the public domain, and shall not disclose or divulge the same to any third party without approval of the Licensor.

## **Article 8 Termination**

In case the User falls under any of the events described in the following items, the Licensor may immediately terminate this Agreement or claim that the User compensates for the damage incurred by the Licensor due to such event:

- (1) when the User violated any provision of this Agreement; or
- (2) when a petition has been filed against the User for an attachment, provisional attachment, provisional disposition or any other compulsory execution.

## **Article 9 Destruction of the Licensed Software**

If this Agreement is terminated pursuant to the provision of Article 8, the User shall destroy the Licensed Software, any related documents and copies thereof within two (2) weeks from such date of termination.

## PERJANJIAN LESEN PERISIAN

---

### Article 10 Protection of Copyright

1. The copyright and all the other intellectual property rights relating to the Licensed Software shall belong to the Licensor and the Original Rightholder, and in no event shall they be under the ownership of the User.
2. The User shall, whenever it uses the Licensed Software, comply with any laws relating to the copyright and other intellectual property rights.

-jansson

Copyright (c) 2009-2012 Petri Lehtinen <petri@digip.org>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

-cJSON

Copyright (c) 2009 Dave Gamble

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

-CMP

The MIT License (MIT)

Copyright (c) 2014 Charles Gunyon

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

### Article 11 Export Restriction

1. It is prohibited to export the Licensed Software and any related documents outside the country of the User (including transmission thereof outside the country of the User via Internet or other communication tools).
2. The User shall understand that the Licensed Software shall be subject to the export restrictions adopted by the country of User and any other countries.
3. The User shall agree that the software will be subject to any and all applicable international and domestic laws (including the export control regulation of the country of User and any other countries, and any restrictions concerning the end-users, the use by end-users and importing countries to be provided by the country of User and any other countries, and any other governmental authorities).

-cJSON

Copyright (c) 2009 Dave Gamble

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

-CMP

The MIT License (MIT)

Copyright (c) 2014 Charles Gunyon

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

### Article 12 Miscellaneous

1. In the event any part of this Agreement is invalidated by operation of law, the residual provisions shall continue in force.
2. Matters not stipulated in this Agreement or any ambiguity or question raised in the construction of this Agreement shall be provided or settled upon good-faith consultation between the Licensor and the User.
3. The Licensor and the User hereby agree that this Agreement is governed by the laws of Japan, and any dispute arising from, and relating to the rights and obligations under, this Agreement shall be submitted to the exclusive jurisdiction of the Tokyo District Court for its first instance.

-cJSON

Copyright (c) 2009 Dave Gamble

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## NOTIS PENTING



Pengisytiharaan Pematuhan Berkenaan dengan arahan RE Directive 2014/53/EU

Pengisytiharaan Pematuhan Berkenaan dengan arahan RoHS Directive 2011/65/EU

**Pengilang:**

JVCKENWOOD Corporation  
3-12, Moriyacho, Kanagawa-ku, Yokohama-shi, Kanagawa 221-0022, JAPAN

**Wakil EU:**

JVCKENWOOD Europe B.V.  
Amsterdamseweg 37, 1422 AC UITHOORN, THE NETHERLANDS

**English**

Hereby, JVCKENWOOD declares that the radio equipment "DPXGT701R" is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.kenwood.com/cs/ce/eudoc/>

**Français**

Par la présente, JVCKENWOOD déclare que l'équipement radio « DPXGT701R » est conforme à la directive 2014/53/UE. L'intégralité de la déclaration de conformité UE est disponible à l'adresse Internet suivante :  
<http://www.kenwood.com/cs/ce/eudoc/>

**Español**

Por la presente, JVCKENWOOD declara que el equipo de radio "DPXGT701R" cumple la Directiva 2014/53/EU. El texto completo de la declaración de conformidad con la UE está disponible en la siguiente dirección de internet:  
<http://www.kenwood.com/cs/ce/eudoc/>

**Português**

Deste modo, a JVCKENWOOD declara que o equipamento de rádio "DPXGT701R" está em conformidade com a Directiva 2014/53/UE. O texto integral da declaração de conformidade da UE está disponível no seguinte endereço de internet:  
<http://www.kenwood.com/cs/ce/eudoc/>

## NOTIS PENTING

CLASS 1  
LASER PRODUCT

### Tanda produk menggunakan laser

Label dilampirkan pada casis/bekas dan mengatakan bahawa komponen tersebut menggunakan sinar laser yang telah diklasifikasikan sebagai Kelas 1. Hal ini bermakna bahawa unit tersebut menggunakan laser yang merupakan kelas yang lebih lemah. Tiada bahaya radiasi berbahaya di luar unit.

- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.
- Penggunaan lencana Made for Apple bermaksud bahawa aksesori telah direka untuk menyambung secara khusus kepada produk Apple yang dikenal pasti dalam lencana, dan telah disahkan oleh pemaju untuk memenuhi piawaian prestasi Apple. Apple tidak bertanggungjawab untuk operasi peranti ini atau pematuhaninya dengan standard keselamatan dan pengawalseliaan. Sila ambil perhatian bahawa penggunaan aksesori ini dengan produk Apple boleh menjadikan prestasi wayarles.
- Apple, iPhone, iPod, iPod classic, iPod nano, iPod touch, iTunes and Lightning adalah tanda dagangan Apple Inc., yang didaftarkan di A.S. dan negara-negara lain.
- Android ialah tanda dagangan Google LLC.
- The "AAC" logo is a trademark of Dolby Laboratories.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVCKENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- Nama-nama syarikat, produk dan entiti lain yang dinyatakan dalam produk ini didaftarkan dengan tanda dagangan atau tanda niaga syarikat masing-masing.

### libFLAC

Copyright (C) 2000-2009 Josh Coalson

Copyright (C) 2011-2013 Xiph.Org Foundation

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Nama Model Pengilang  
2Din CD Premium Audio  
DPXGT701R

**Untuk maklumat lebih lanjut**

Sila layari laman web khas di bawah untuk maklumat yang lebih lanjut  
<https://19cy.jvckenwood.com>

**KEPADA PEMUNYA**

Sila simpan buku panduan dan tuliskan nombor siri produk ini untuk tujuan pengenalpastian dan laporan yang tepat kepada pihak polis setempat sekiranya ada sebarang kecurian. Nombor siri produk ini dilabel atau dicetak pada casis. Sila sahkan nombor siri ini dengan pengedara kenderaan anda atau di pusat servis apabila produk dipasang baik atau ditukar ganti selepas dibaik pulih atau penyesuaian semula.

No. Siri



B5A-3296-23 (A9)